

# Alora Pendant

URBAN OUTFITTERS

## Assembly Instructions

### TOOLS REQUIRED BUT NOT INCLUDED:

Phillips head screwdriver, Wire cutters

### WARNINGS:

Do not throw away packing materials and carton until after assembly.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface.

**Use a MAX 40W Type A incandescent bulb.**

**A licensed professional electrician should install direct wire fixtures.**

### CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.


Do not place over heat or air conditioning vents.

Adjust levelers so that the furniture sits flat on uneven floors. Blot spills with a clean white cloth, do not rub.

Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.


You may need to re-tighten all bolts after initial use.

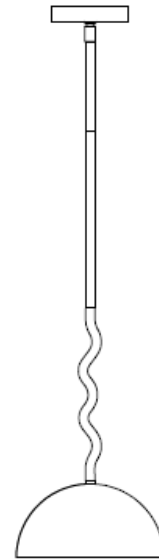


### PARTS INCLUDED:




(A) Wire Nuts x 3

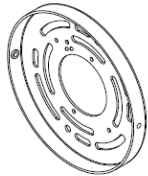

(B) Mounting Plate



(C) Mounting Screws  
[8#-32TX25mm] X2



(D) Canopy Screws  
[5/32-32T\*15mmL] X2



(E) Canopy



(F) Upper Pole



(G) Middle Pole



(H) Curved Pole



(I) Lamp Shade

# Alora Pendant

URBAN OUTFITTERS

## Assembly Instructions

---

### STEP 1

Ensure power to the existing wires is turned off at the electrical panel.

### STEP 2

Insert the existing wires through the center opening of the mounting bracket (B). Attach the mounting bracket (B) to the existing electrical box using the mounting screws (C). Tighten each screw until the mounting bracket (B) is firmly secured.

### STEP 3

Carefully inspect the fixture's wires:

- Neutral fixture wire = white
- Hot fixture wire = black
- Ground wire = green
  - a) Attach the existing ground wire to the fixture ground wire with a wire nut, and wrap the connection with electrical tape.
  - b) Attach the hot fixture wire to the existing hot wire.
  - c) Attach the neutral fixture wire from the fixture to the existing neutral wire.
  - d) Fasten each together with a wire nut and wrap the connection with electrical tape.

### STEP 4

Place the Canopy (E) onto Mounting Plate (B) and then secure with Canopy Screws (D).

### STEP 5

Screw the Upper Pole (F) clockwise onto the Canopy (E).

### STEP 6

Screw the Middle Pole (G) clockwise onto the Upper Pole (F), then screw the Curved Pole (H) clockwise onto the Middle Pole (G).

### STEP 7

Screw the Lamp Shade (I) clockwise onto the Curved Pole (H).

### STEP 8

Insert the specified light bulb into the socket.

### STEP 9

Restore power at the main electrical panel and Enjoy your new lamp.

**Use a MAX 40W Type A incandescent bulb. Do not use bulb that exceeds recommended wattage.**

