


JOANNA PRESSED METAL WALL SHELF URBAN OUTFITTERS

Assembly Instructions


PARTS REQUIRED BUT NOT INCLUDED:



Do not throw away packing materials and carton until after assembly.
Assemble all parts on a clean smooth surface


CARE INSTRUCTIONS:

Avoid direct exposure to sunlight. Do not place over heat or air conditioning vents.
Blot spills, do not rub, with a clean white cloth.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.
Use Phillips head screw 8.5mm

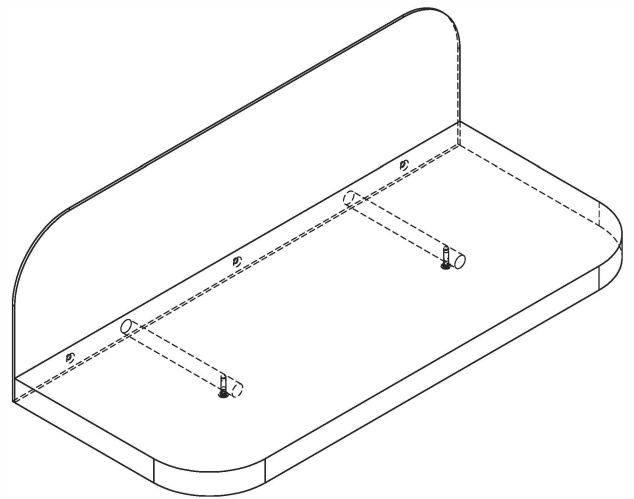


PARTS INCLUDED:

(A) Metal Wall Mount Bracket

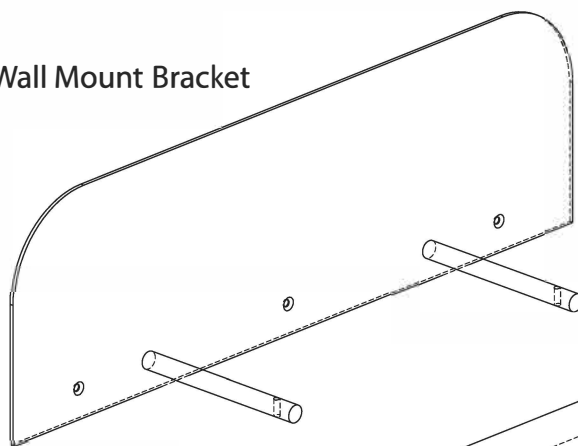


(B) Center Wooden Shelf

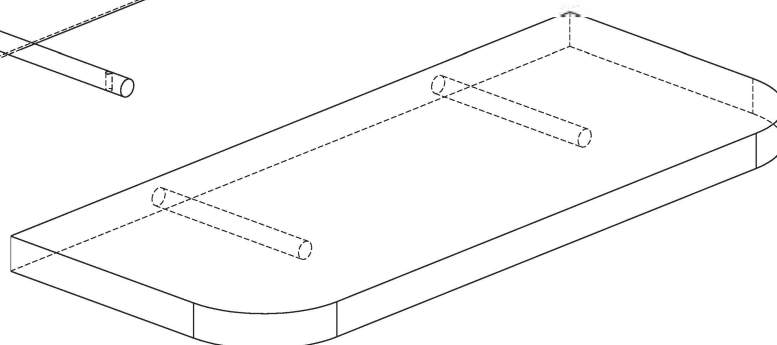

JOANNA PRESSED METAL WALL SHELF **URBAN OUTFITTERS**


Assembly Instructions

STEP 1

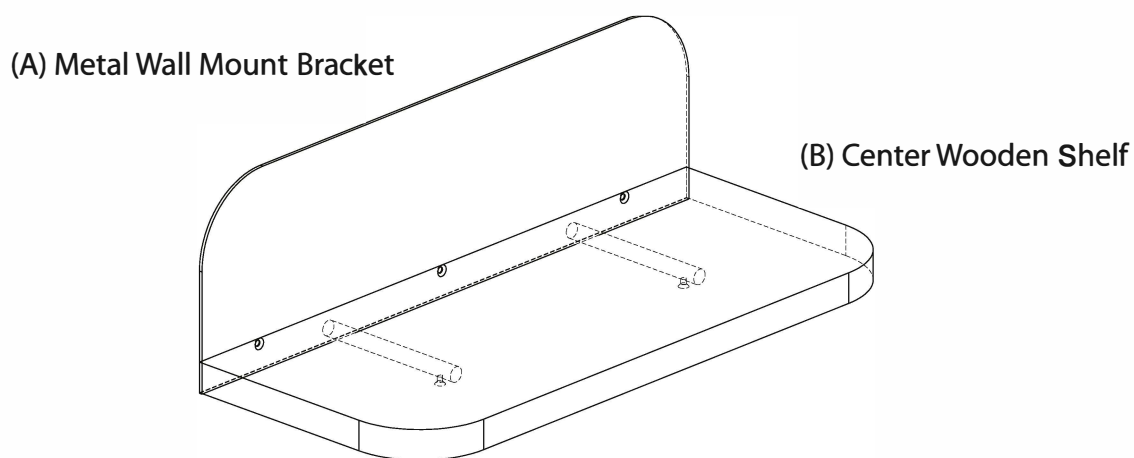

STEP 2

Unscrew the small set screws in the bottom of the shelf to remove the Center Wooden Shelf from Metal Wall Mount Bracket

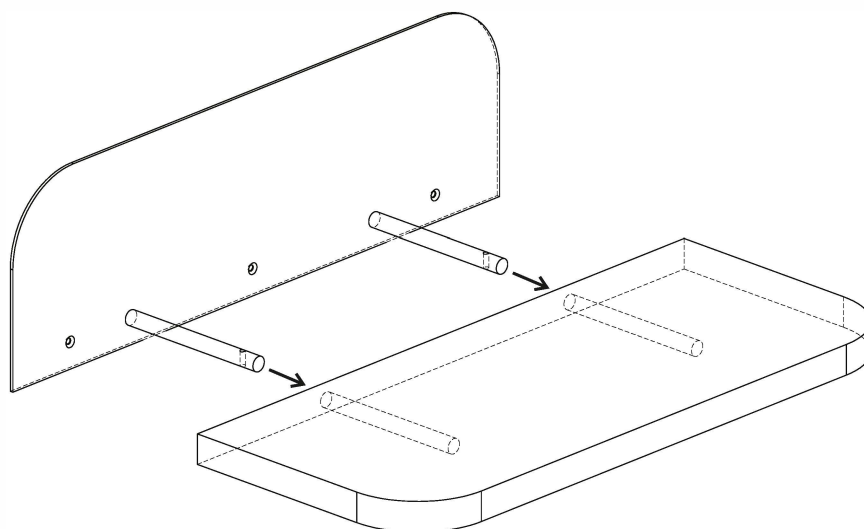


JOANNA PRESSED METAL WALL SHELF URBAN OUTFITTERS

Assembly Instructions


STEP 3

Contact your local hardware store to purchase the correct anchors for your wall-type. Mark the location of the 3 screw holes on the wall and insert anchors. Align metal wall bracket and insert screws. Tighten with screwdriver (not Included).

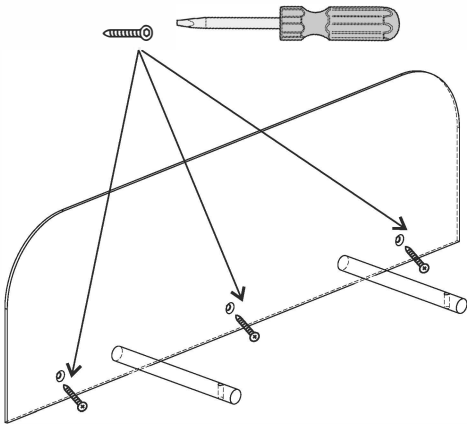

STEP 4

Align wooden shelf onto metal bars. Press firmly into place making sure all holes are aligned. Insert screws into the bottom and tighten with screwdriver.

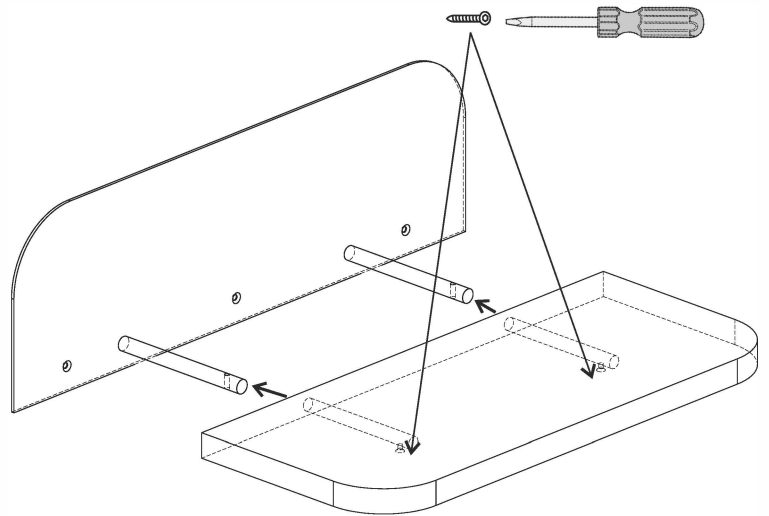

Complete Product

STEP 5

