

ARMAND VANITY

Assembly Instructions


URBAN OUTFITTERS

TOOLS REQUIRED BUT NOT INCLUDED:
Phillips Head Screw Driver


Do not throw away packing materials and carton until after assembly.
Assemble all parts on a clean smooth surface
The assembly of this item requires x 2 people.

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight. Do not place over heat or Air conditioning vents.
Adjust levelers so that the furniture sits flat on uneven floors.
Blot spills do not rub, with a clean white cloth.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.

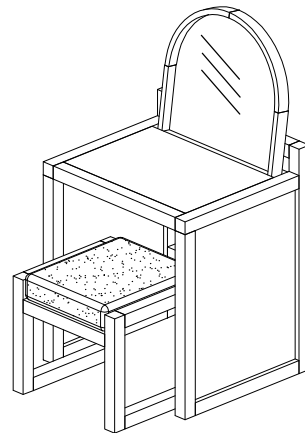


PARTS INCLUDED

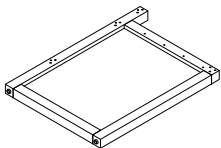


(A) Table side frame
Quantity: 2pcs




(B) Table top frame
Quantity: 1pc




(C) Table middle rail
Quantity: 1pc




(D) Table back rail
Quantity: 2pcs




(E) Chair side frame
Quantity: 2pcs



(F) Chair rail
Quantity: 4pcs



(G) Seat cushion
Quantity: 1pc



(H) Mirror
Quantity: 1pc

HARDWARE LIST



(1) Bolt
M8 x 35mm
Quantity: 6pcs



(2) Bolt
M8 x 80mm
Quantity: 12pcs



(3) Flat Washers
M8
Quantity: 6pcs



(4) Round Washer
M8
Quantity: 12pcs




(5) Hex nut
M8 x 12mm
Quantity: 12pcs



(6) Wood dowel
M8 x 40mm
Quantity: 24pcs




(7) Allen key
Quantity: 1pc




(8) Wrench
Quantity: 1pc




(9) Screw
M4 x 30mm
Quantity: 4pcs

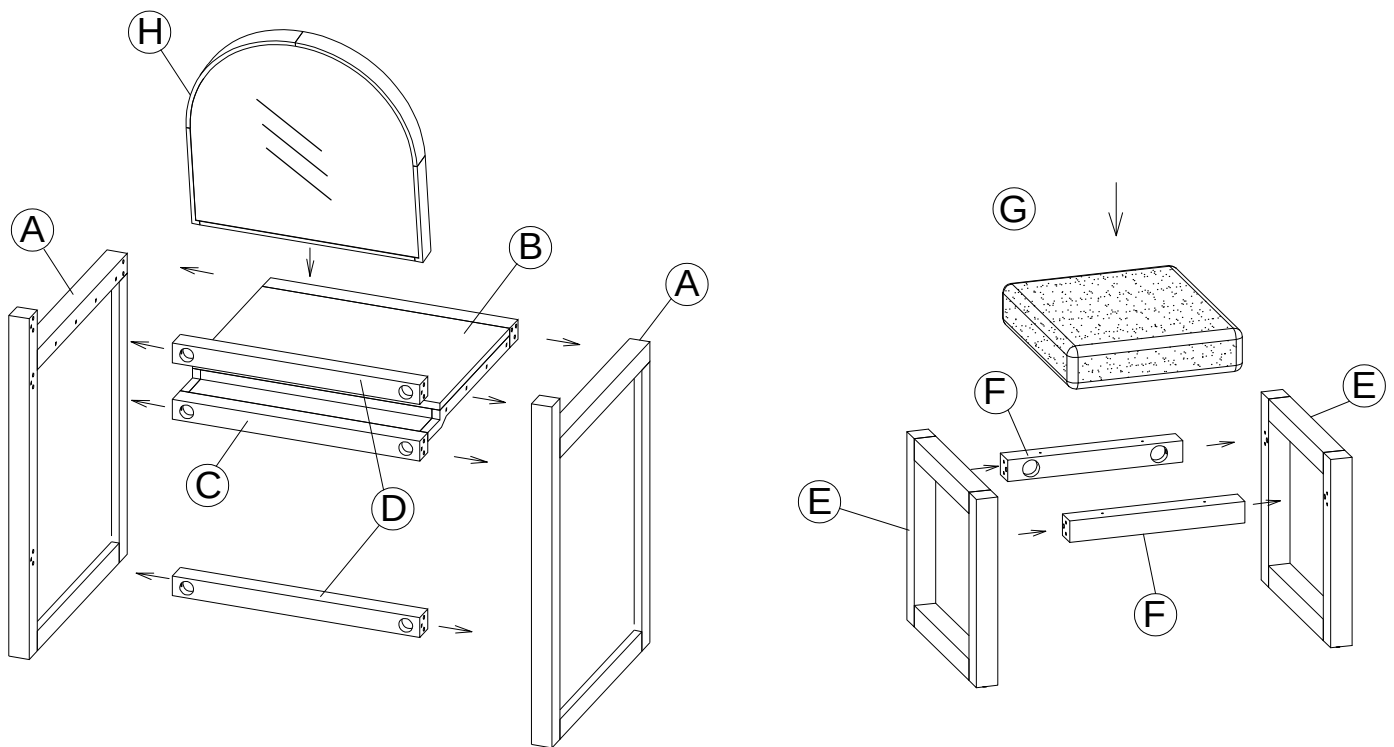


STEP 1. Align table top frame (B) with table middle rail (C). Insert bolts (1), flat washers (3) into the holes in table top frame (B). Tighten with Allen key (7).

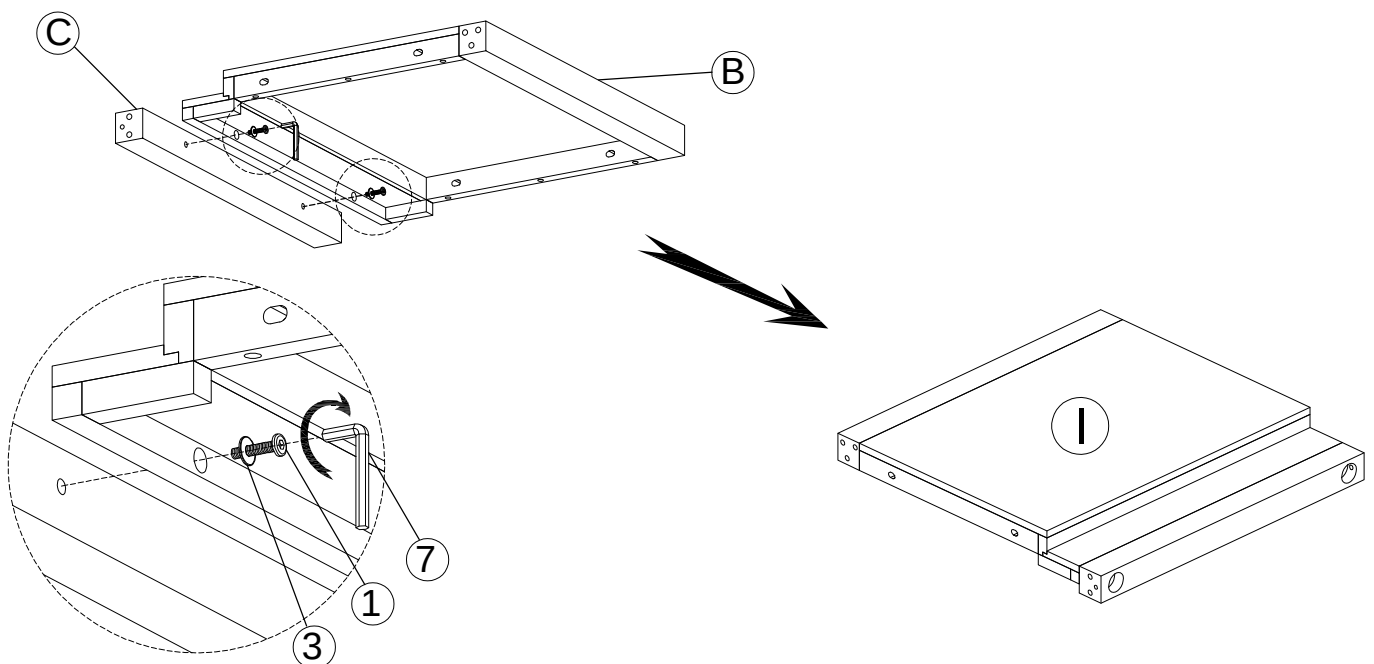

STEP 2. Align table side frames (A) with table top frame (B) assembly. Insert wood dowel (6), bolts (2) as shown.

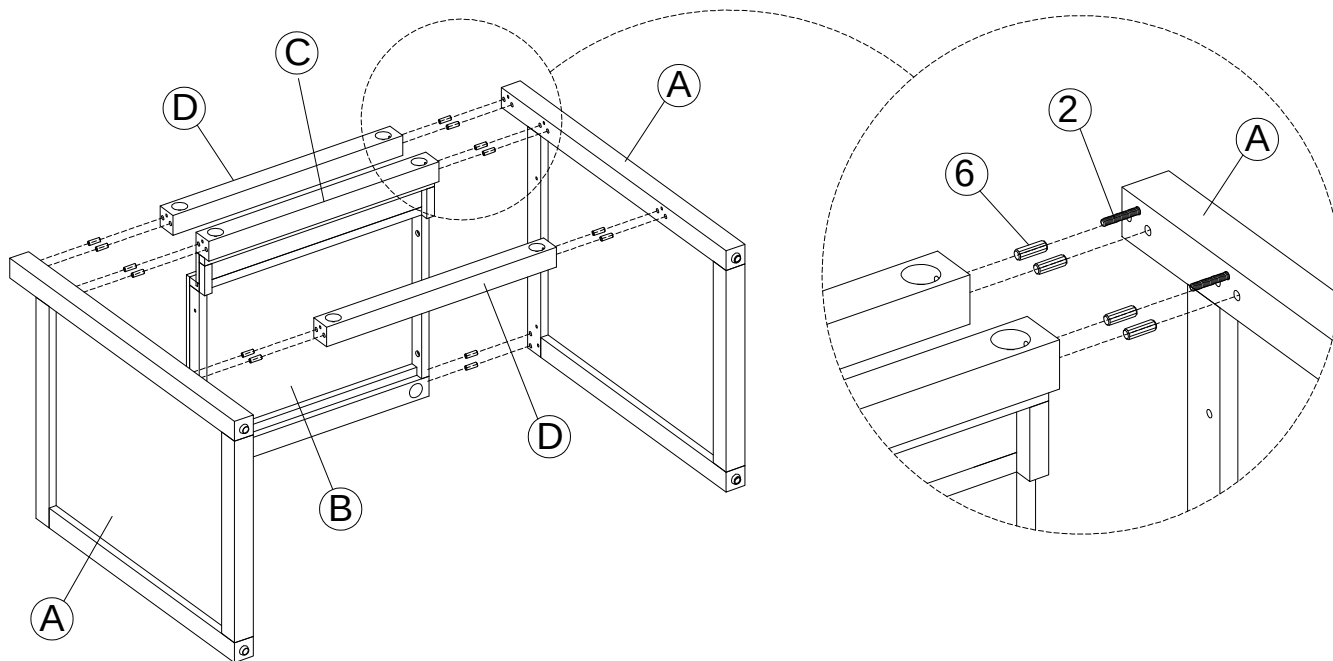

STEP 3. Insert round washer (4), hex nuts (5) into holes as shown. Tighten with the spanner (8).

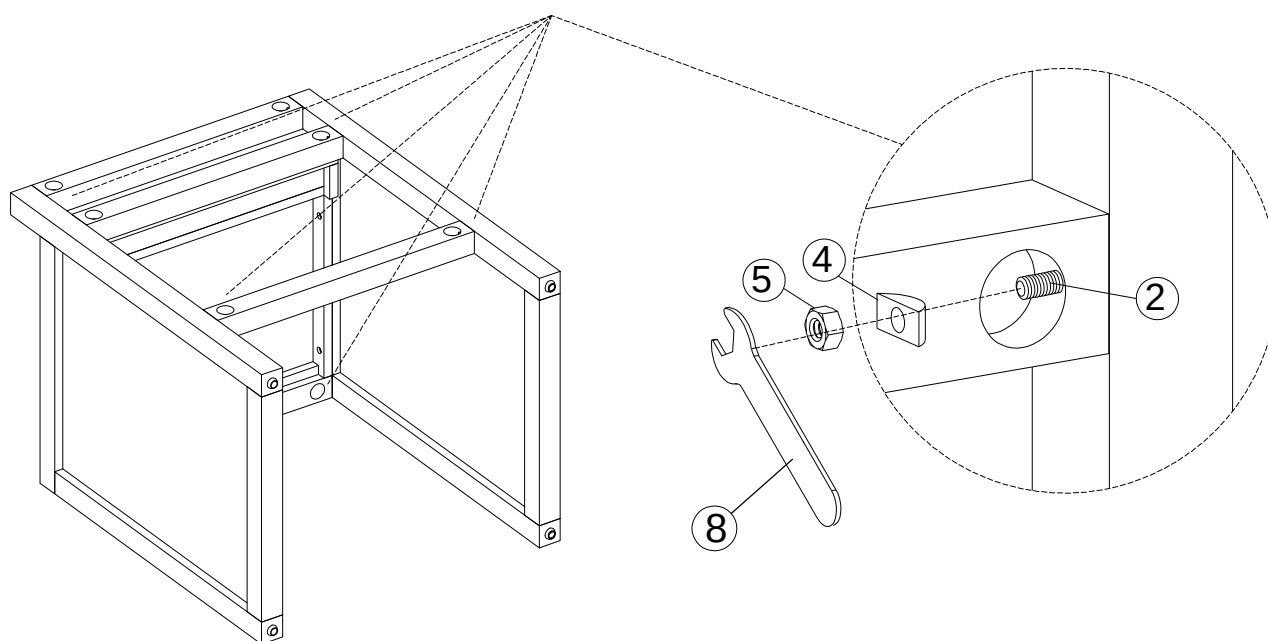


ARMAND VANITY


Assembly Instructions

URBAN OUTFITTERS


STEP 4. Insert bolts (1), flat washers (3) into the holes as shown. Tighten with Allen key (7).

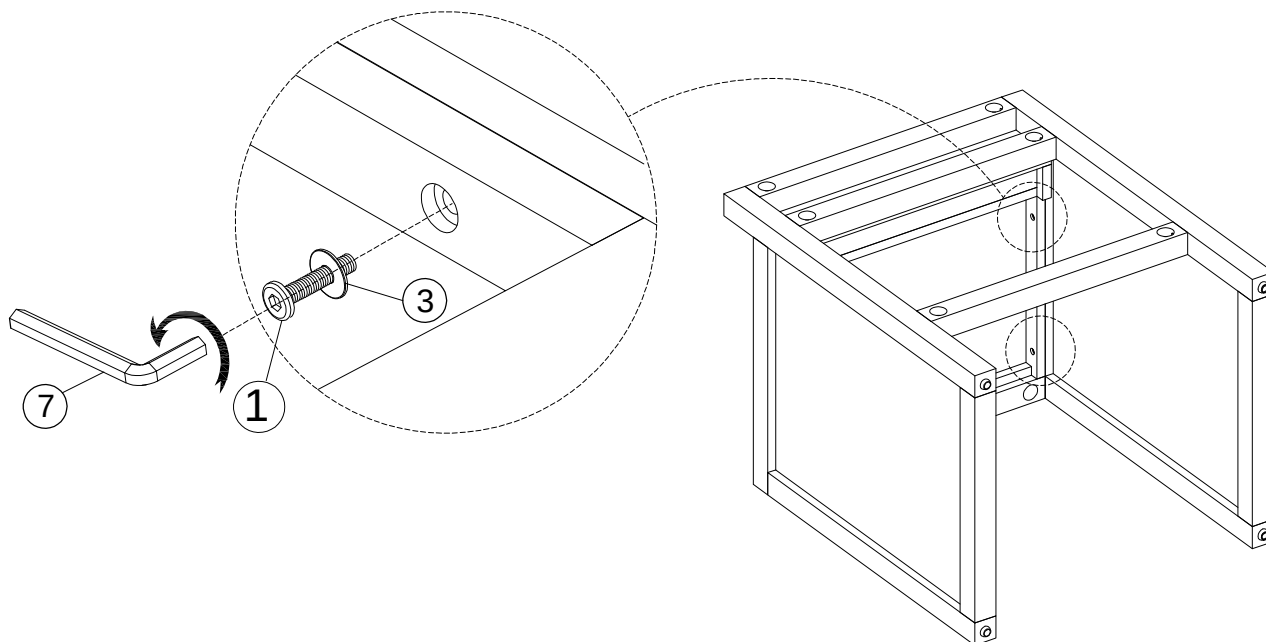


STEP 5. Turn the adjustable feet so the vanity sits flat on the ground then insert the mirror (H) between the table back rail and table top frame.

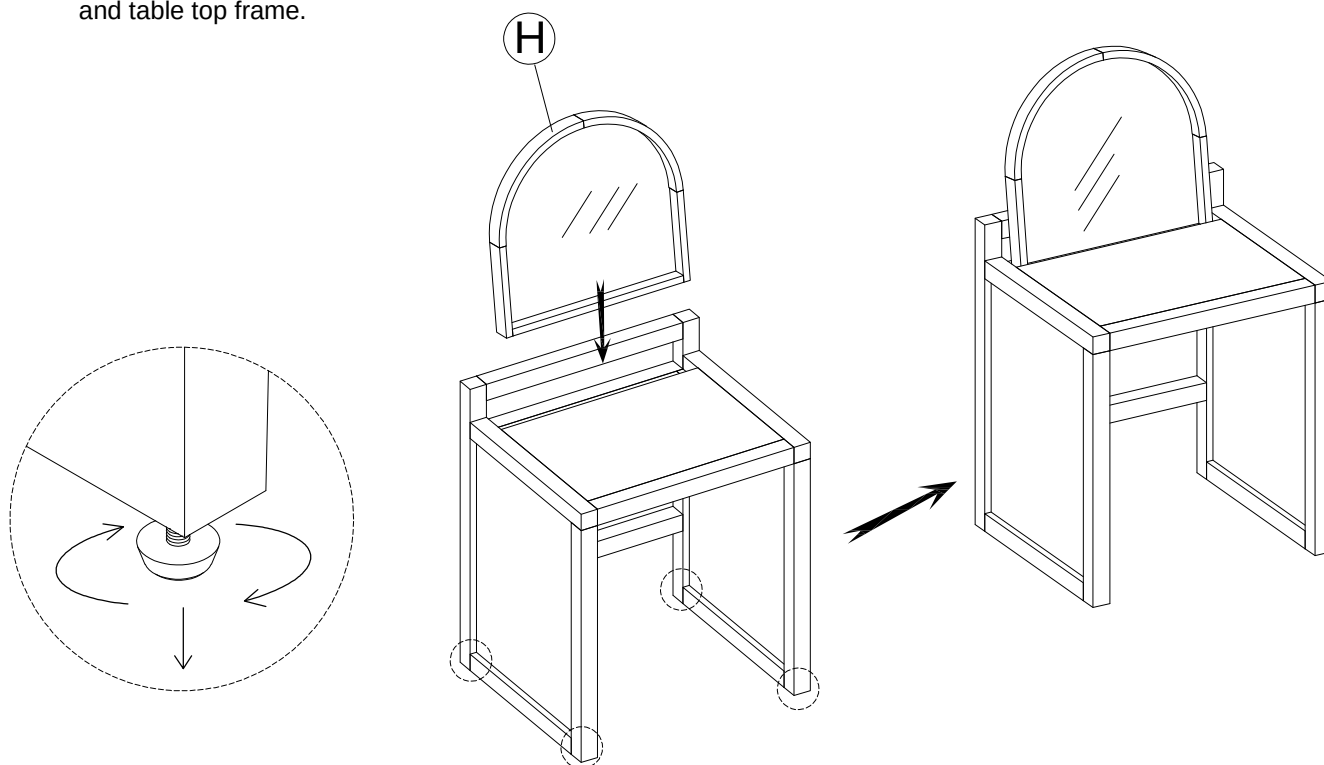

STEP 6. Align chair side frames (E) with chair rails (F). Insert wood dowels (6), bolts (2) into the holes as shown.

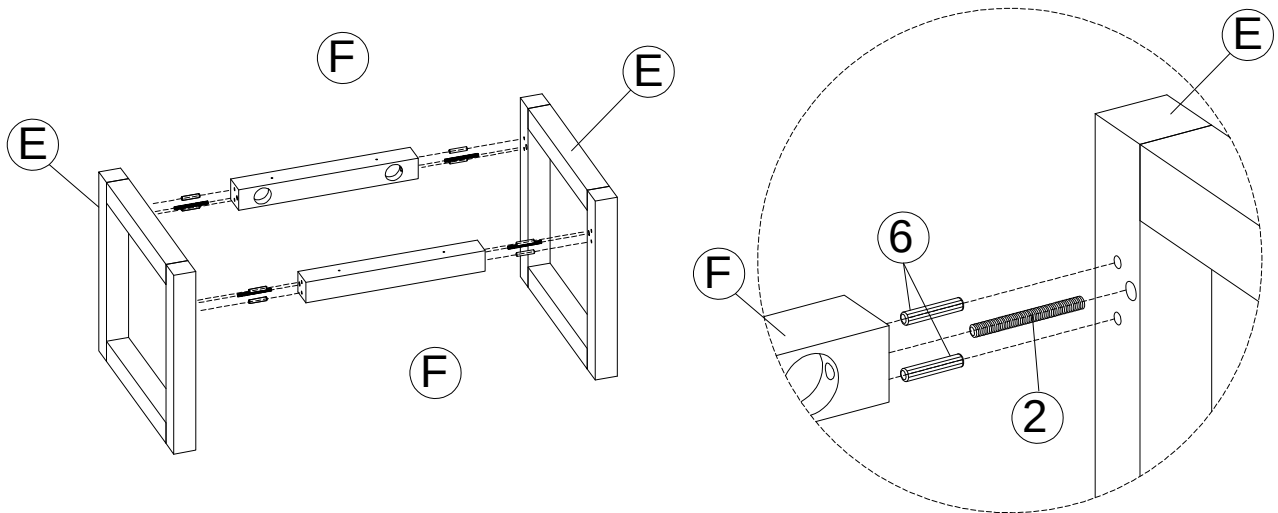


STEP 7. Insert round washer (4), hex nuts (5) into the holes as shown. Tighten with wrench (8).

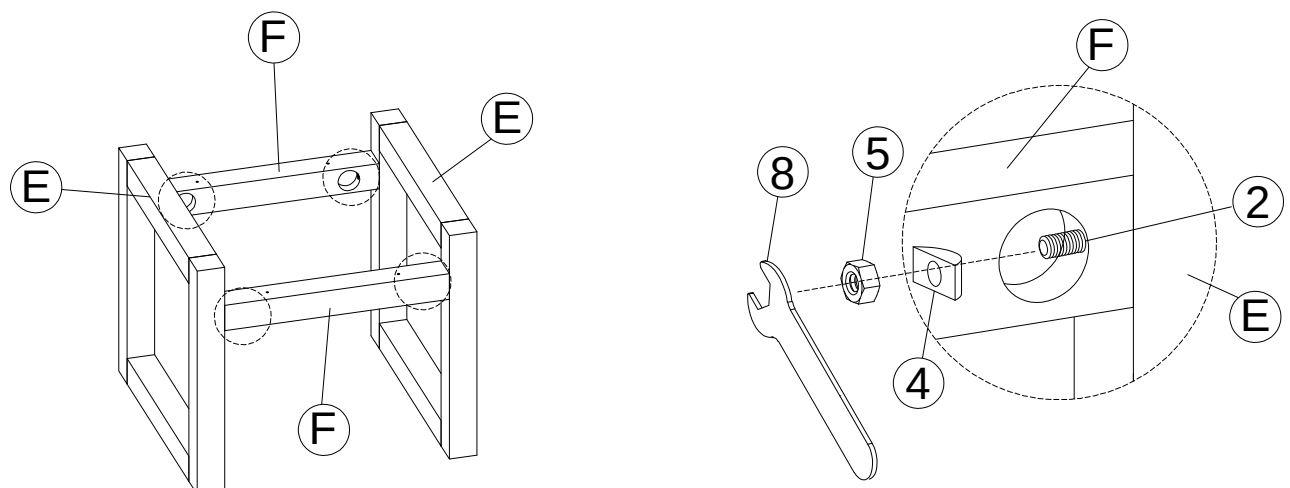

Assembly Instructions

STEP 8. Place seat cushion (G) into the assembled chair frame as shown. Insert screws (9) from the bottom up. Tighten using a screwdriver (not provided). Turn the adjustable feet so the chair sits flat on the ground.

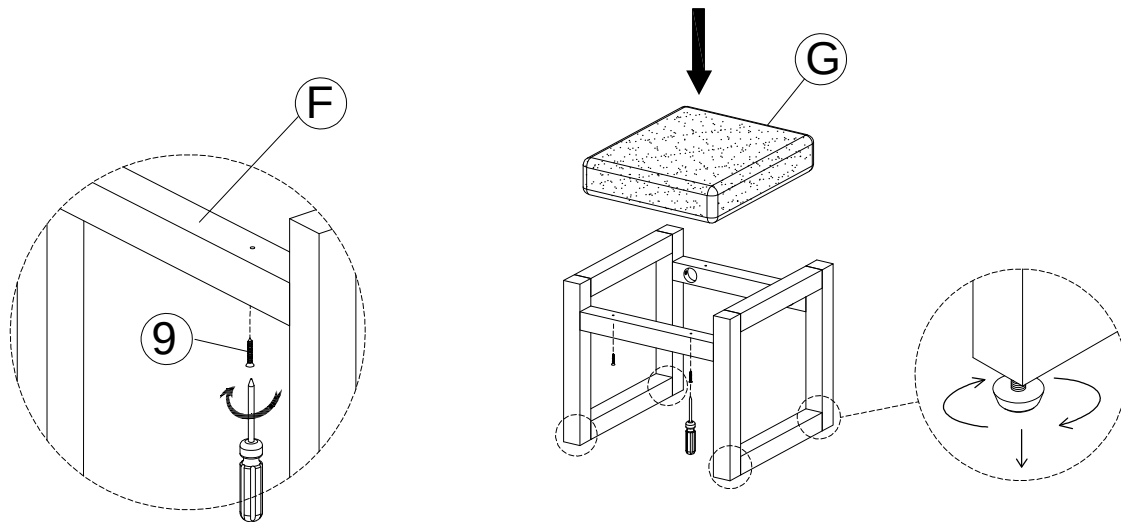

FINISH

