

LUCIE CABINET

URBAN OUTFITTERS

Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED

Drill, Phillips head screwdriver, Hammer, Pencil

WARNINGS:

At least two people recommended for assembly.

Do not throw away packing materials and carton until after assembly.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface.

Young children may be injured by tipping furniture.

The use of a tipping restraint is necessary to ensure product safety.

**The tipping restraint is only a deterrent,
it is not a substitute for proper adult supervision.**

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.

Do not place overheat or air conditioning vents.


Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills with a clean white cloth, do not rub.


Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.


You may need to re-tighten all bolts after initial use.

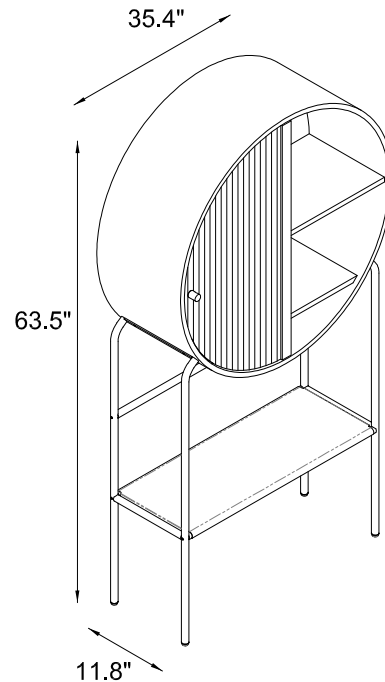


PARTS INCLUDED:

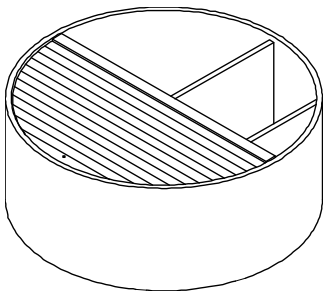


A) Cabinet

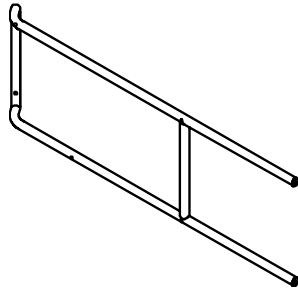


B-L) Metal Left Frame

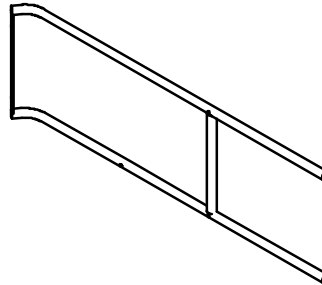


B-R) Metal Right Frame

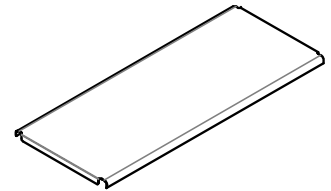


C) Shelf

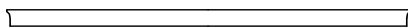


D) Cross rail x2

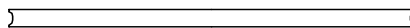

E) Back Cross rail

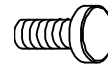

F) Adjustable leveler x4

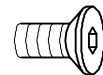


G) Bolt [M6x12mm] x4



H) Bolt [M6x38mm] x2



I) Bolt [M4x16mm]

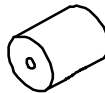

J) Knob



K) Plastic washer




L) Plastic washer



M) Metal washer




N) Bracket Screw
[4x16mm] x2

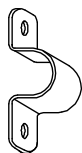

O) Metal Bracket



P) Drywall Anchor
x2

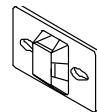

Q) Anti-tip Bracket



R) Wall Screw
[4x32mm] x2



S) Nylon Strap




T) Allen Key
(4mm)

Assembly Instructions

STEP 1


Lay down all the parts on a clean carpet or cardboard for assembly. One at a time, align metal left frame (B-L) and metal right frame (B-R) with cabinet (A). Insert bolts (G), and partially tighten with Allen key (T). Align cross rails (D) and back cross rail (E) with the metal frames (B-L&R). Ensure the ends of the cross rails (D&E) are aligned as shown below. Insert bolts (H), and partially tighten with Allen key (T). Once all bolts are inserted and partially tightened, fully tighten the bolts. Screw the adjustable levelers (F) into the bottoms of the metal frames (B-L&R).

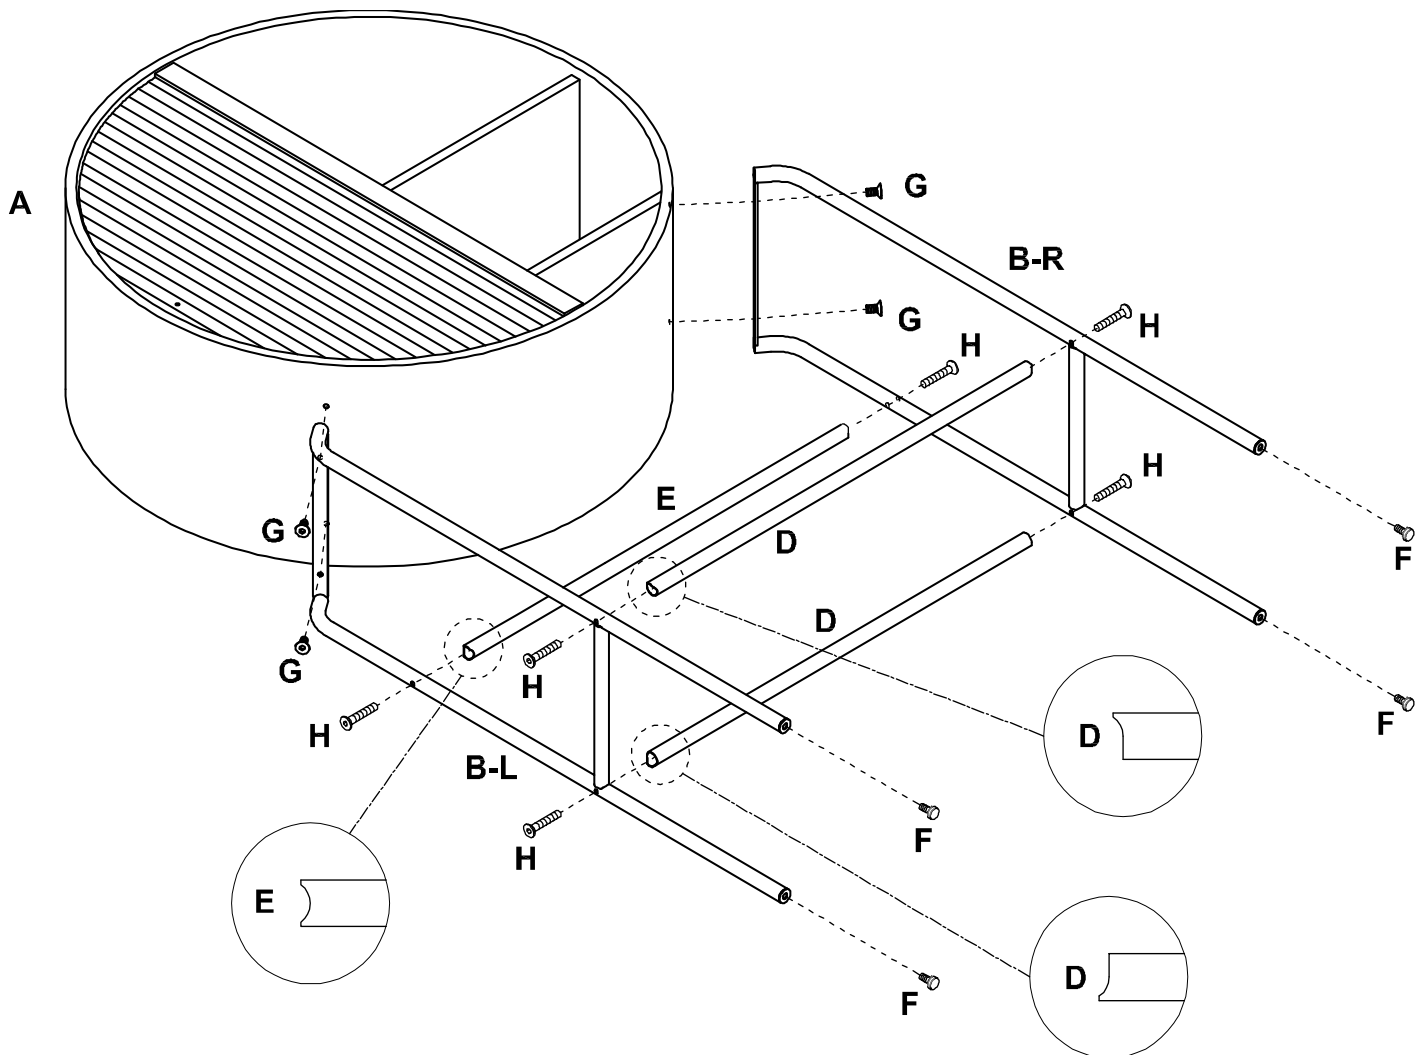

Assembly Instructions


STEP 2

Align plastic washers (K), (L), and metal washer (M) with the metal knob (J) on the glass door panel, as shown. Insert bolt (I), and carefully tighten with a Phillips head screwdriver. **DO NOT OVER-TIGHTEN THE BOLT (I)**. With help, flip the cabinet upright.

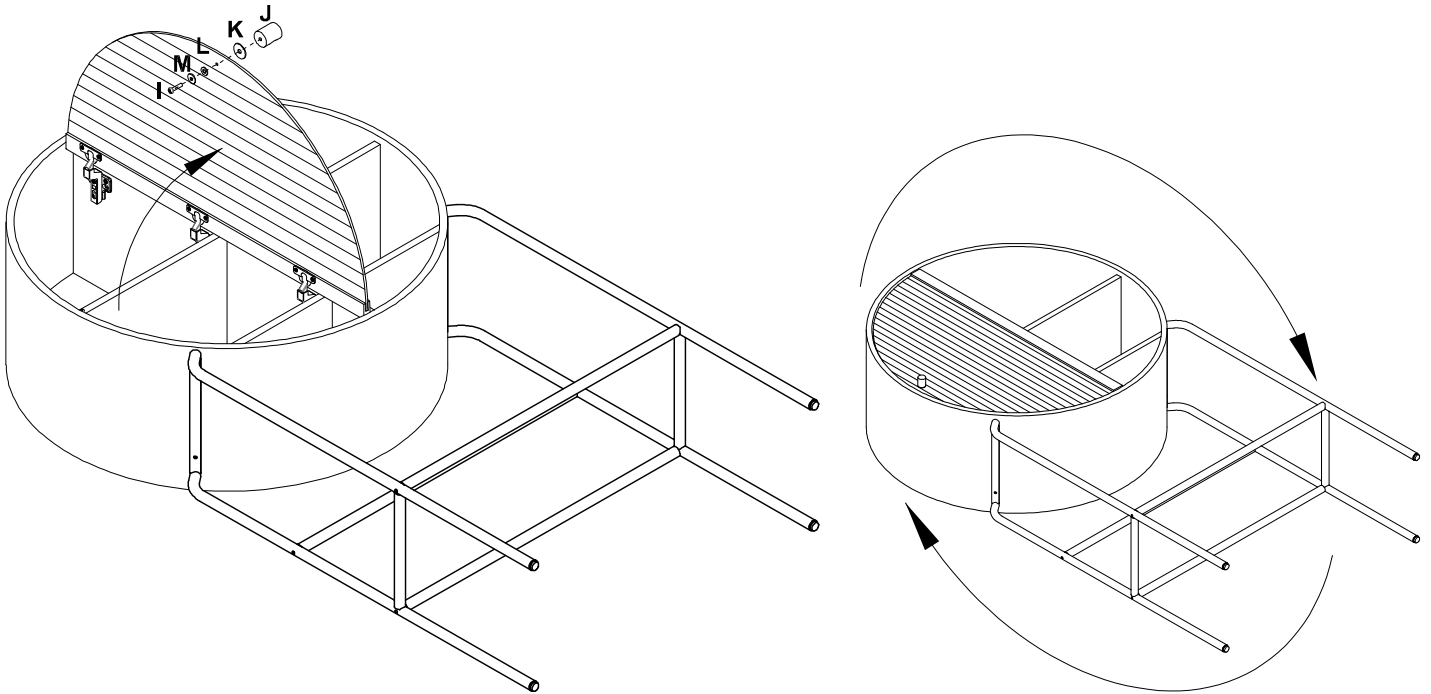

STEP 3

Insert Shelf (C) through the front of the base. Press the back of the shelf (C) onto the lower back rail (D) then, press the front of the shelf (C) onto the front rail (D).

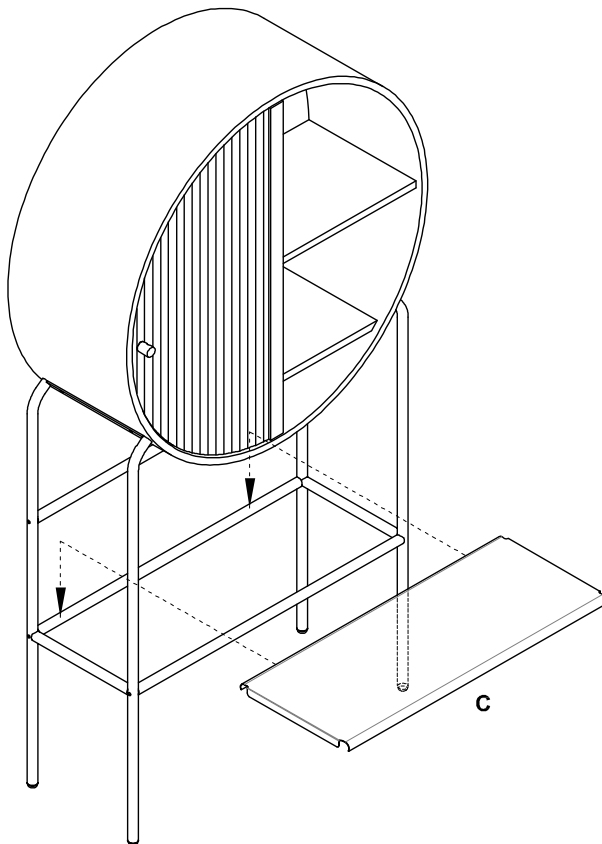

Assembly Instructions

STEP 4

Align the metal bracket (O) with the horizontal center of the cabinet at its back, as shown. **Use the existing screws in the back of the cabinet as reference for the horizontal center.** Insert bracket screws (N) through the metal bracket (O) into the cabinet and tighten with a drill or Phillips head screwdriver. **Do not over-tighten bracket screws (N).**

STEP 5

With help, place the cabinet against the wall in a preferred location. Align anti-tip bracket (Q) with the metal bracket (O) and mark the location of the holes in the anti-tip bracket (Q) on the wall.

Wood or Stud installation:

Insert screws (R) through the anti-tip bracket (Q) into the wall and tighten with a drill or Phillips head screwdriver.

Drywall installation:

Insert drywall anchors (P) into the wall at the marked locations using a drill and a hammer. Insert screws (R) through the anti-tip bracket (Q) into the drywall anchors (P) and tighten with a drill or Phillips head screwdriver.

The included hardware is intended for attachment to drywall or wooden wall surfaces, contact your local hardware store to find the correct anchor for alternative wall-types such as stone or brick.

STEP 6


With help, place the cabinet back against the wall. Feed the Nylon strap (S) through the anti-tip bracket then, pull the nylon strap tight.

STEP 7



Adjust the levelers as necessary to accommodate uneven floors.

Warning: Young children may be injured by tipping furniture and the use of a tipping restraint is **not** a substitute for proper adult supervision.

Wood or Stud installation:

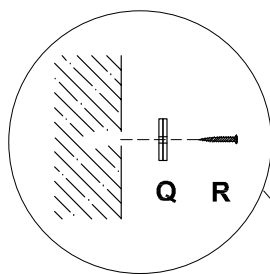


Drywall Installation:

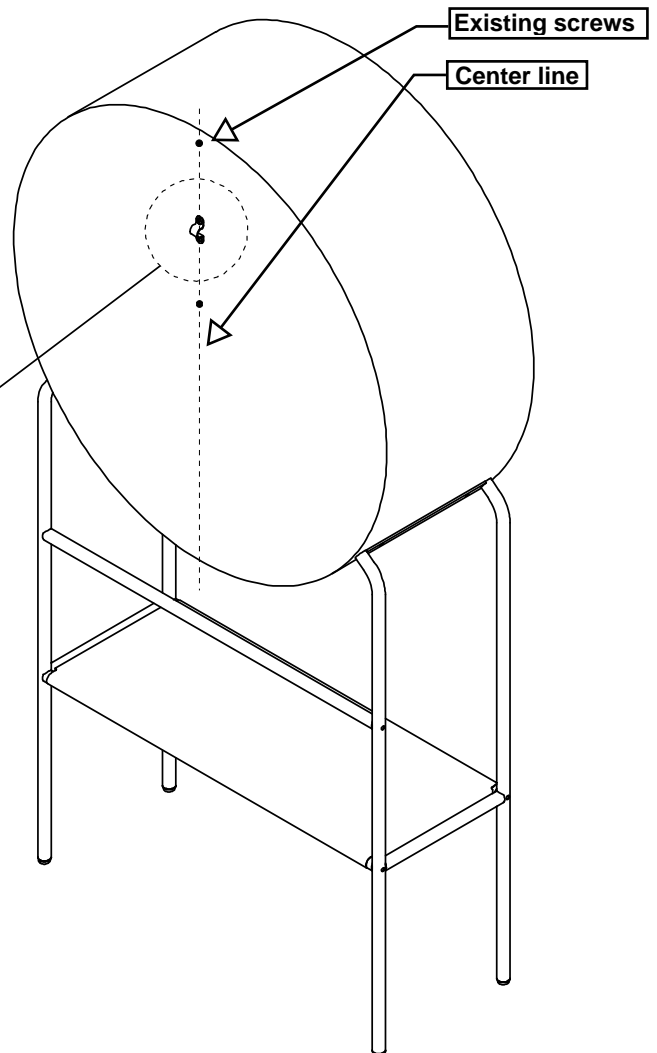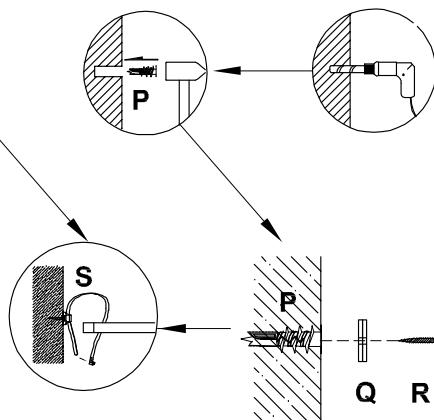

Assembly Instructions

STEP 8


Open and close the door to make sure the hinges and door operate smoothly. Use a Phillips head screwdriver and the following diagrams to adjust the door if necessary.

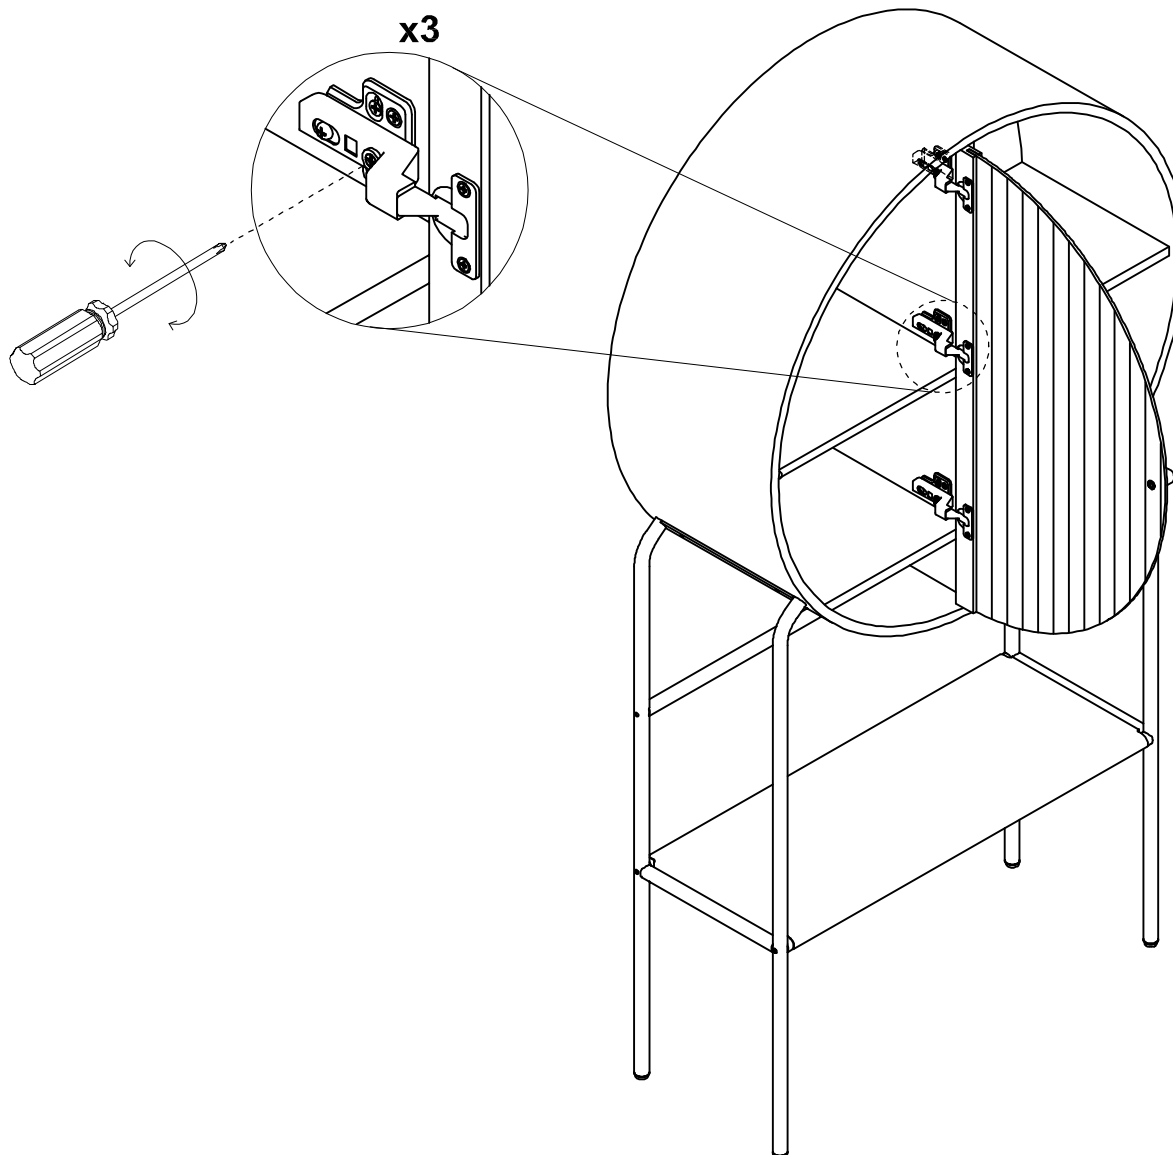

STEP 8 - CONTINUED

DO NOT FULLY LOOSEN THE SCREWS!

- Left & Right: Loosen / Tighten screw to adjust.

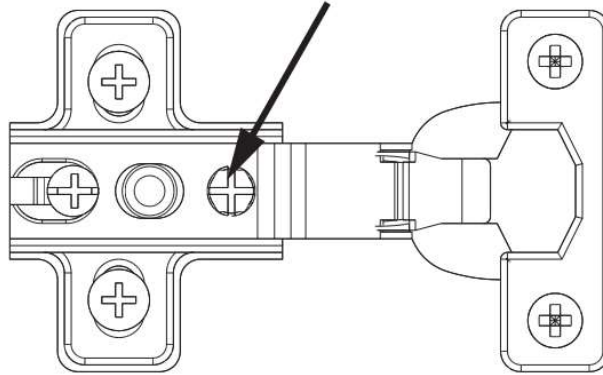

- Front to Back (depth): Loosen screw to adjust.

