

ARMAND BED

URBAN OUTFITTERS


Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED:
Phillips Head Screw Driver


Do not throw away packing materials and carton until after assembly.
Assemble all parts on a clean smooth surface
The assembly of this item requires x 2 people.

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight. Do not place over heat or Air conditioning vents.
Adjust levelers so that the furniture sits flat on uneven floors.
Blot spills do not rub, with a clean white cloth.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.

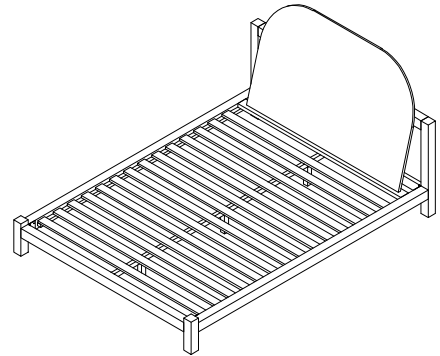

PARTS INCLUDED

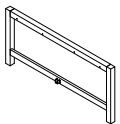


(A) Headboard
Quantity: 1pc



(B) Foot-board
Quantity: 1pc




(C) Side rails
Quantity: 2pcs



(D) Middle rail
Quantity: 1pc



(E) Support legs
Quantity: 3pcs



(F) Slats
Quantity: 14pcs




(G) Upper post slats
Quantity: 1pc



(H) Headboard panel
Quantity: 1pc

HARDWARE LIST



(1) Bolt
M8 x 20mm
Quantity: 8pcs



(2) Flat Washers
M8
Quantity: 12pcs




(3) Bolt
M8 x 30mm
Quantity: 6pcs



(4) Bolt
M8 x 50mm
Quantity: 3pcs



(5) Screw
M4 x 25mm
Quantity: 28pcs



(6) Screw
M4 x 40mm
Quantity: 2pcs




(7) Allen key
Quantity: 1pcs

ARMAND BED


Assembly Instructions

URBAN OUTFITTERS

STEP 1. With help, align side-rails (C) to the holes in headboard (A) and foot-board (B) and Insert bolts (1), flat washers (2). Tighten with Allen key (7).

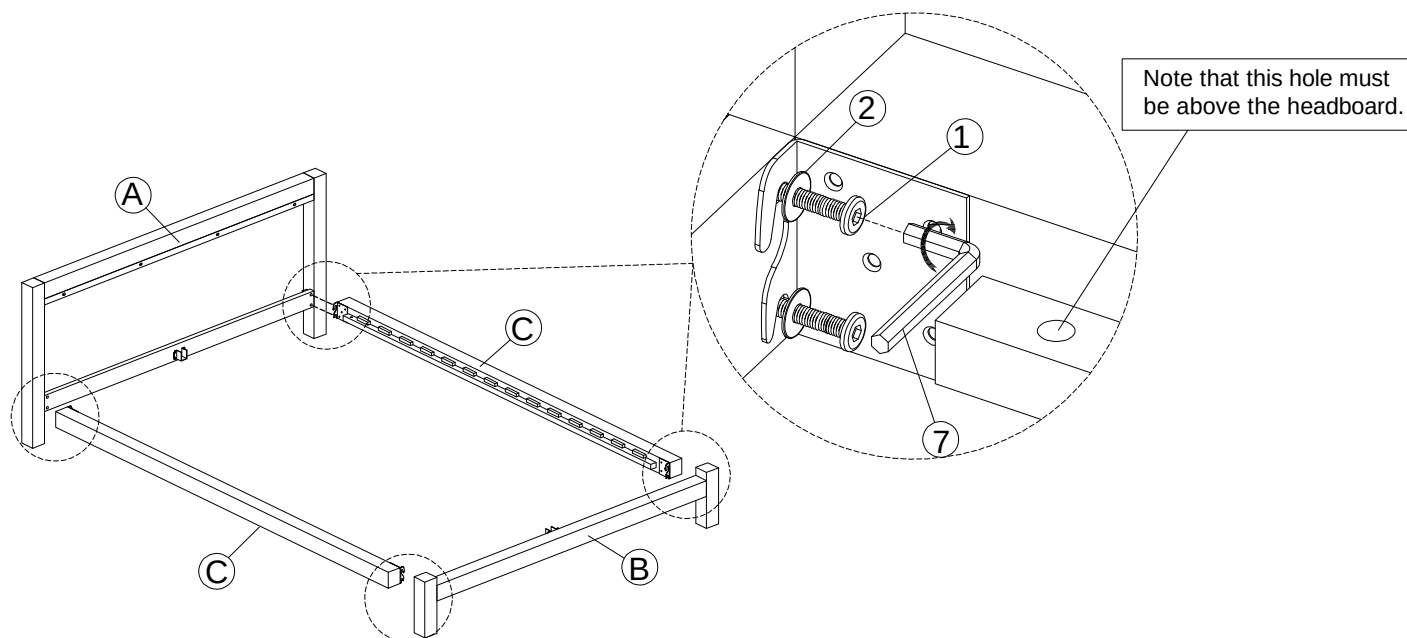

STEP 2. Align legs (E) with the corresponding holes in middle rail (D). Insert bolts (4). Tighten with the Allen key (7). Turn the adjustable feet so the middle rail assembly sits flat on the ground.

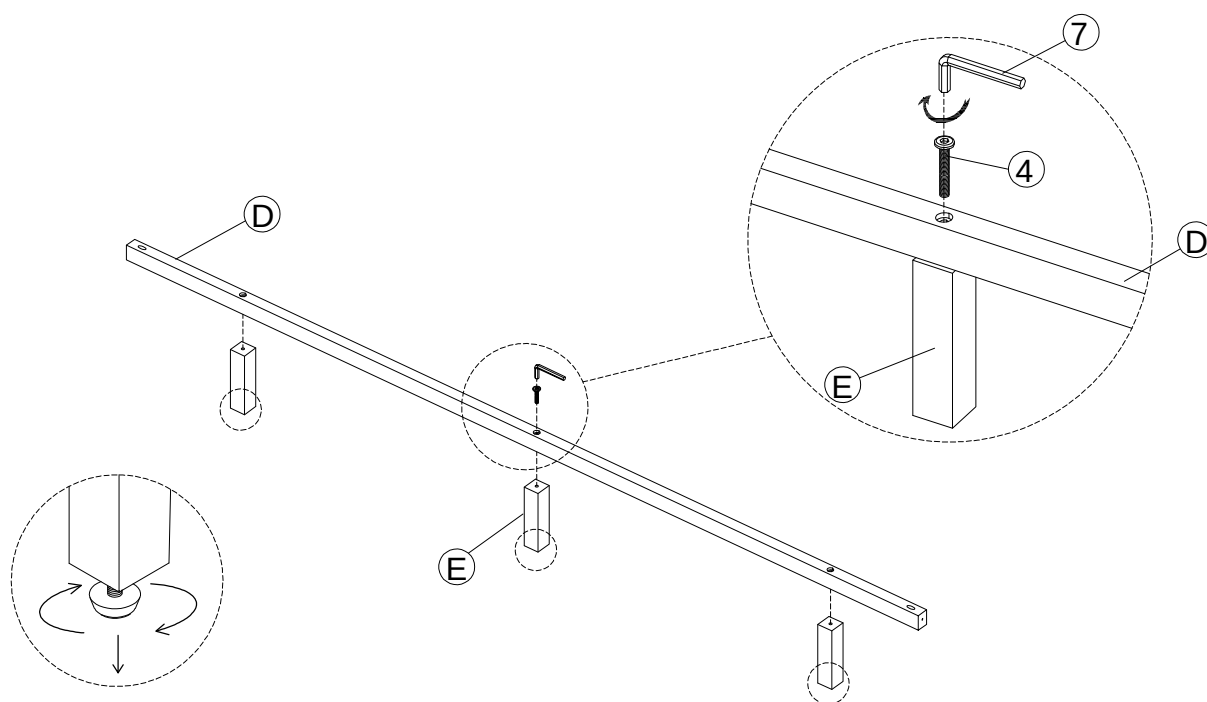


ARMAND BED


Assembly Instructions

URBAN OUTFITTERS

STEP 3. Align the Middle rail as shown. Insert screws (6) and tighten using a screwdriver (not provided).
Do not over-tighten.

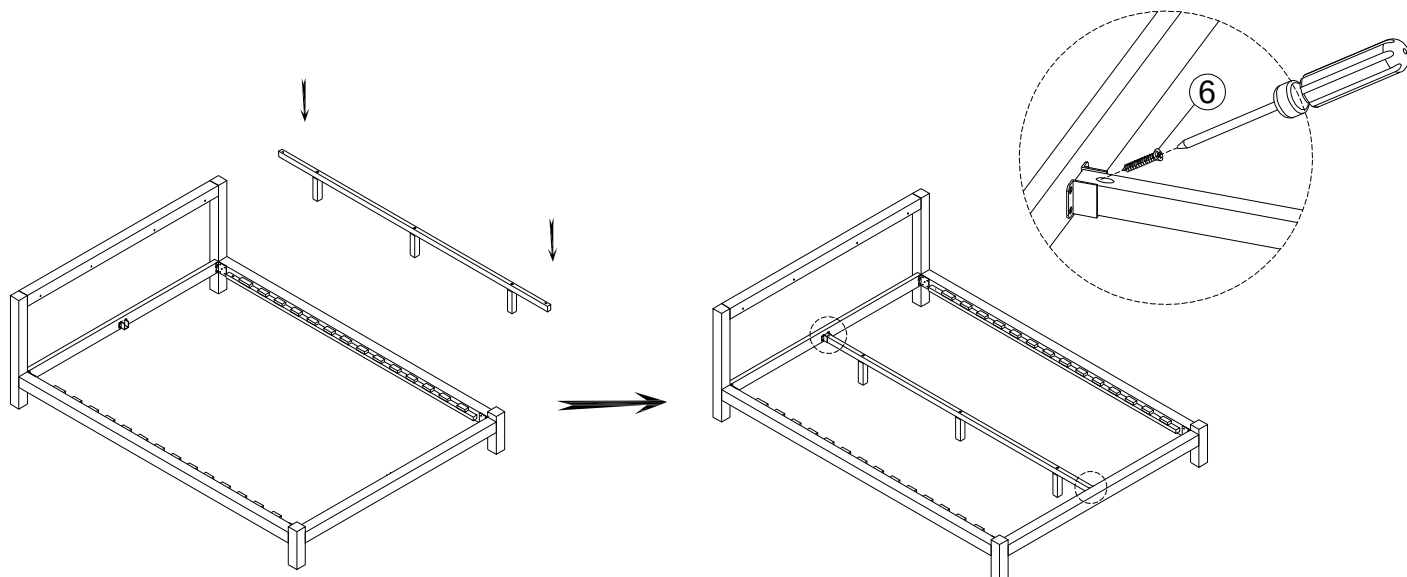

STEP 4. Lay slats (F) and upper post slat (G) into the assembled frame as shown.

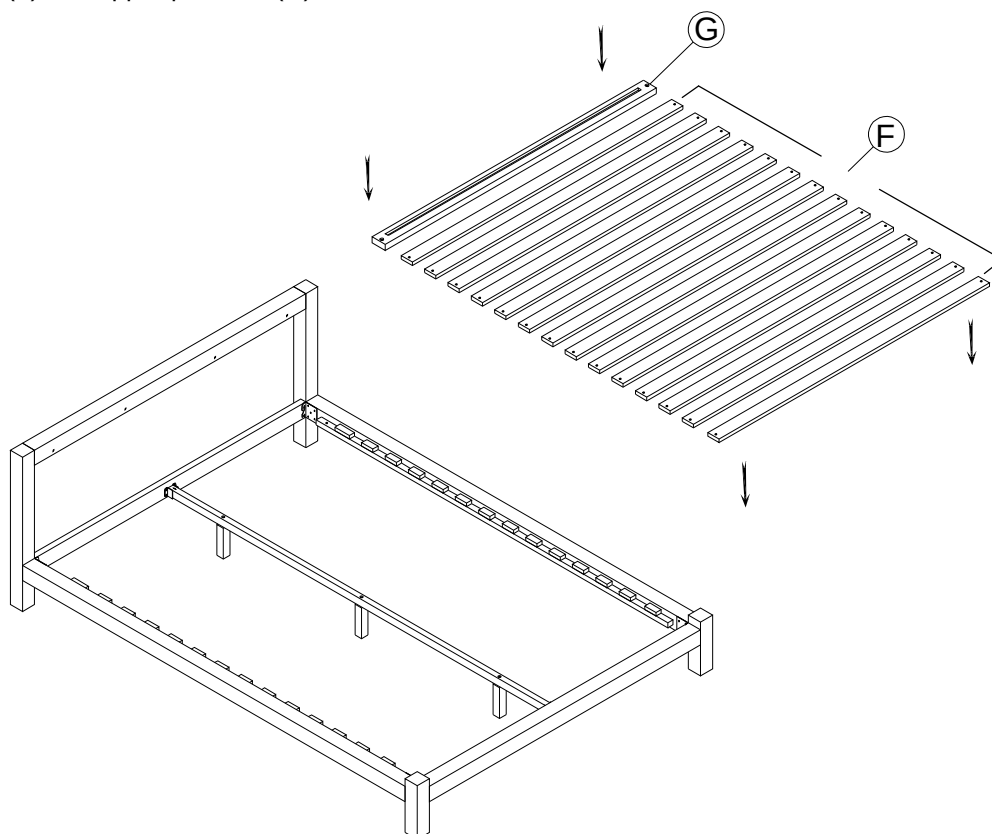


ARMAND BED


Assembly Instructions

URBAN OUTFITTERS

STEP 5. Insert bolts (3) into either side of upper post slat (G). Tighten with Allen key (7). Insert screws (5) into slats (F). Tighten the screws using a screwdriver (not provided). Do not over-tighten.

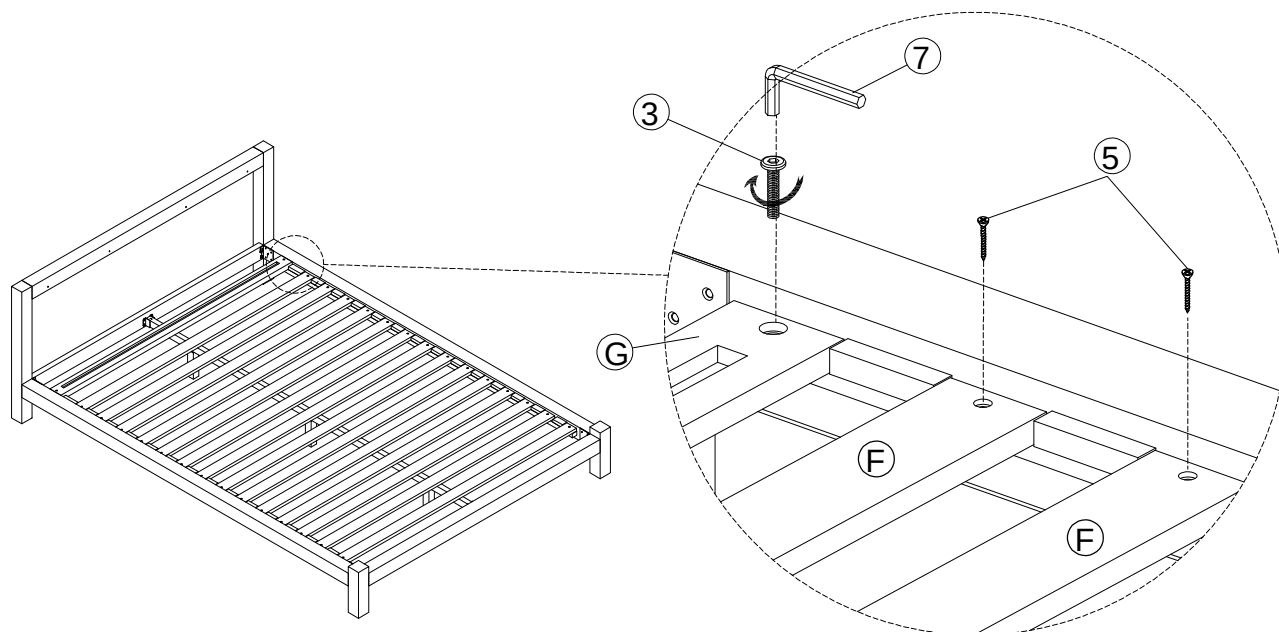

STEP 6. Lay headboard panel (H) into the groove in upper post slat (G). Insert bolts (3), flat washers (2) from behind the headboard and tighten with the supplied Allen key (7) as shown below.

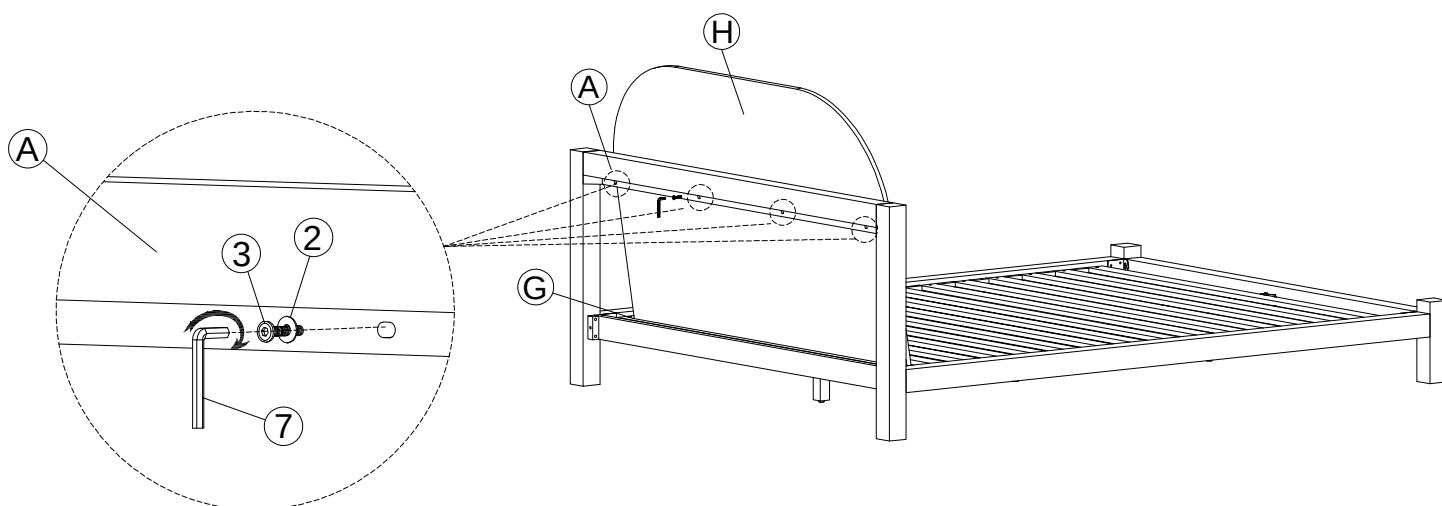

ARMAND BED

Assembly Instructions

URBAN OUTFITTERS

FINISH

