

BODEN SHOE STORAGE

Assembly Instructions

URBAN OUTFITTERS


NO ADDITIONAL TOOLS REQUIRED

WARNINGS:


Do not discard packing materials and the carton until assembly is complete.
Ensure all parts are present prior to assembly.
Contact customer service immediately if any parts are missing.
Assemble all parts on a clean, smooth surface.

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight.
Blot spills with a clean, white cloth; do not rub.
Do not use harsh chemicals.
Before cleaning any part, test a small spot in a hidden area.
Do not place over heat or air conditioning vents.
Do not over-tighten the parts.
The parts may loosen after initial use; re-tighten as necessary.

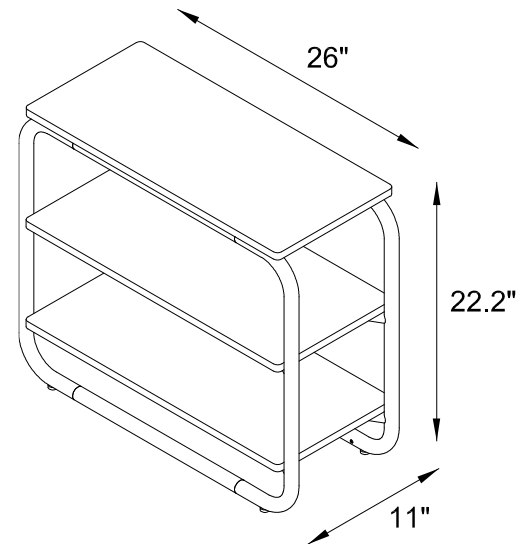


PARTS INCLUDED

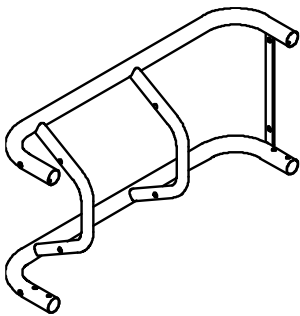


A) Metal Frame x2

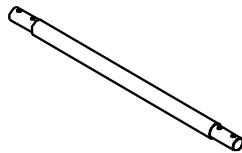

B) Cross Rails x4

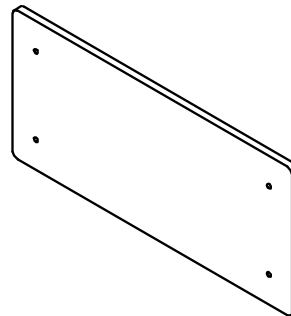


C) Wood Shelf x 3




D) Adjustable Levelers x 4



E) Bolt
[M6x10mm] x16



F) Bolt
[M6x15mm] x4



G) Bolt
[M6x32mm] x8




H) Allen Key

Assembly Instructions

STEP 1

Insert cross rails (B) into metal frames (A) aligning the holes in each. Insert bolts (E) through the metal frames (A) into the cross rails (B) and partially tighten with Allen key (H). Once all bolts are inserted and partially tightened, fully tighten the bolts. Screw adjustable levelers (D) into the bottom of the metal frames (A).

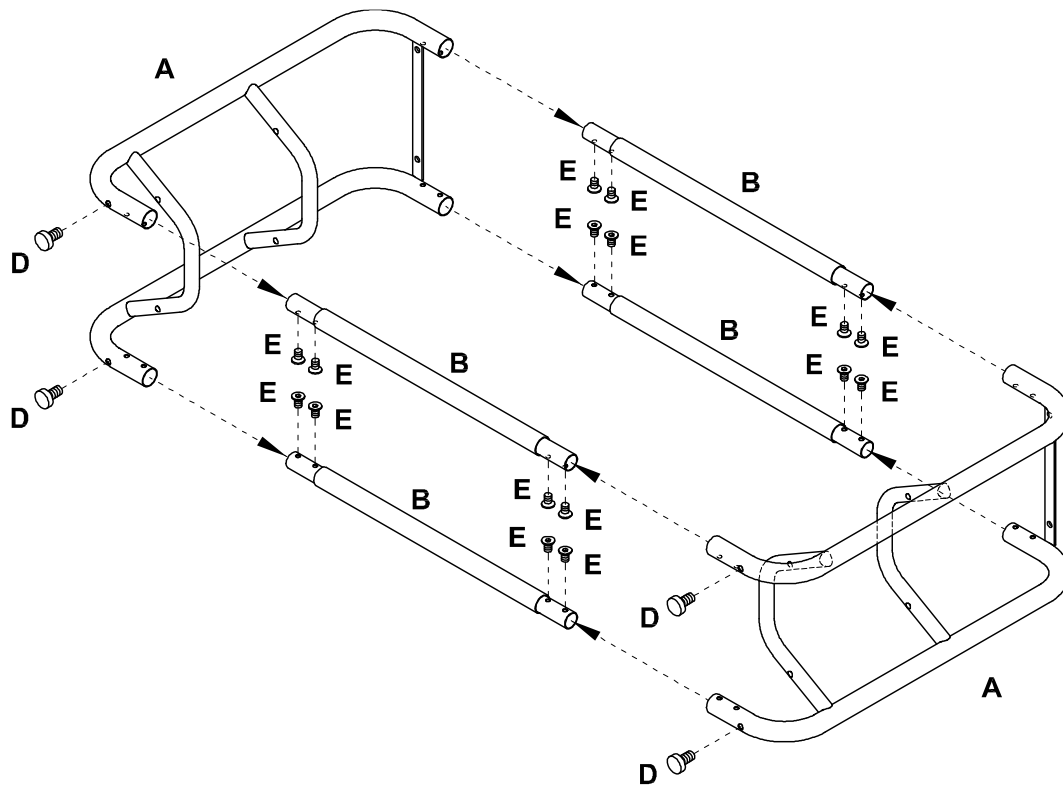

STEP 2

Place the wood shelves (C) on the metal frames (A) aligning the holes in each. Insert bolts (F) to the top wood shelf (C) and bolts (G) to the additional shelves below. Partially tighten the bolts (F) and (G) with Allen key (H); once all bolts are inserted and partially tightened, fully tighten the bolts. With help, flip the shoe storage upright.

