

OSCAR BOOKSHELF

URBAN OUTFITTERS

Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED:

Phillips head screwdriver, Pencil



WARNINGS:

Two people recommended for assembly
Do not throw away packing materials and carton until after assembly.
Assemble all parts on a clean smooth surface
Do not drag the shelf while moving.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.
Do not place overheat or air conditioning vents.
Adjust levelers so that the furniture sits flat on uneven floors.
Blot spills do not rub, with a clean white cloth.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.


PARTS INCLUDED

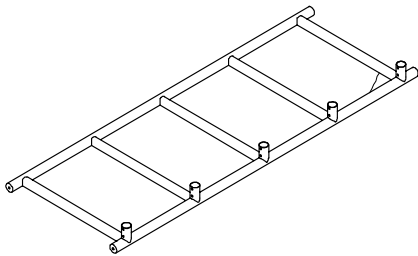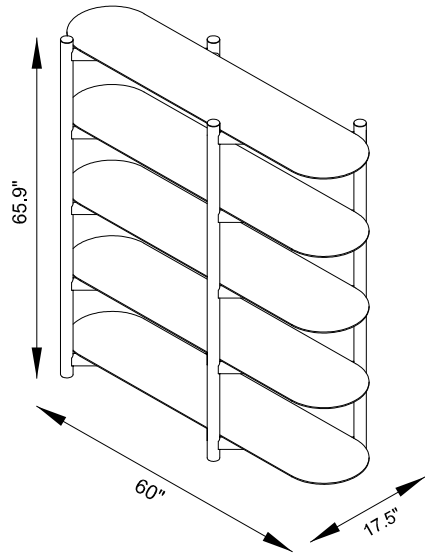


A) Metal Frames x2




B) Cross Rail x5

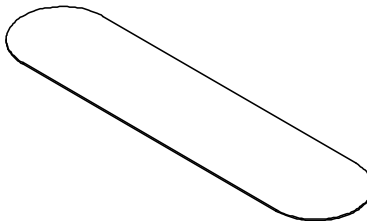


C) Glass x5



D) Plastic Pad x25



E) Bolt
[M6 x L12 mm] x20



F) Adjustable Levelers x4




G) Allen Key x1




H) Drywall Anchor
[13 mm x 40 mm] x2



I) Wall Screw
[4 mm x 32 mm] x2




J) Anti-tip Kit x1

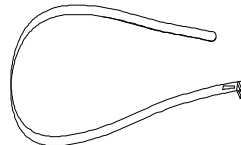

K) Nylon Straps x1



STEP 1

Lay down all the parts on the clean carpet or cardboard for assembly. Align Metal Frames (A), with Cross Rails (B) as shown. Insert Bolts (E) and partially tighten with Allen key (G). Once all screws are inserted and partially tightened, tighten all screws completely. Screw the Adjustable levelers (F) into the bottom of the Metal Frames (A).

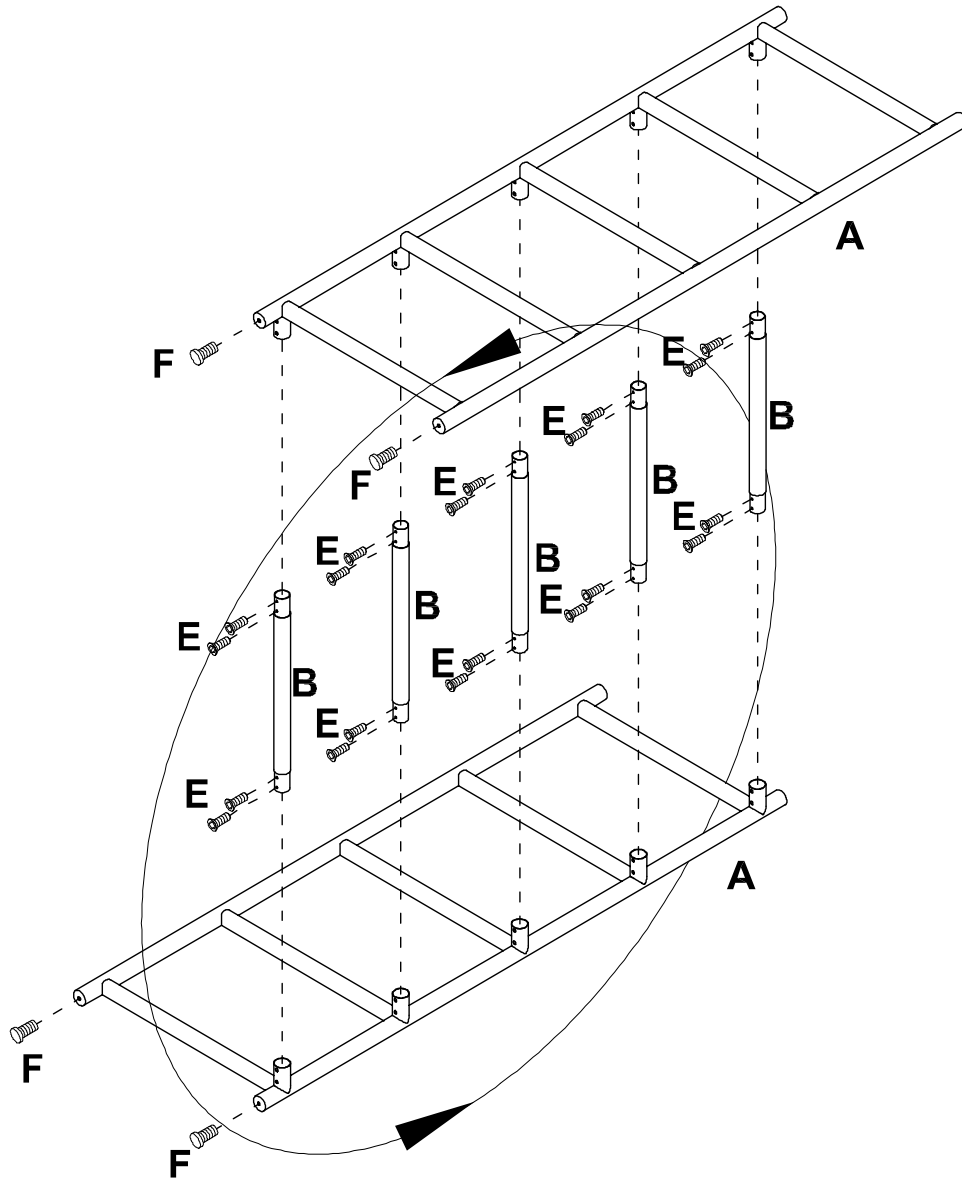

STEP 2

Attach the Plastic Pads (D) to the assembled shelf as shown then, gently place the Glass (C) on the assembled frame.

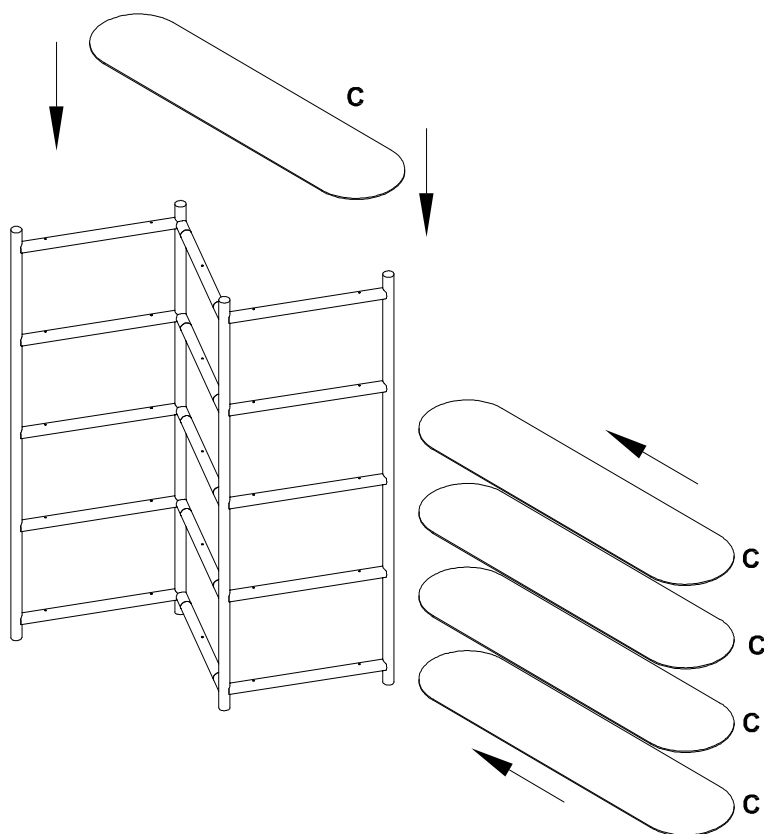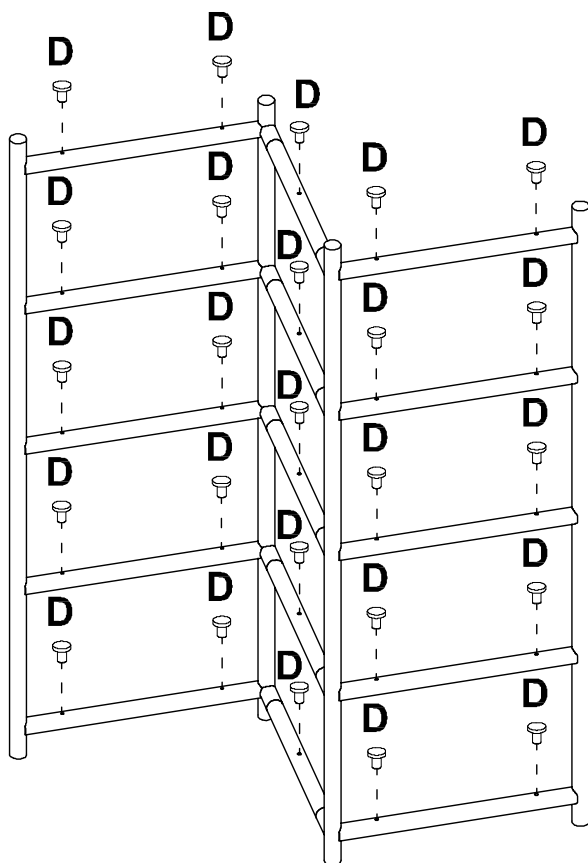

STEP 3

Locate the desired position of the bookshelf. Place the anti-tip kit (J) on the wall as shown and mark the position through the holes on the wall. Contact your local hardware store to purchase the correct anchors for your wall type. Screw the anchors (H) into the wall at the marked locations. Align the anti-tip kit (J) and screw it into the wall with screws (I) using a Phillips head screw driver. Feed the Nylon strap (K) through the anti-tip kit and around the post as shown. Pull the nylon strap tight.

