

Kieran Bed

Assembly Instructions

URBAN OUTFITTERS

TOOLS REQUIRED BUT NOT INCLUDED:

Phillips head screwdriver

WARNINGS:

Do not throw away packing materials and carton until after assembly.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.

Do not place over heat or air conditioning vents.


Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills with a clean white cloth, do not rub.

Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.


You may need to re-tighten all bolts after initial use.

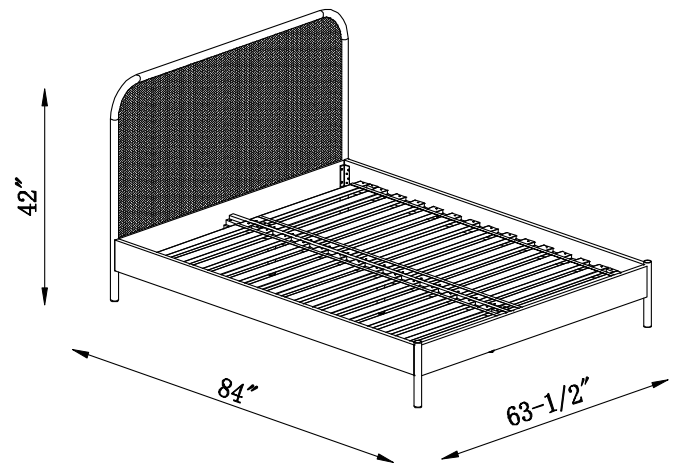


PARTS INCLUDED:



(G) Hex key
x1



(H) Bolt
[1/4" x 1-1/4"] x4



(I) Bolt
[1/4" x 7/8"] x8



(J) Spring washer
[1/4"] x12



(K) Flat washer
[1/4"] x12



(L) Screw
[4 x 30mm] x60


Kieran Bed

Assembly Instructions

URBAN OUTFITTERS


STEP 1

With help, lay the parts out onto a clean smooth surface such as carpet or cardboard. Locate the center rail (D) and insert the center legs (E). Screw together clockwise until tight.

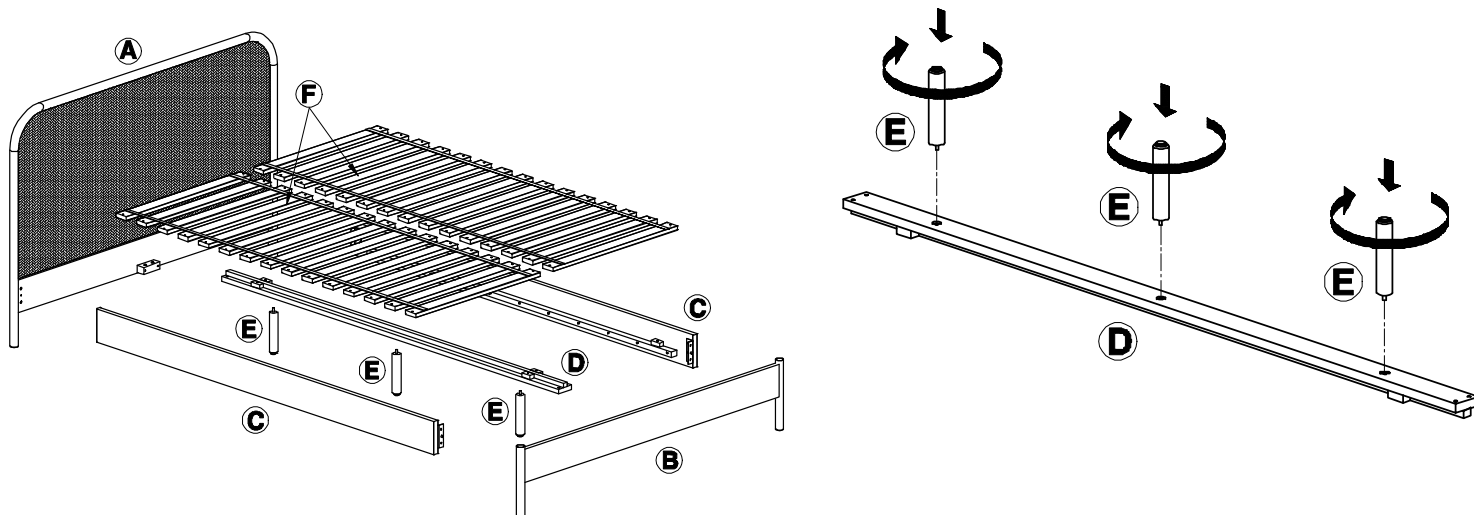


STEP 2

With help, stand headboard (A) upright and align the side rails (C) to the headboard. Insert flat washer (K), spring washer (J), and bolt (I) into Metal Brackets. Tighten with supplied hex key (G). Do not over tighten. Repeat this process to attach the footboard (B).

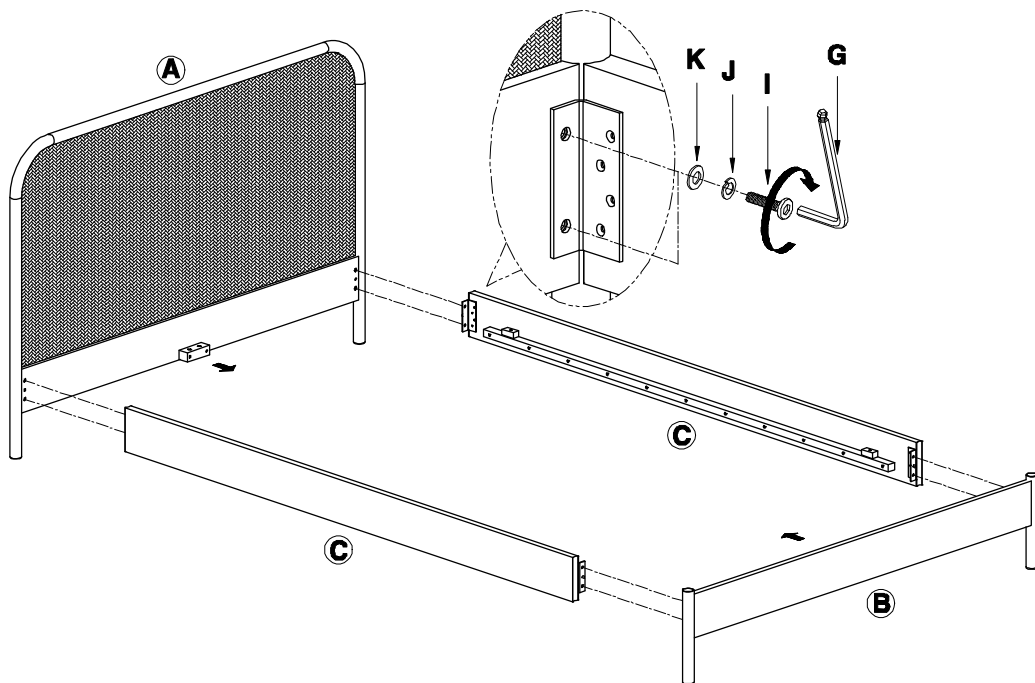

STEP 3

Align Center rail as shown. Insert flat washer (K), spring washer (J) and bolt (H). Tighten with supplied hex key (G). Adjust center leg levelers to touch the floor.

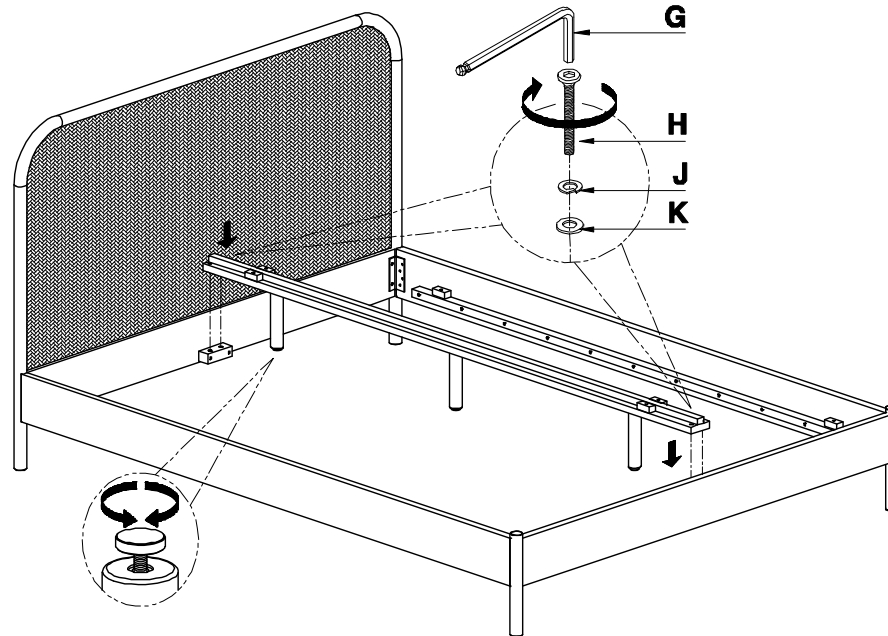

STEP 4

Install Roll slats (F) as shown. Make sure the last slat locks over the blocks on the side rails. Screw the Roll slats (F) in place with Screws (L) using a Phillips head screwdriver (not included). Do not overtighten!

