

OLLY PAPER PENDANT LAMP

URBAN OUTFITTERS

Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED:

Pencil, Hammer, Drill

WARNINGS:

Do not throw away packing materials and carton until after assembly.

Assemble all parts on a clean smooth surface

Do not exceed 9 watt LED; 13 watt compact florescent; 60 watt incandescent bulb

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.


Do not place over heat or air conditioning vents.

Blot spills do not rub, with a clean white cloth.

Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.

You may need to re-tighten all bolts after initial use.

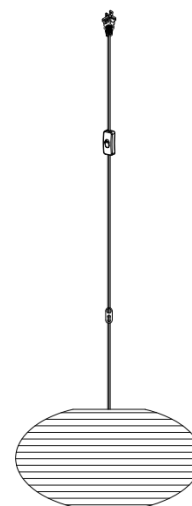

PARTS INCLUDED:



A) Anchor
x1



B) Hook
x1




C) Cord
X1



D) Recommended bulb (NOT INCLUDED)
9 watt LED
13 watt compact florescent
60 watt incandescent bulb
x1



E) Support bracket
x1

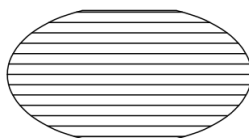

F) Shade
X1



G) Plug cover x1


OLLY PAPER PENDANT LAMP

URBAN OUTFITTERS

Assembly Instructions

STEP 1

- Determine the desired position of the the pendant and mark the position on the wall with a pencil.
- Pre-drill a hole for the anchor (A) at the marked location using a drill unless attaching directly to wood.
Screw the Hook (B) directly into wood if possible.
- Insert the anchor (A) into the ceiling and then screw the Hook (B) into the Anchor (A).
- Hang the cord/socket (C) on the Hook (B) then screw the recommended bulb (D) into the socket (C).
- Attach the Support bracket (E) to the the cord/socket (C) then hang the shade (F) on the Support bracket (E).
- Remove the Plug Cover (G) and plug in the pendant to complete the assembly.

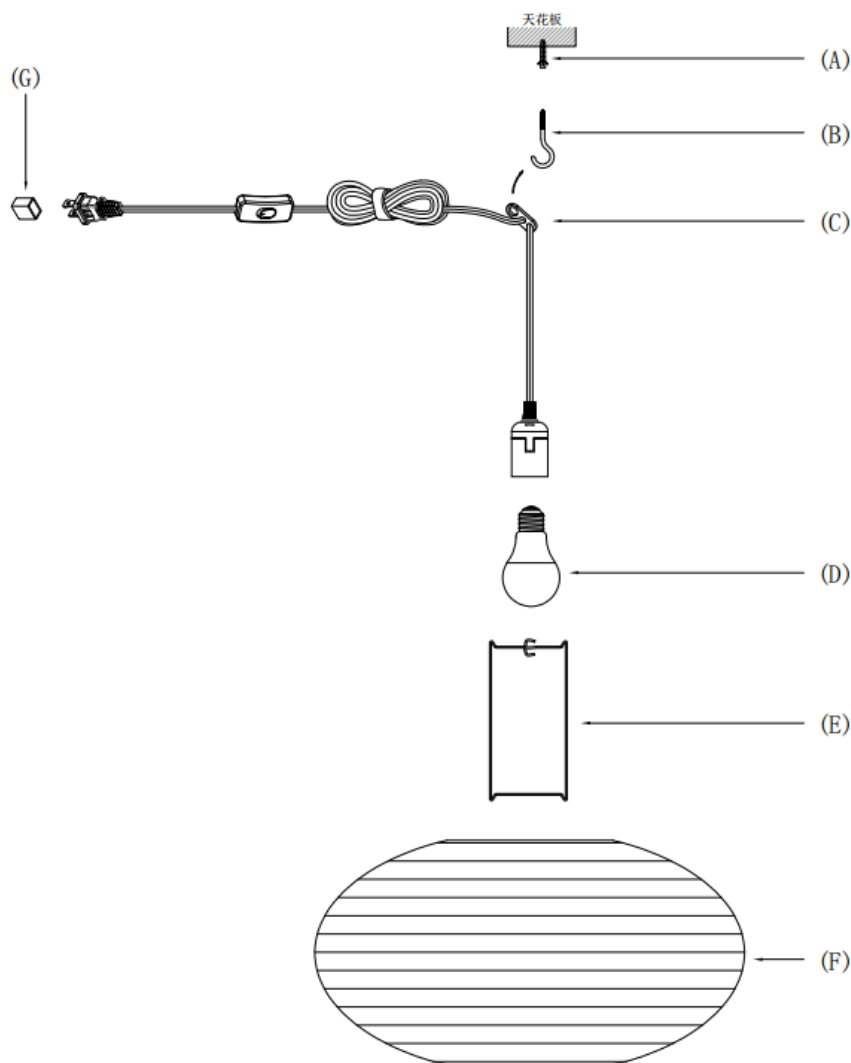

Assemble all parts on a clean smooth surface