

Alva Wall Shelf

Assembly Instructions

URBAN OUTFITTERS

TOOLS REQUIRED BUT NOT INCLUDED:

Drill, Phillips head screwdriver, Hammer, Pencil

WARNINGS:

Do not throw away packing materials and carton until after assembly.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.

Do not place over heat or air conditioning vents.



Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills with a clean white cloth, do not rub.


Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.

You may need to re-tighten all bolts after initial use.

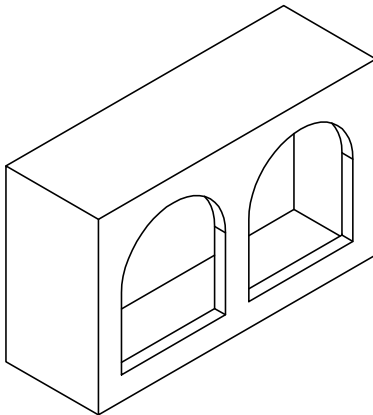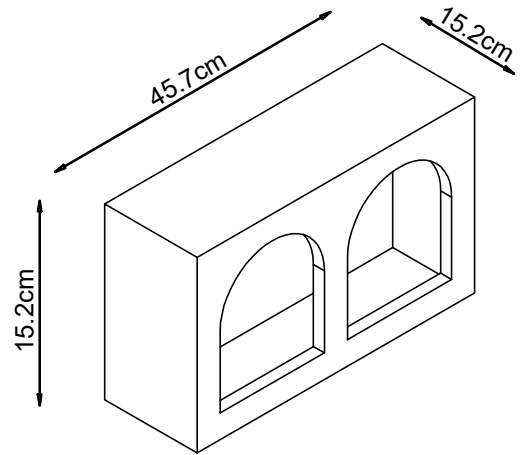

1) Alva Wall Shelf
(18 x 6 x 6") x 1
or
(45.7 x 15.2 x 15.2 cm)

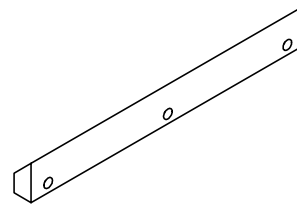

2) Stretcher
(12.5 x 1.5 x 0.75") x 1
or
(32 x 4 x 2 cm)



A) Plastic Anchor
(D 0.35 x 1.38") x 3
or
(D 9 x 35 mm)



B) Screw
(D 0.16 x 1.57") x 3
or
(D 4 x 40 mm)

Alva Wall Shelf

Assembly Instructions

URBAN OUTFITTERS


STEP 1

Place the stretcher (2) on the wall in your chosen location and ensure it is level.

STEP 2

Wood or Stud installation:

Insert the screws (B) through the stretcher (2) into the wall and fasten them with a Phillips head screwdriver or drill. Hang the shelf (1) on the stretcher (2).

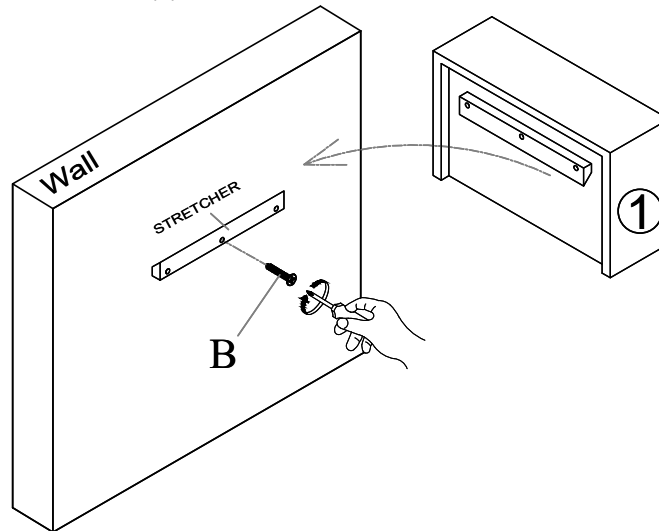

Drywall installation:

Mark the location of the screw holes in the stretcher (2) on the wall. Insert anchors (A) into the wall at the marked locations using a drill and a hammer. Insert screws (B) through the stretcher (2) into the anchors, then tighten with a Phillips head screwdriver. Hang the shelf (1) on the stretcher (2).

