

Poppi Hook

Assembly Instructions

URBAN OUTFITTERS

TOOLS REQUIRED BUT NOT INCLUDED:

Drill, Phillips head screwdriver driver or bit, Hammer, Pencil, Level

WARNINGS:

Do not throw away packing materials and carton until after assembly.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.


Do not use harsh chemicals.

Before cleaning any part, test a small spot in a hidden area.


Do not place over heat or air conditioning vents.

Do not over-tighten the parts.

The parts may loosen after initial use; re-tighten as necessary.

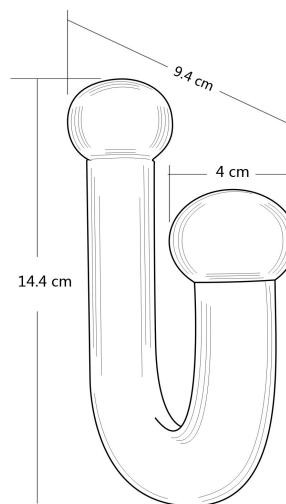

PARTS INCLUDED:

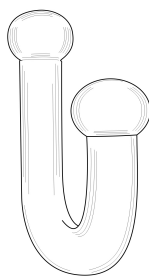

(A) Hook



(B) Screw
[D0.27" x 1.38"] x2
or
[D7 x 35 mm] x2




(C) Plastic Anchor
[D0.39" x 1.38"] x2
or
[D10 x 35 mm] x2

STEP 1

Place the hook (A) on the wall in a chosen location. Ensure the hook (A) is level and mark the locations for the screws (C) / anchors (B) using the dimensions in the diagram below as reference.

Stud installation:




Use a Phillips head screwdriver to fasten the screws (C) directly into the wall at the marked locations. Leave 1/8 - 3/16" or 3 - 10 mm between the top of the screws (C) and the wall.

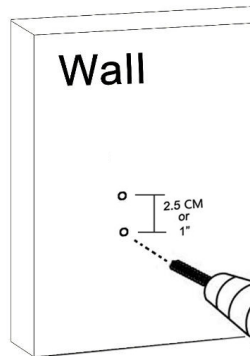

Drywall installation:

Insert anchors (B) into the wall at the marked locations using a drill and a hammer. Insert screws (C) into the anchors, then tighten with a Phillips head screwdriver or drill. Leave 1/8 - 3/16" or 3 - 10 mm between the top of the screw (C) and the wall.

The included hardware is intended for attachment to drywall or wooden wall surfaces. Contact your local hardware store to find the correct anchor for alternative wall types such as stone or brick.

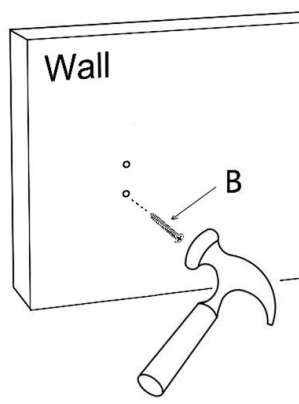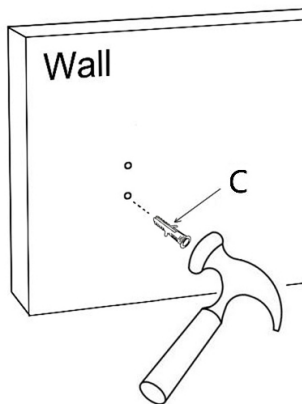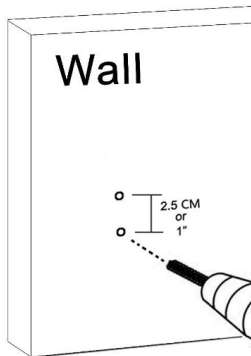

STEP 2

Gently hang the hook (A) on the screws (C). If the hook (A) slopes downward, tighten the gap between the top of the screws (C) and the wall.

