

# ZOE BED FRAME FULL

## Assembly Instructions

URBAN OUTFITTERS


NO ADDITIONAL TOOLS REQUIRED

### WARNINGS:


Do not throw away packing materials and carton until after assembly.  
Ensure all parts are present prior to assembly.  
Contact customer service immediately if parts are missing.  
Assemble all parts on a clean smooth surface.

### CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.  
Do not place over heat or Air conditioning vents.  
Dust your wood furniture often to prevent the buildup of dust.  
Blot spills do not rub, with a clean white cloth.  
Before cleaning any part test a small spot in a hidden area.  
Natural Fiber products are designed to be used under cover.  
Clean spills with a damp cloth with warm water only.  
Do not use any harsh chemicals, abrasive cleaners or silicone or alcohol-based agents on woven materials.

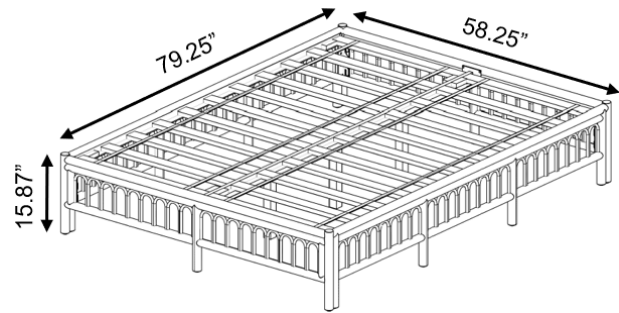

### PARTS INCLUDED:

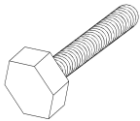

(A) Bolt  
(M8 x 25mm) x12




(B) Spring Washer  
(M8) x12




(C) Washer  
(M8) x12




(D) Wrench  
x1

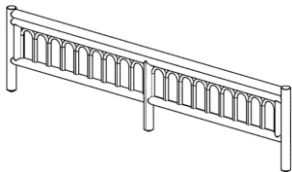


(E) Headboard / Footboard  
x2

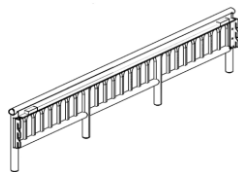

(F) Side Rail  
x2

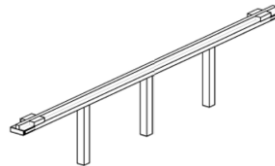

(G) Center Rail  
x1

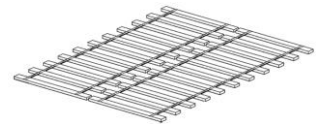

(H) Roll Slats  
x2


# ZOE BED FRAME FULL

URBAN OUTFITTERS

## Assembly Instructions


### STEP 1

Insert the bolts (A), spring washers (B), and washers (C) into the headboard and footboard (E) as shown. Partially tighten the bolts (A) with the wrench (D). Leave enough room to hang the hooks on the side rails (F) on the bolts (A); loosen the bolts (A) as necessary to accommodate hanging the side rail (F) hooks. Place the headboard (E) in its intended location, then, with help, hang the side rail (F) hooks on the bolts (A). Ensure the side rails (F) are seated on all the bolts (A) with the washer and spring washer in front of the hooks.

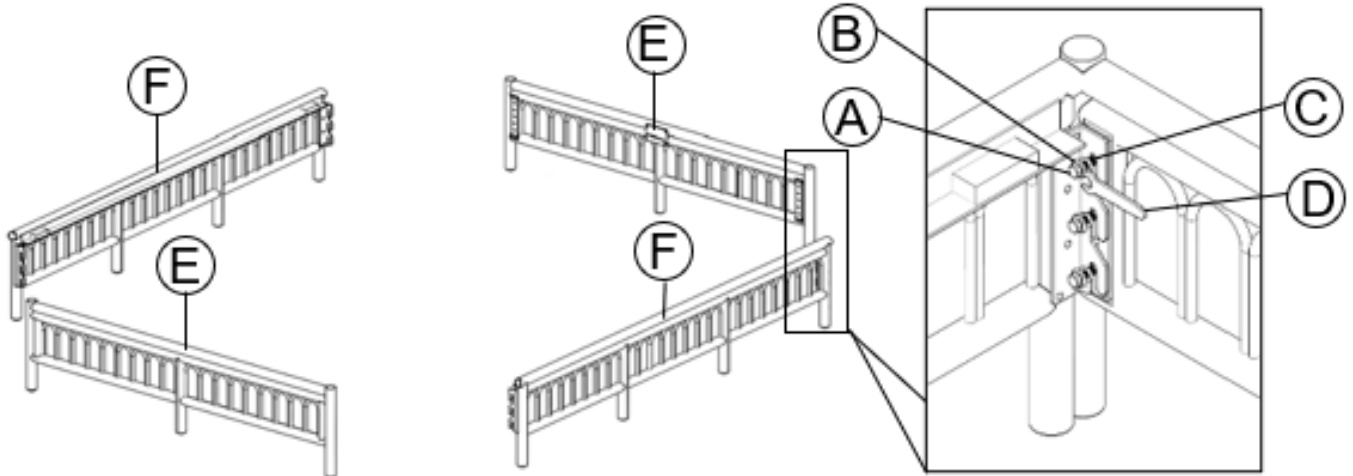

### STEP 2

Align the center rail (G) with the headboard and footboard (E), as shown, and press it firmly into place. Fully tighten the bolts (A) from STEP 1 with the wrench (D). With help, lay the roll slats (H) onto the bed frame. Ensure the blocks on the side rail (F), headboard, and footboard (E) are between the last two slats on either end of the roll slats (H).

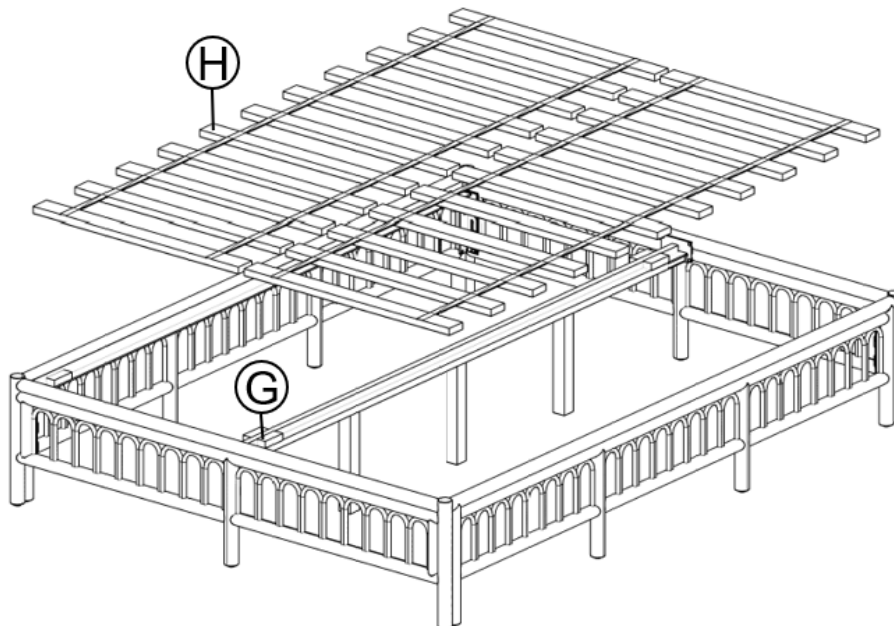

# ZOE BED FRAME FULL

## Assembly Instructions

### STEP 3

URBAN OUTFITTERS

Adjust the levelers as necessary to accommodate uneven floors.

