

MEADOW MIRROR

URBAN OUTFITTERS

Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED:


#2 Phillips head screwdriver
Pencil

WARNINGS:


Do not throw away packing materials and carton until after assembly. Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.
Do not place overheat or air conditioning vents.
Blot spills do not rub, with a clean white cloth.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.

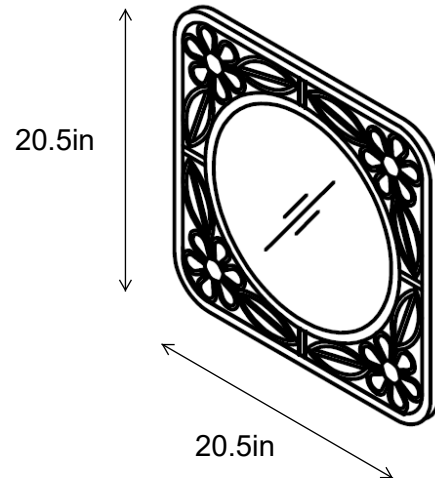

PARTS INCLUDED



A) Screw JP [#8 x
32mm] x2



B) Plastic Anchor
S6 x2



C) Mirror
x1

MEADOW MIRROR

URBAN OUTFITTERS

Assembly Instructions

STEP 1

Use the measurements in the graphic below to mark the location of the mirror's mounting hardware on your wall. If you are hanging the mirror on drywall, pre-drill for the wall anchors (B) at the marked locations and then insert them into the wall. Insert screws (A) into the wall anchors (B) and tighten, leaving about 1/4" of screw extending out from the wall surface. If drilling into a stud, drill screws (A) directly into the wall at the marked locations, leaving about 1/4" of screw extending out from the wall surface. Once screws (A) are secured on the wall, hang the mirror onto the screws. (C)

