

SWAN SIDE TABLE

URBAN OUTFITTERS

Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED: N/A

WARNINGS:

Do not throw away packing materials and carton until after assembly.

Assemble all parts on a clean smooth surface.

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight.

Do not place over heat or Air conditioning vents.


Blot spills do not rub, with a clean white cloth.

Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.

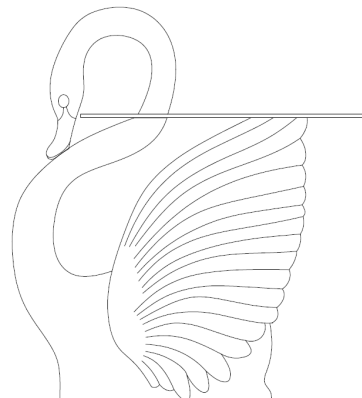

PARTS INCLUDED:

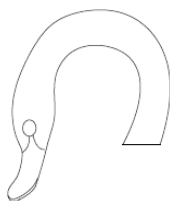


(A) Upper Body




(B) Plastic Washer
[D40 x 1.0mm] x2



(C) Glass Surface



(D) Plastic Pads
X4

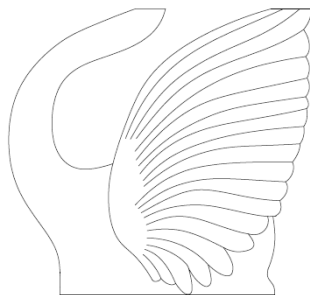


(E) Lower Body



(F) Metal Washer
[D9 x 1.5mm] x1



(G) Metal Screw
[M6 x 35 mm] x1



(H) Hex Wrench

SWAN SIDE TABLE

URBAN OUTFITTERS

Assembly Instructions

STEP 1

Carefully unpack and place all lamp parts on a flat surface.

STEP 2

Stick Plastic Pads (D) on the four corners of the flat surface of the Lower Body (E).

STEP 3

Insert Metal Screw (G) through Metal Washer (F) and insert to Lower Body (E).

STEP 4

Attach one Plastic Washer (B) on Metal Screw (G) then place Glass surface (C) on.

STEP 5

Place another Plastic Washer (B) on top of Glass surface (C) then put Upper Body (A) on top by securing Metal Screw (G) with Hex Wrench (H). Please aim the position correctly before securing.

STEP 6

Place to a proper location and enjoy your new table.

