CAMILLA KITCHEN ISLAND

URBAN OUTFITTERS

Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED: Phillips


head screwdriver

Do not throw away packing materials and carton until after assembly. Assemble all parts on a clean smooth surface


CARE INSTRUCTIONS:

Avoid direct exposure to sunlight. Do not place over heat or Air conditioning vents. Adjust levelers so that the furniture sits flat on uneven floors. Blot spills do not rub, with a clean white cloth. Do not use harsh chemicals. Before cleaning any part test a small spot in a hidden area. You may need to restighten all


cleaning any part test a small spot in a hidden area. You may need to re-tighten all bolts after initial use.

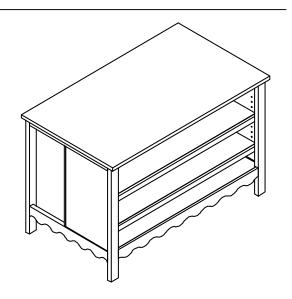

PARTS INCLUDED








(H) Bolt [1/4" x 1"] x29



(I) Spring washer [1/4" x 1"] x29



(J) Flat washer [1/4" x 1"] x29






(K) Shelf pin x8

(L) Screw [3,5 x 12mm] x8


Assembly Instructions

STEP 1


With help lay the Parts out onto a clean smooth surface such as carpet or cardboard. Align the Bottom Shelf (E) with the Center Panel Frame (D) as shown. Insert Flat Washer (J), Spring washer (I), and Bolt (H). Tighten with supplied Hex Key (G). Do not over tighten!

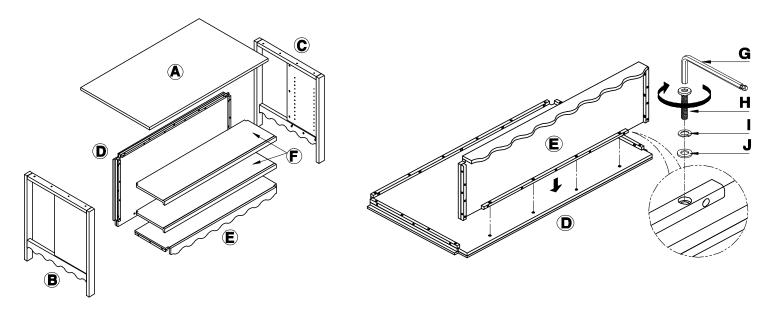

STEP 2 Align Shelf (E), (D) with Side Frame (C) and press firmly together. Insert Flat Washer (J), Spring washer (I), and Bolt (H). Tighten with supplied Hex Key (G). Repeat for the Side Frame (B), insert Flat Washer (J), Spring Washer (I), and Bolt (H). Tighten with supplied Hex Key (G). Do not overtighten. With help stand the Case Upright making sure you do not lean It on the legs as this can damage them.

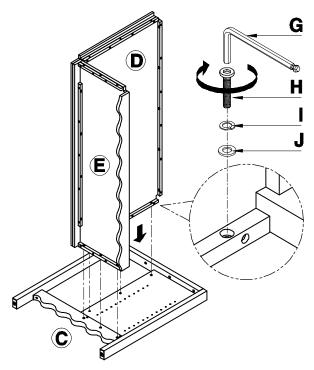


EXCLUSIVE AND CONFIDENTIAL PROPERTY OF URBAN OUTFITTERS, INC. © 2017 UO, Inc. All rights reserved, including all applicable copyright, design and patent rights. Any unauthorized reproduction, adaptation, distribution or other infringement will be prosecuted.

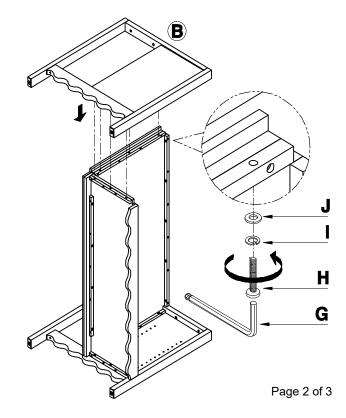

Assembly Instructions

STEP 3


Attaching the Top Panel (A) to the Side Panels, align Top and press firmly into place. Insert Flat Washer (J), Spring Washer (I), and Bolt (H). Tighten with supplied Hex Key (G).

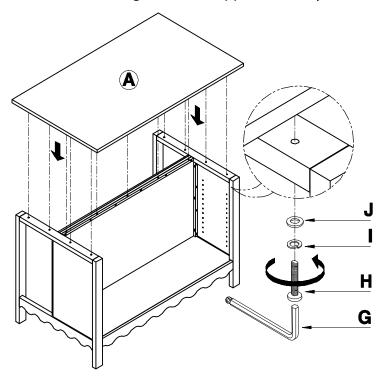

STEP 4

The Shelves (F) will have to twist 45 Degrees to get into the Side Frames. Locate the Holes in the side frames. Align the Shelf Pin (K) to the Side Frames and press firmly into place as shown. Insert wood Screw (L) into the Shelf Pin (K) and screw down with a Phillips head screwdriver (not included). Do not over tighten.

Turn the adjustable feet so the case sits flat on the ground.

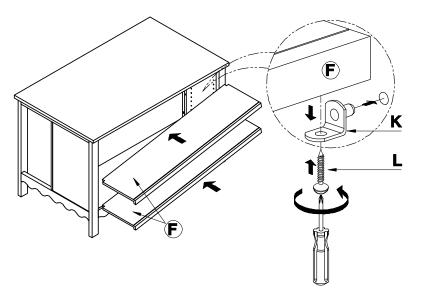

EXCLUSIVE AND CONFIDENTIAL PROPERTY OF URBAN OUTFITTERS, INC. © 2017 UO, Inc. All rights reserved, including all applicable copyright, design and patent rights. Any unauthorized reproduction, adaptation, distribution or other infringement will be prosecuted.

