

WIATT SCONCE

Assembly Instructions

URBAN OUTFITTERS


TOOLS REQUIRED BUT NOT INCLUDED:
Phillips Screwdriver, Tape measure, Pencil

WARNINGS:

Do not throw away packing materials and carton until after assembly.
Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight. Do not place over heat or Air conditioning vents. Blot spills do not rub, with a clean white cloth.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.

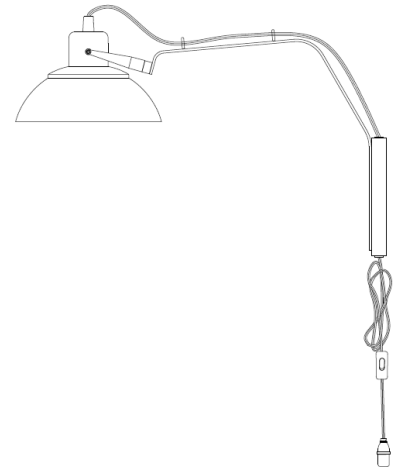


PARTS INCLUDED



A) Anchors x2



B) Screws
[M4x25mm] x2

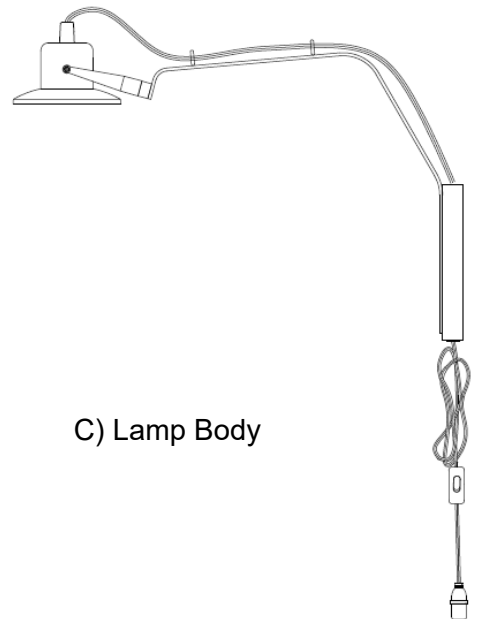

C) Lamp Body



D) Shade



E) Socket Ring

Assembly Instructions

STEP 1: Located the desired position of the sconce on the wall and mark the position through the keyholes in the back of the sconce. Ensure the sconce is level before marking the holes on the wall.

STEP 2: Contact your local hardware store for the correct anchors for your wall-type.

STEP 3: Secure the two anchors (A) into the wall, insert two screws(B) into anchors (A) and attach body(C) onto the wall.

STEP 4: Put the lamp shade (D) onto the lamp body and then secure with socket ring (E).

STEP 5: Plug into outlet, turn on switch, and enjoy your new lamp

Use a 60W (MAX) Type A incandescent bulb or a 10W CFL bulb. Do not use bulb that exceeds recommended wattage.

