

OLLIE SHELF

URBAN OUTFITTERS

Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED:

Drill, Phillips head screwdriver, Hammer, Pencil

WARNINGS:

Two people recommended for assembly

Do not discard packing materials and the carton until assembly is complete. Ensure all parts are present prior to assembly.

Contact customer service immediately if any parts are missing.

Assemble all parts on a clean, smooth surface.

Young children may be injured by tipping furniture.

The use of a tipping restraint is necessary to ensure product safety.

**The tipping restraint is only a deterrent,
it is not a substitute for proper adult supervision.**

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.

Blot spills with a clean, white cloth; do not rub.


Do not use harsh chemicals.

Before cleaning any part, test a small spot in a hidden area.


Do not place over heat or air conditioning vents.

Do not over-tighten the parts.


The parts may loosen after initial use; re-tighten as necessary.

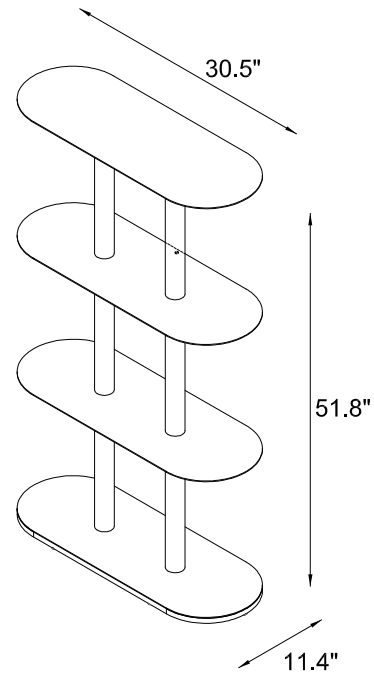


PARTS INCLUDED:

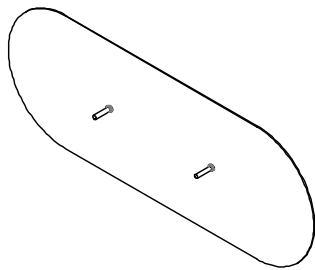


A) Top Shelf

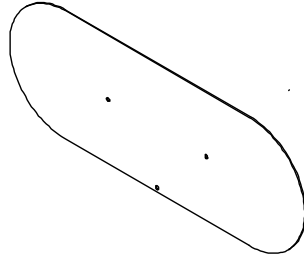


B) Second Shelf

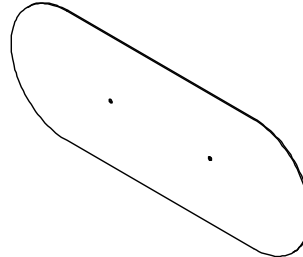


C) Third Shelf

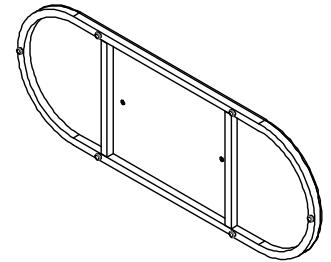


D) Bottom Shelf

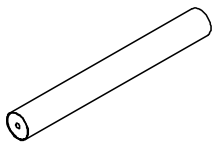

E) Threaded Metal tube x 4

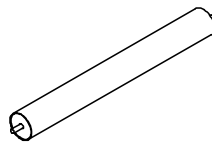


F) Studded Metal tube x 2



G) Bolt [M8xL30mm] x 2



H) Allen Key (5mm)



I) Wall Screw [4x32] x2



J) Drywall Anchor x2



K) Anti-tip Kit



L) Nylon Strap


OLLIE SHELF

Assembly Instructions

URBAN OUTFITTERS

STEP 1

Lay down all the parts on a clean carpet or cardboard for assembly. Screw (x2) threaded metal tubes (E) clockwise into the top shelf (A). Align the second shelf (B), studed metal tubes (F), third shelf (C) and remaining threaded metal tubes (E), as shown and screw the parts together clockwise, until tight. Insert bolts (G) though the bottom shelf (D), as shown, and fully tighten the bolts with allen key (H). With help, flip the shelf upright.

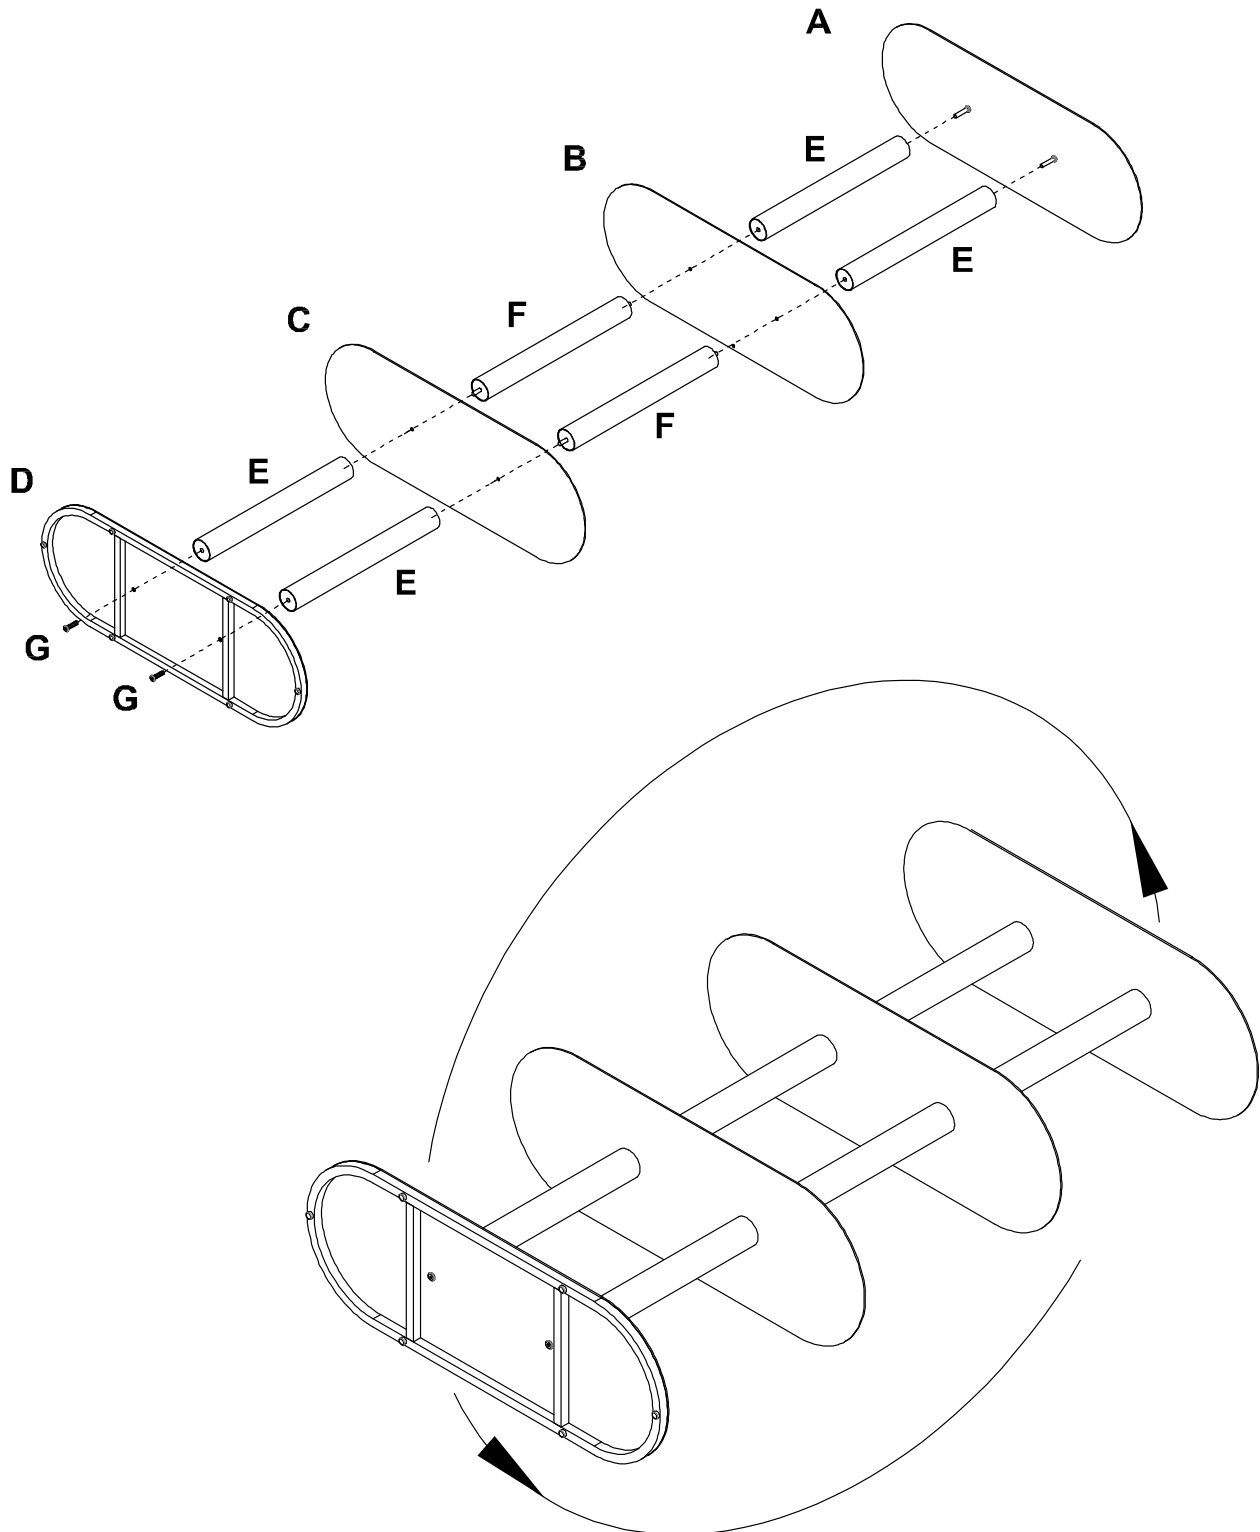

Assembly Instructions

STEP 2

Place the shelf against the wall in its desired location then, place the tip kit on the wall below the top shelf, as shown, and mark the location of the hole in the anti tip kit (K) on the wall.

Wood or Stud Installation:


Insert screws (I) through the anti-tip kit (K) into the wall and tighten with a Phillips head screwdriver.

Drywall Installation:

Attach the drywall anchor (J) to the wall at the marked location using a drill and hammer. Insert screw (I) through the anti-tip kit (K) into the drywall anchor (J) and tighten with a Phillips head screwdriver.

STEP 3

Feed the Nylon strap (L) through the anti-tip kit (K) and around the entryway storage then, pull the nylon strap tight.

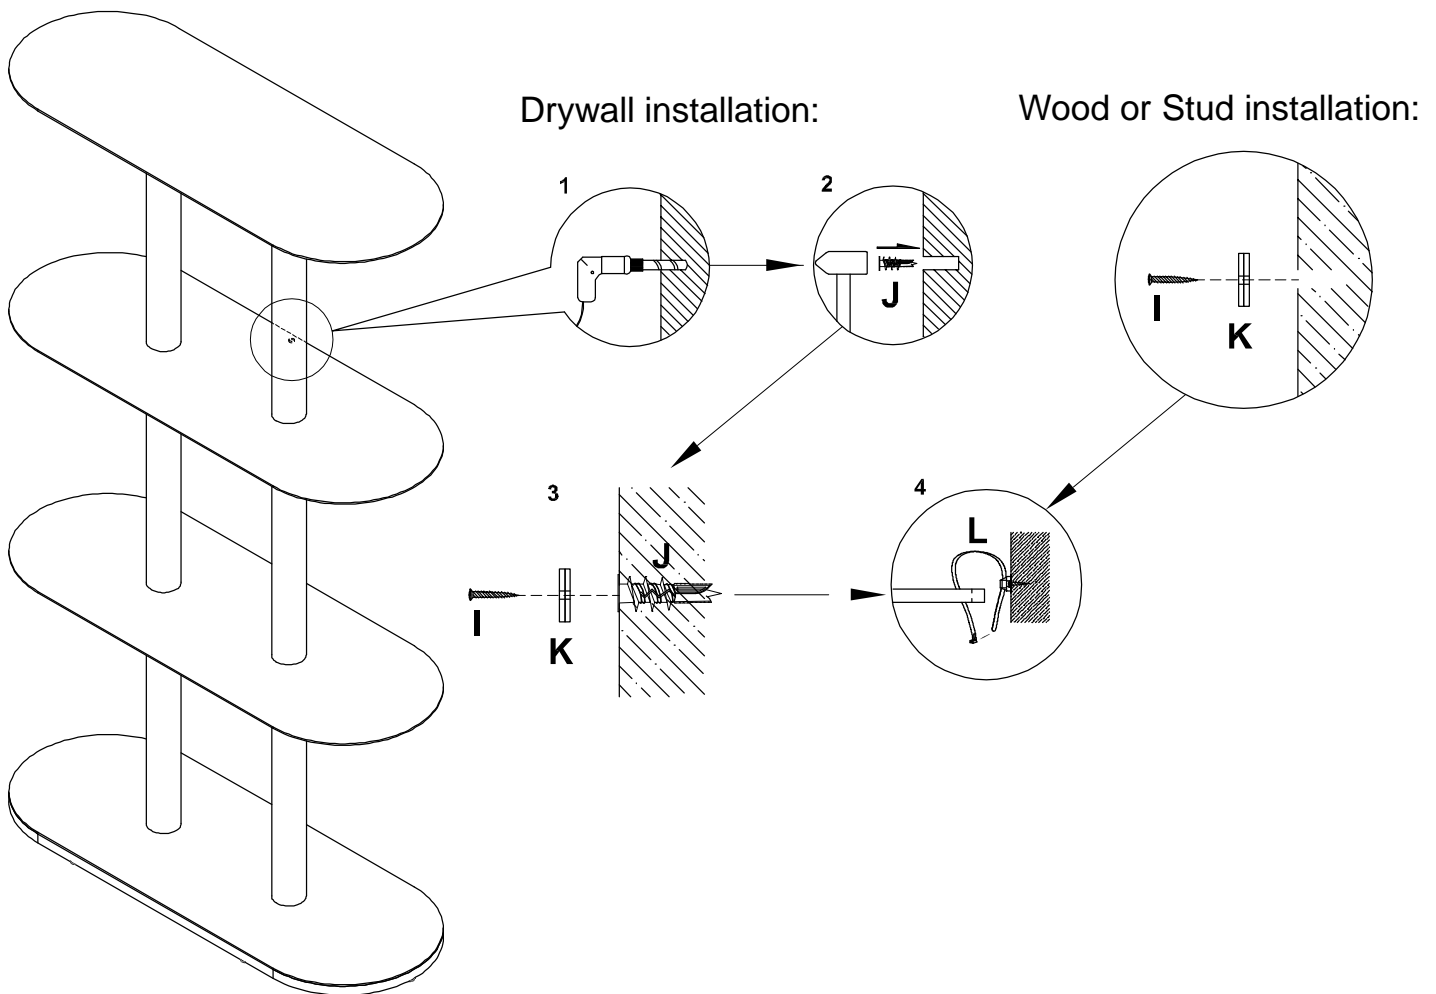

Warning: Young children may be injured by tipping furniture and the use of a tipping restraint is highly recommended. The tipping restraint is only a deterrent it is not a substitute for proper adult supervision.