

# MARTE DISPLAY SHELF

URBAN OUTFITTERS

## Assembly Instructions

---

### TOOLS REQUIRED BUT NOT INCLUDED:

#2 Phillips head screwdriver

Pencil

### WARNINGS:

Do not throw away packing materials and carton until after assembly. Assemble all parts on a clean smooth surface


### CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.

Do not place overheat or air conditioning vents.


Blot spills do not rub, with a clean white cloth. Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.

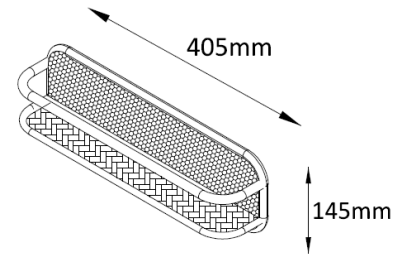

## PARTS INCLUDED


---



A) Screw JP  
(#8 x 30mm) x2



B) Plastic Anchor  
S6 x2

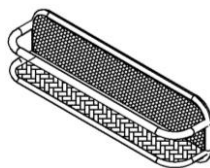

C) Shelf  
x1

### STEP 1

Use the measurements in the graphic below to mark the location of the shelf mounting hardware on your wall. If you are hanging the shelf (C) on drywall, pre-drill for the wall anchors (B) at the marked locations and then insert them into the wall. Insert screws (A) into the wall anchors (B) and tighten, leaving about 1/4" of screw extending out from the wall surface. If drilling into a stud, drill screws (A) directly into the wall at the marked location, leaving about 1/4" of extending out from the wall surface. Once screws (A) are secured on the wall, hang the shelf (C) onto the screws (A).

