

OPHELIA BISTRO TABLE

URBAN OUTFITTERS

Assembly Instructions


TOOLS REQUIRED BUT NOT INCLUDED: N/A

WARNINGS:


Do not throw away packing materials and carton until after assembly. Assemble all parts on a clean smooth surface.

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight. Do not place overheat or air conditioning vents. Adjust levelers so that the furniture sits flat on uneven floors. Blot spills do not rub, with a clean white cloth. Do not use harsh chemicals. Before cleaning any part test a small spot in a hidden area. You may need to re-tighten all bolts after initial use.

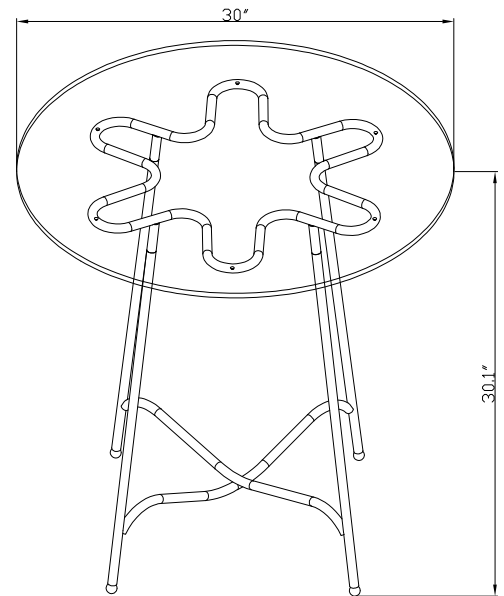



PARTS INCLUDED

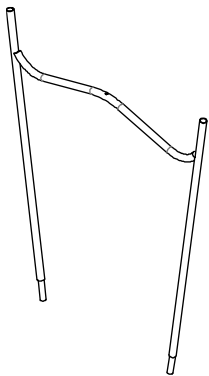

(A) Metal Frame Leg - A
x1

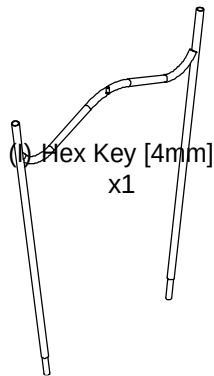

(B) Metal Frame Leg - B x1

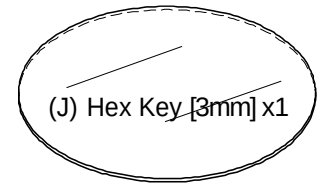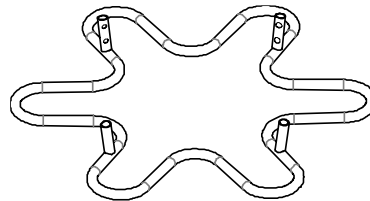

(E) Clear Plastic Bumper
Cup x6



(F) Metal Ball
x4




OPHELIA BISTRO TABLE


URBAN OUTFITTERS

Assembly Instructions

(C) Metal Flower frame
x1



(D) Glass x 1

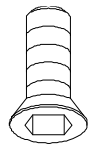

(G) Bolt
[M6 x 25mm] x1

(H) Bolt
[M5 x 5mm] x8


OPHELIA BISTRO TABLE

URBAN OUTFITTERS

Assembly Instructions


STEP 1

Assemble Metal ball (F) on Frame leg (A), & frame leg (B).

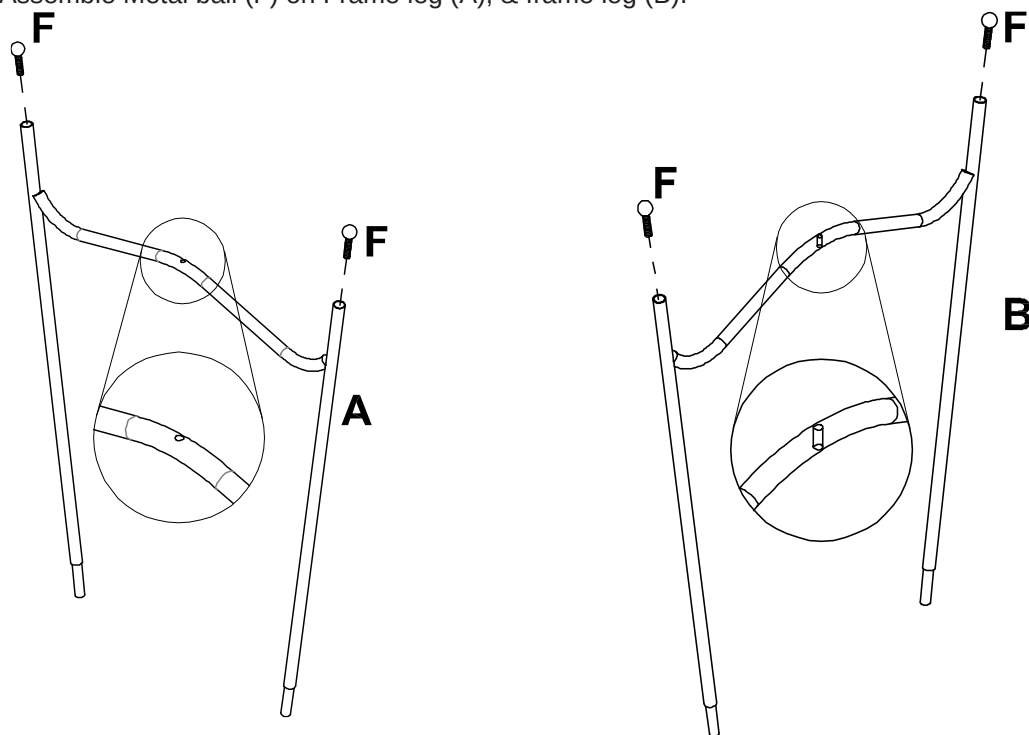

STEP 2

Lay down all the parts on the clean carpet or cardboard for assembly. Align Metal flower Frame (C) & Metal Frame Leg (A). Insert screws (H) and partially tighten with Hex Key (J). Once all screws are inserted and partially tightened, tighten all screws completely.

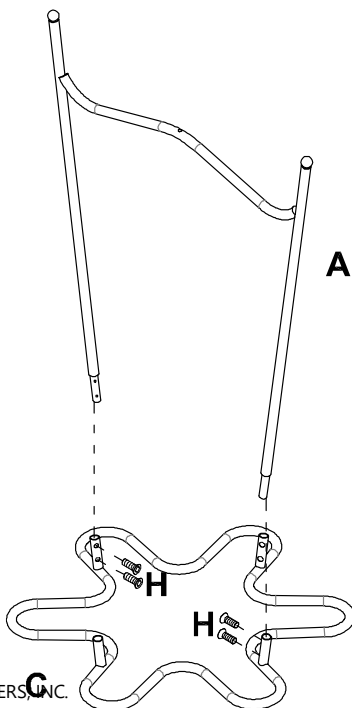



OPHELIA BISTRO TABLE

URBAN OUTFITTERS

Assembly Instructions

STEP 3

Align Metal flower Frame (C) & Metal Frame Leg (B). Insert screws (H) and partially tighten with Hex Key (J). Once all screws are inserted and partially tightened, tighten all screws completely. Place the Bistro table in correct position as below.

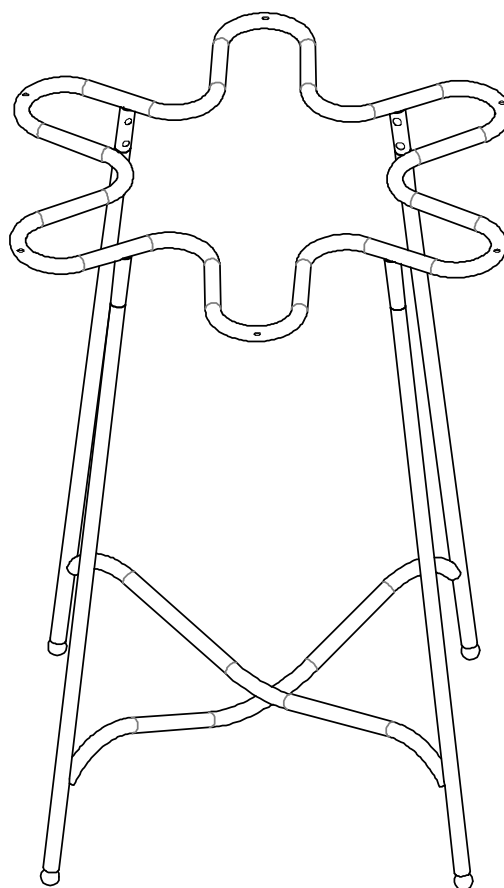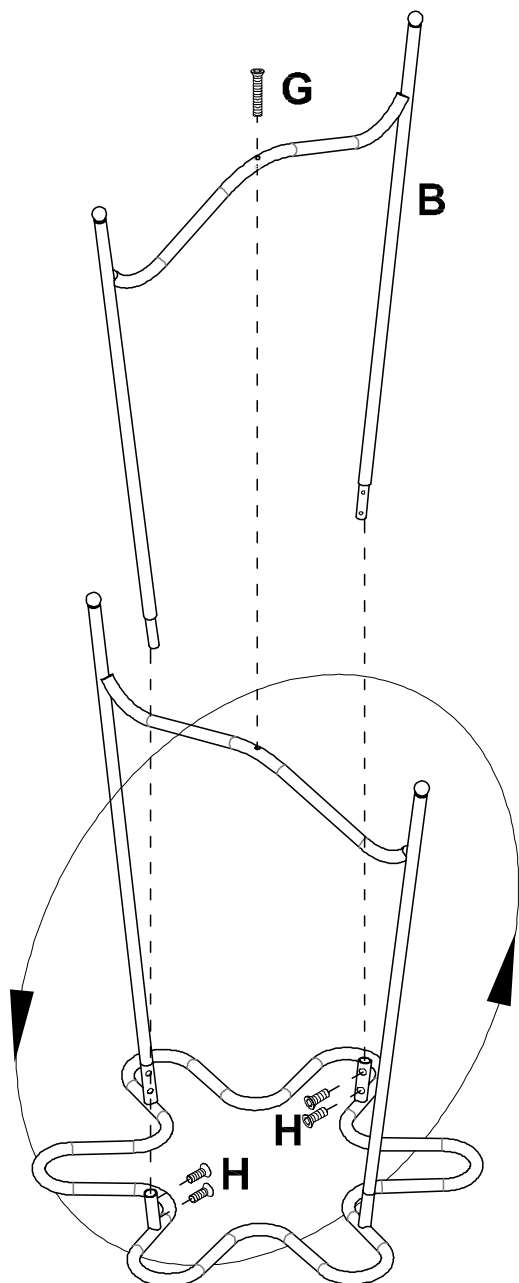

OPHELIA BISTRO TABLE

URBAN OUTFITTERS

Assembly Instructions

STEP 4

Insert Clear Plastic Bumpers (E) into the frame. Gently place the Glass (D) on the assembled Bistro table.

