

Arch Storage Cabinet

Assembly Instructions

URBAN OUTFITTERS

TOOLS REQUIRED BUT NOT INCLUDED:

Phillips head screwdriver

WARNINGS:

Do not throw away packing materials and carton until after assembly. Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight. Do not place overheat or air conditioning vents. Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills do not rub, with a clean white cloth


Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.


You may need to re-tighten all bolts after initial use.

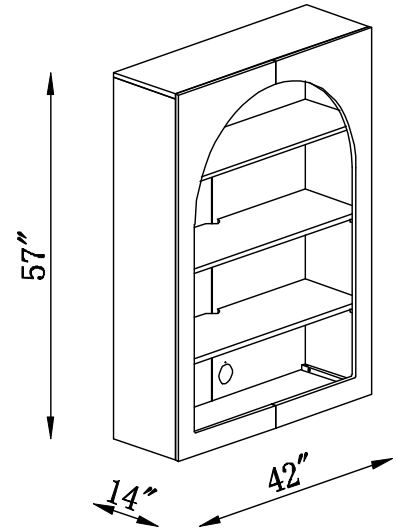

PARTS INCLUDED

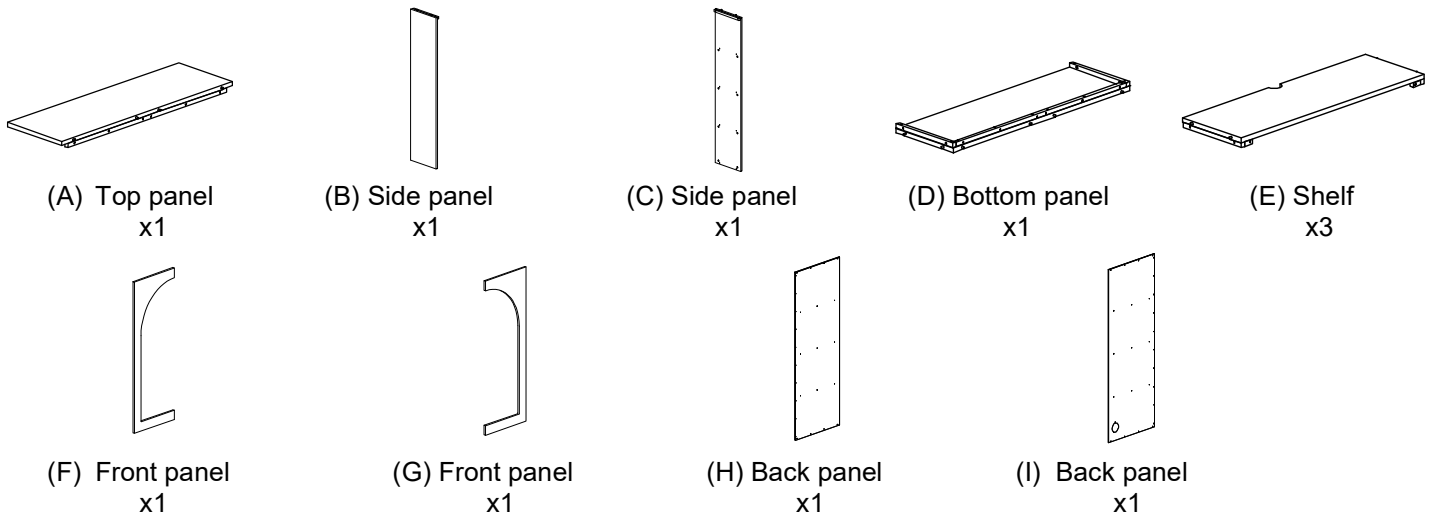

HARDWARE LIST

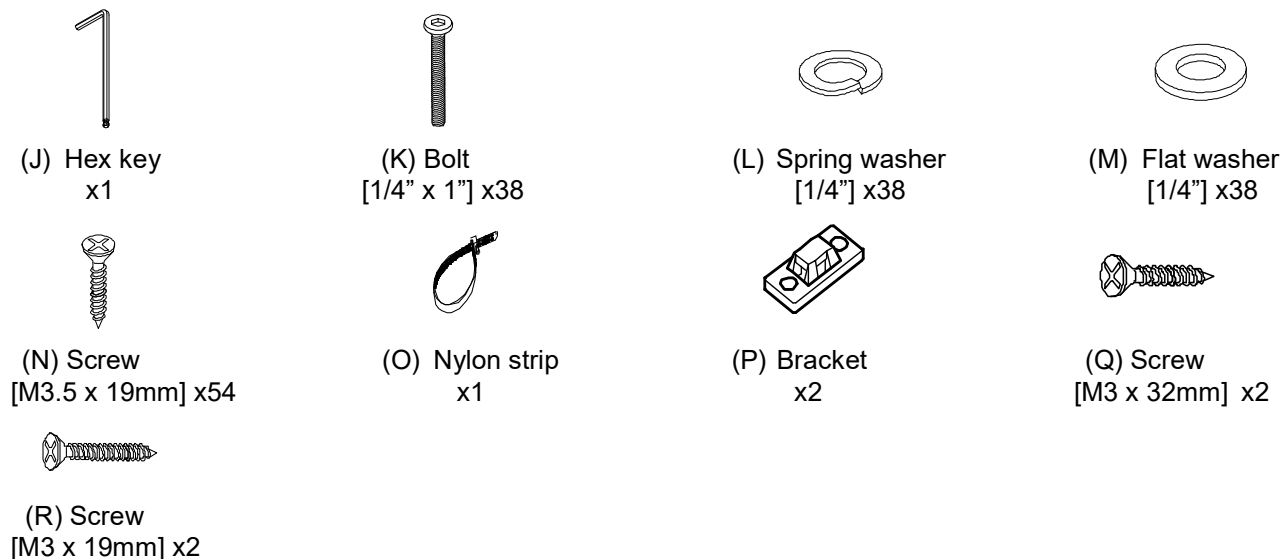


Arch Storage Cabinet

Assembly Instructions

URBAN OUTFITTERS


STEP 1

With help, lay the Parts out onto a clean smooth surface such as carpet or cardboard. Align the Shelves (E) and the Bottom panel (D) with the Side Panels (B&C) and press firmly into place as shown. Insert Flat Washer (M), Spring Washer (L) and Bolt (K) as shown. Tighten with supplied Hex Key (J), do not over-tighten.

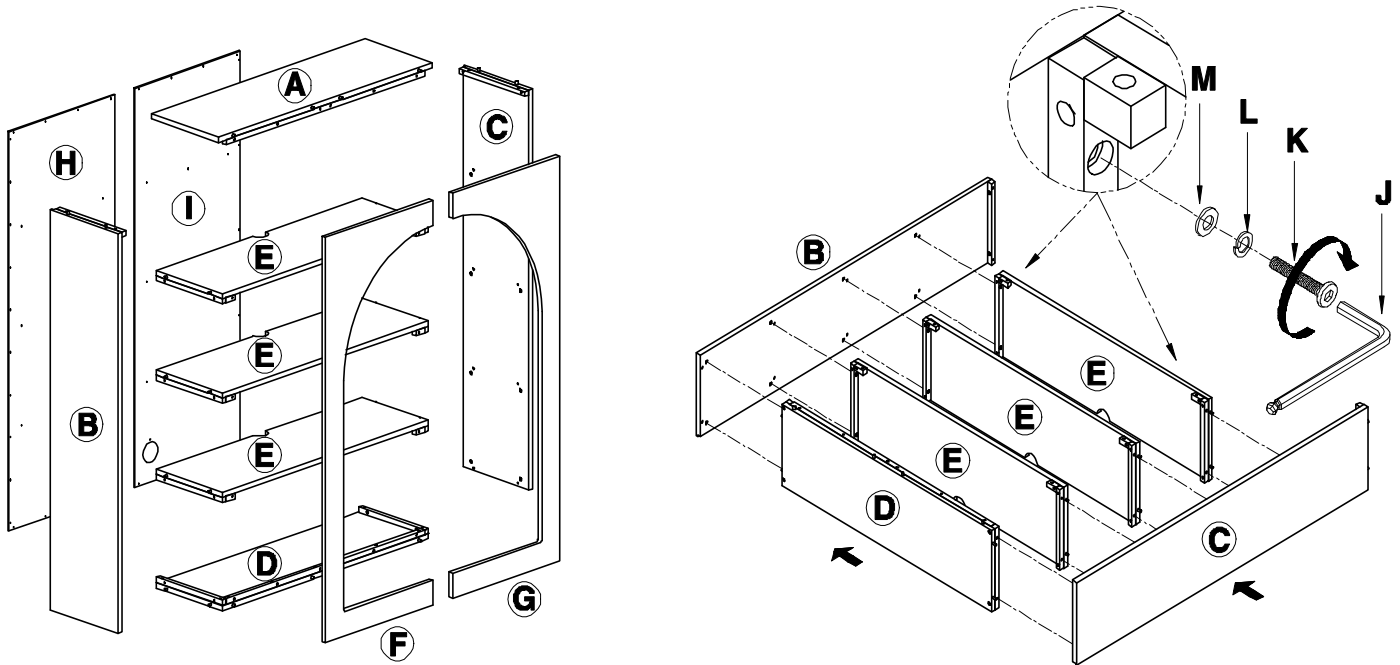

STEP 2

Place the Top Panel (A) on top of the partially assembled case as shown. Insert Flat Washer (M), Spring Washer (L) and Bolt (K) as shown. Tighten with supplied Hex Key (J), do not over-tighten. With help stand the case upright making sure you do not lean it on the panels as this can cause damage. Align the Front Panels (F&G) as shown. Insert Flat Washer (M), Spring Washer (L) and Bolt (K) as shown. Tighten with supplied Hex Key (J), do not over-tighten.

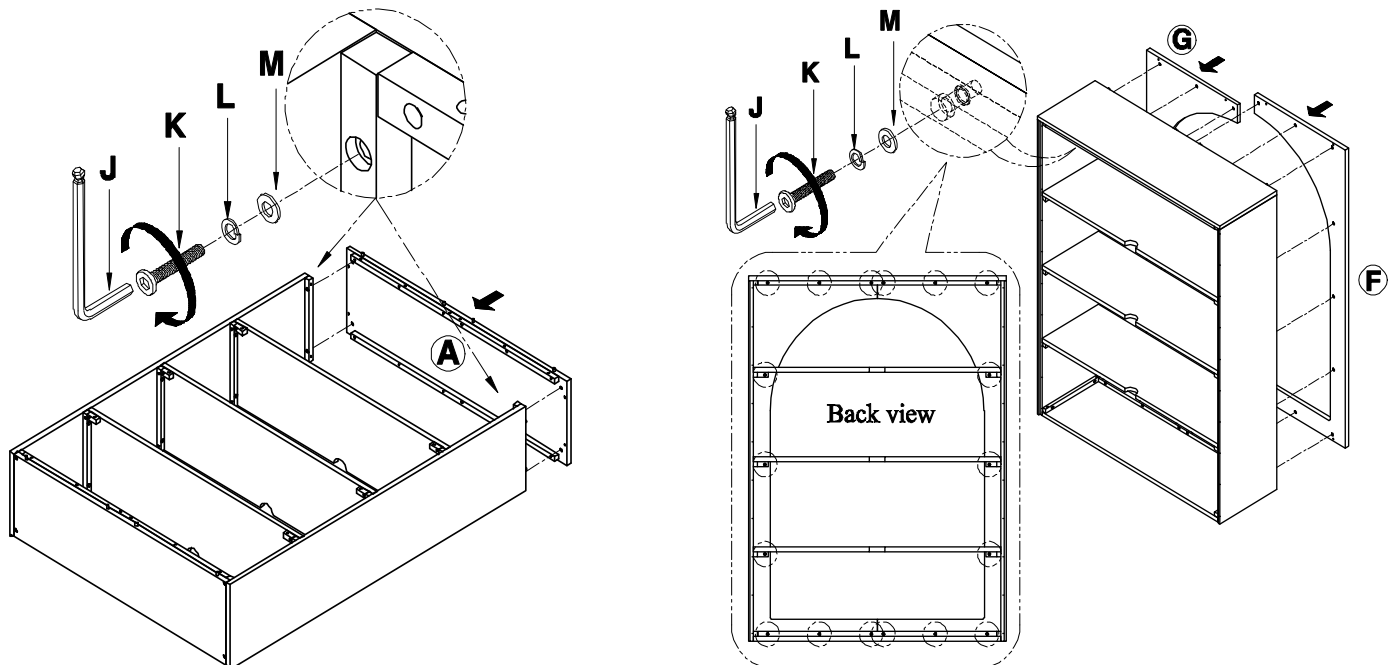


Arch Storage Cabinet

Assembly Instructions

URBAN OUTFITTERS

STEP 3

Align the Back Panels (H&I) as shown. Insert Screws (N) making sure they are centered on panel edges. Tighten with a Phillips head screwdriver (not included).

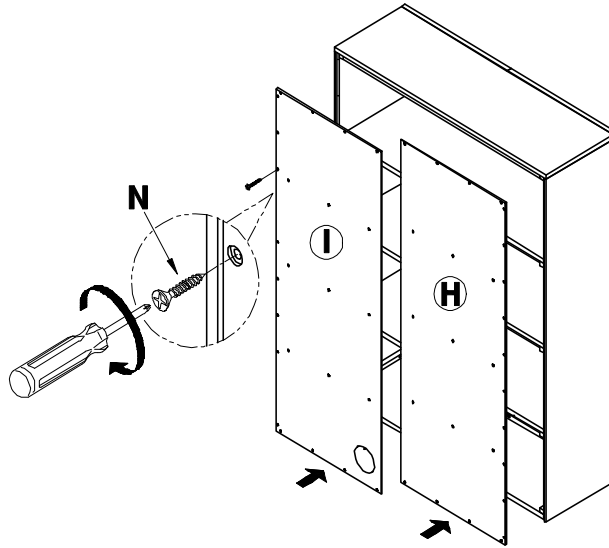

STEP 4

- a) Align the Anti Tip Brackets (P) to the Top back of the Case. Insert Screws (Q) and tighten completely. Do not over-tighten.
- b) Contact your local hardware store to purchase the correct anchors for your wall-type.
- c) Align the second Anti Tip Bracket (P) to the wall and make sure they lines up with the brackets on the back of the case from step (a).
- d) Screw the bracket to the wall using the correct anchors.
- e) Slide the case to the wall leaving a little bit of room between the case and the wall.
- f) Feed the Nylon Strap through both brackets and pull tight.

