

RYAN 4 TIER SHELF

URBAN OUTFITTERS

Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED:

Phillips head screw driver

Do not throw away packing materials and carton until after assembly. Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight. Do not place overheat or air conditioning vents.

Adjust levelers so that the furniture sits flat on uneven floors.


Blot spills do not rub, with a clean white cloth.

Do not use harsh chemicals.


Before cleaning any part test a small spot in a hidden area. You may need to re-tighten all bolts after initial use.

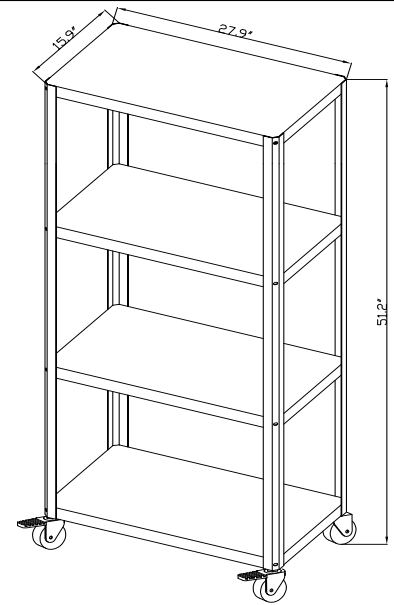


PARTS INCLUDED



A) Metal Frame Leg
x4




B) Metal Sheet
x4



C) Bolts
[M6 x 10mm] x16




D) Hex Key
x1

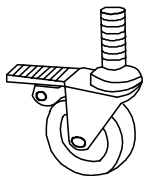


E) Locking Casters
x4



F) Open Wrench
x1




G) Open Wrench
x1



H) Drywall Anchor
x2



I) Screws
x2



F) Anti-tip kit
x1



G) Nylon Straps
x1



RYAN 4 TIER SHELF

URBAN OUTFITTERS

Assembly Instructions

STEP 1

Lay down all the parts on the clean carpet or cardboard for assembly. Align Metal Frame Leg (A) & metal sheet (B). Insert screws (C) and partially tighten with hex key (G). Insert locking casters (D) into flat washer (E) as shown, and screw castors into the Frame Leg (A) completely. Once all screws are inserted and partially tightened, tighten all screws completely.

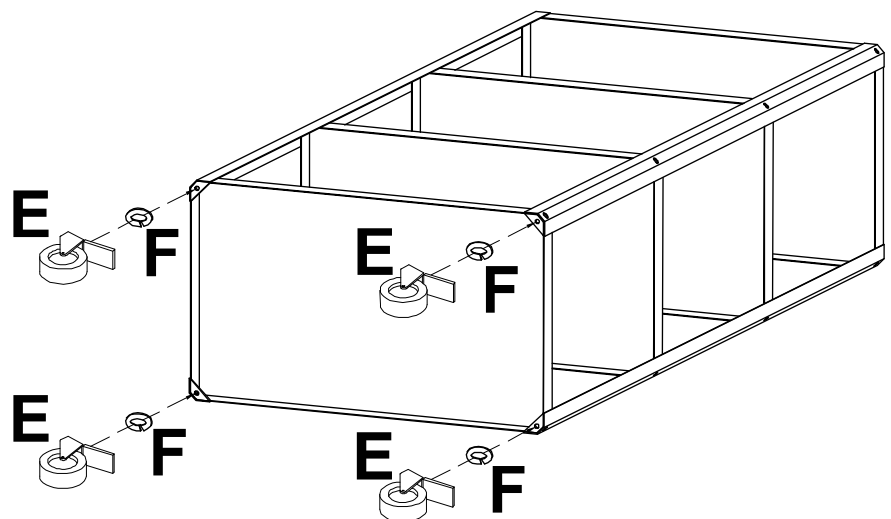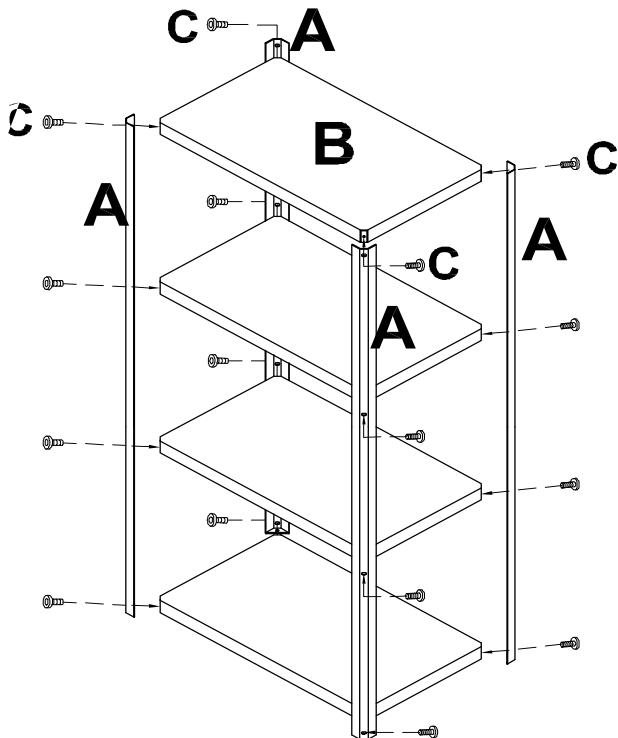

RYAN 4 TIER SHELF

URBAN OUTFITTERS

Assembly Instructions

STEP 1

Place the Anti-tip bracket (J) against the wall in its desired location and mark the location of the holes on the wall. Screw the drywall anchors (H) into the wall at the marked locations. Place the Anti-tip bracket (J) back against the wall and insert screws (I) through the Anti-tip bracket (J) into the drywall anchors (H). Push the assembled shelf against the wall and wrap the nylon strap (G) around the Metal Frame leg (A) and through the anti-tip bracket (J). Insert the end of the nylon strap (G) through the hole in its end and pull tight to secure.

