

BODEN BOOKSHELF

Assembly Instructions

URBAN OUTFITTERS


TOOLS REQUIRED BUT NOT INCLUDED
Drill, Phillips head screwdriver, Hammer, Pencil

WARNINGS:


At least two people recommended for assembly
Do not throw away packing materials and carton until after assembly.
Ensure all parts are present prior to assembly.
Contact customer service immediately if parts are missing.
Assemble all parts on a clean smooth surface.
Young children may be injured by tipping furniture.
The use of a tipping restraint is necessary to ensure product safety.
The tipping restraint is only a deterrent,
it is not a substitute for proper adult supervision.

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight.
Do not place overheat or air conditioning vents.
Adjust levelers so that the furniture sits flat on uneven floors.
Blot spills with a clean white cloth, do not rub.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.

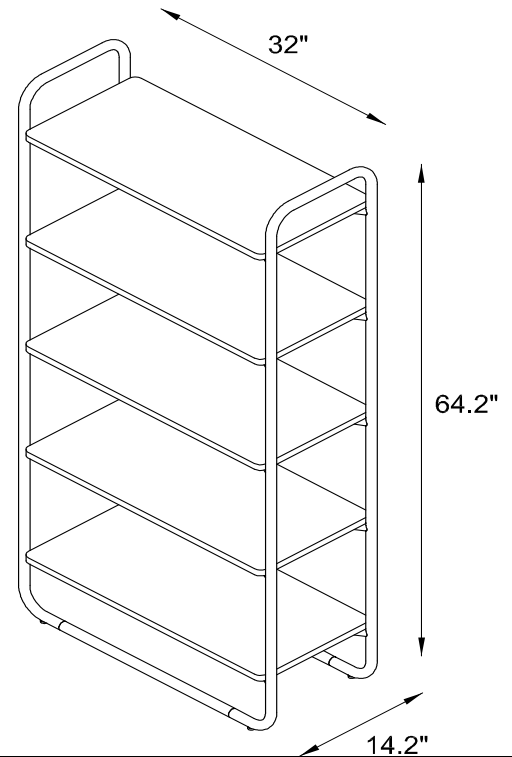


PARTS INCLUDED

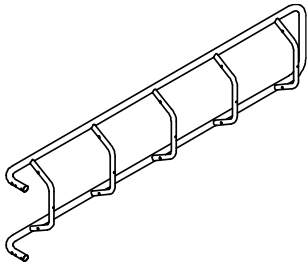


A) Metal Frame X2

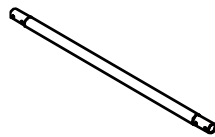

B) Bottom Cross Rail x 2

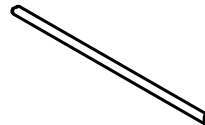


C) Cross Rail x 5

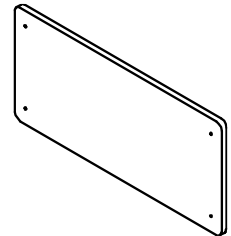


D) Wooden Shelf x 5



E) Bolt [M6xL10mm] x 8

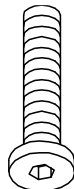

F) Bolt [M6xL32mm] x 30

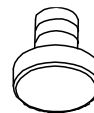


G) Adjustable levelers x 4



H) Wall screw [4x32] x2



I) Drywall Anchor x2

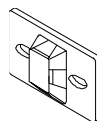

J) Anti-tip bracket




K) Nylon Strap



L) Allen Key (4mm)


STEP 1

Lay down all the parts onto clean carpet or cardboard for assembly. Align metal frame (A) with Bottom Cross Rails (B) and Cross Rail (C). Insert Bolts (F) and partially tighten with Allen Key (L). Once all bolts are inserted and partially tightened, fully tighten the bolts. Screw adjustable Levelers (G) into Metal Frame.

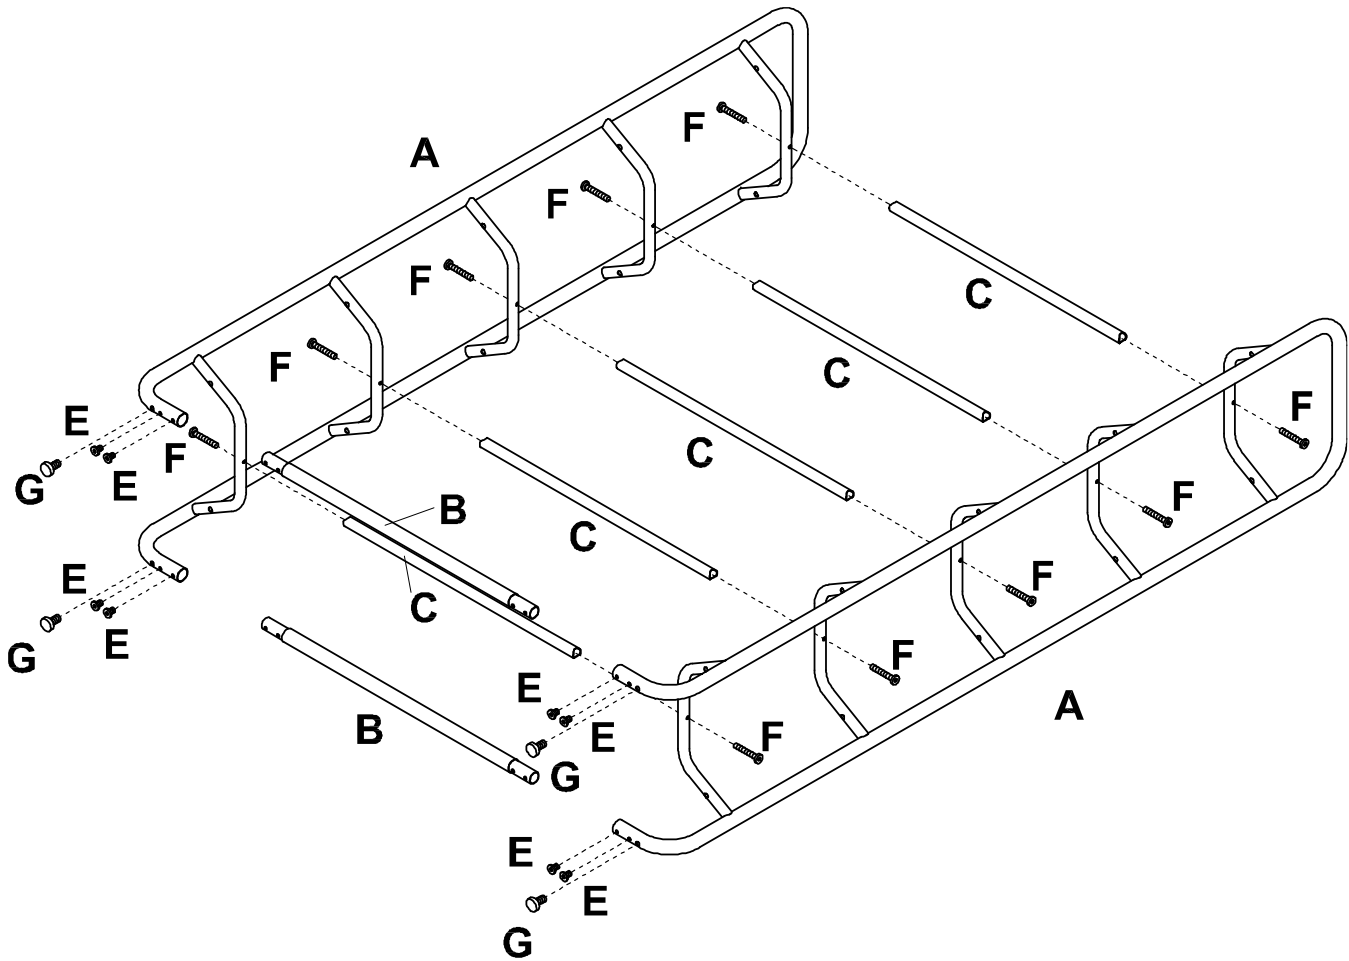

STEP 2

Align wood shelves (D) with the partially assembled bookshelf frame. Insert Bolts (F) and partially tighten with Allen Key (L). Once all Bolts are inserted and partially tightened, fully tighten the bolts. With help, flip the Bookshelf upright.

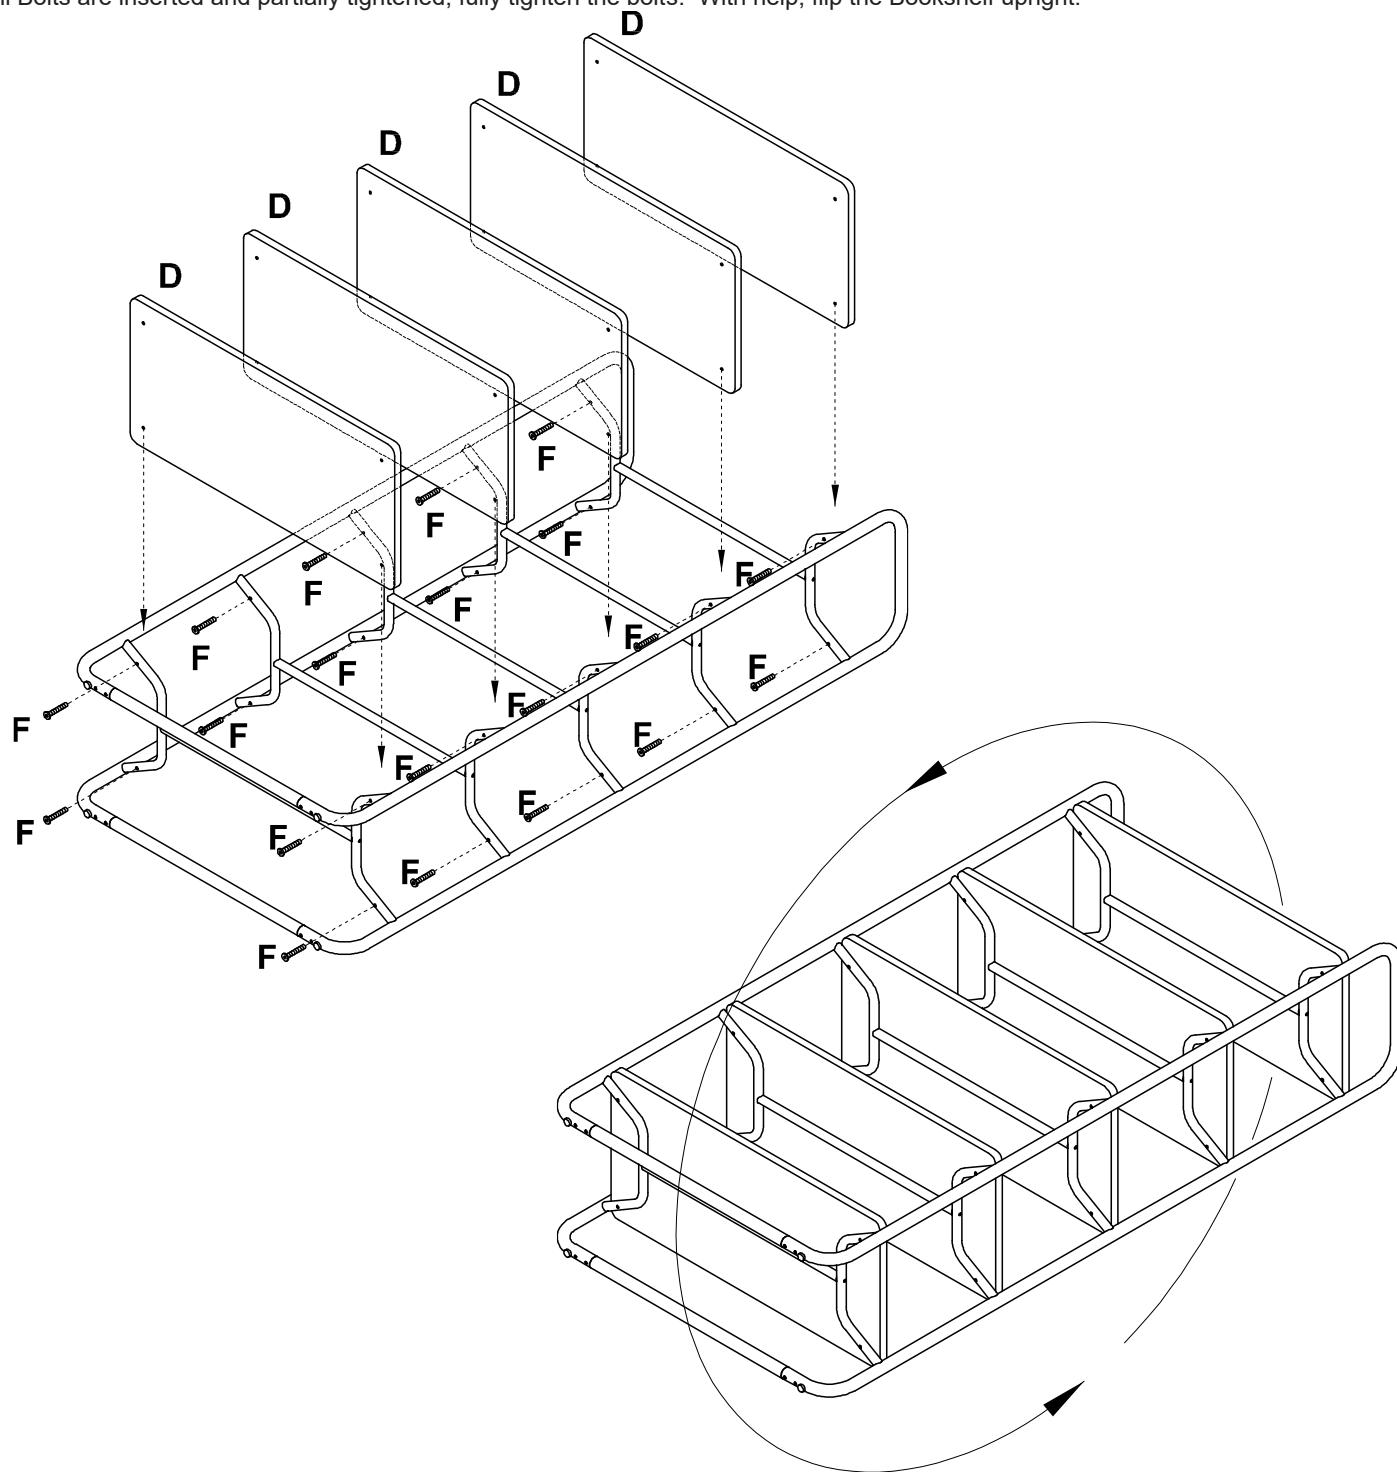

Assembly Instructions

STEP 3

Place the bookshelf against the wall in a chosen location and mark the wall through the hole in the Anti-tip Bracket (J).


Wood or Stud installation:

Insert the screw (H) through the Anti-tip Bracket (J) and use a Phillips head screwdriver to fasten the Screw (O) directly into the wall at the marked location.

Drywall installation:

Insert Anchor (I) into the wall at the marked location using a drill and a hammer. Insert Screws (H) through the Anti-tip Bracket (J) and into the anchors, then tighten with a Phillips head screwdriver.

The included hardware is intended for attachment to drywall or wooden wall surfaces, contact your local hardware store to find the correct anchor for alternative wall-types such as stone or brick.

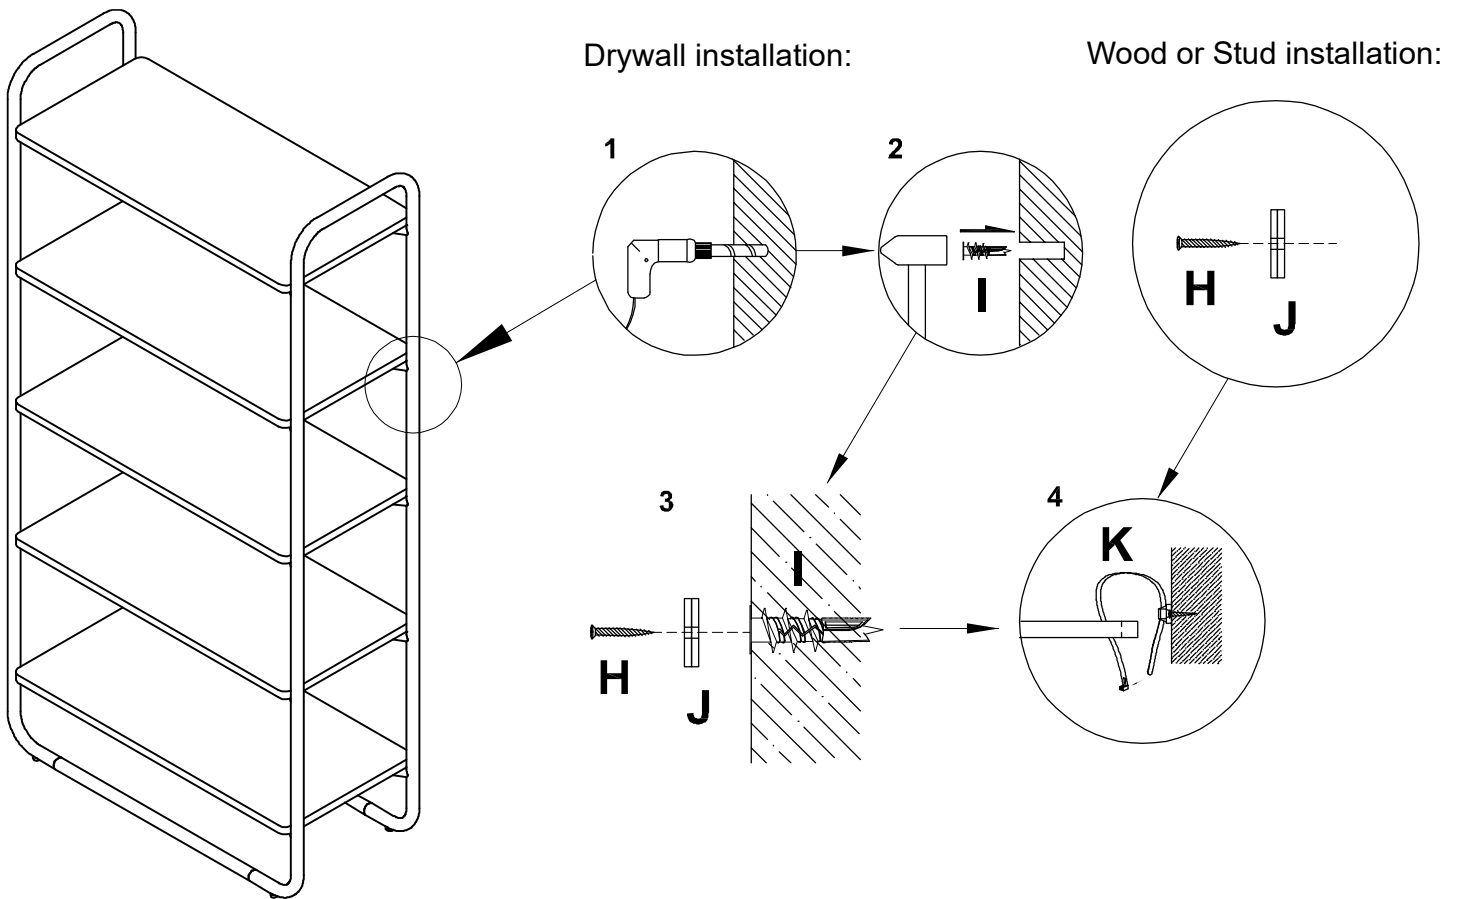

Warning: Young children may be injured by tipping furniture and the use of a tipping restraint is highly recommended. The tipping restraint is only a deterrent; it is not a substitute for proper adult supervision.