

ZOE MEDIA CABINET

URBAN OUTFITTERS

Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED:


Drill, #2 Phillips head screwdriver / bit, Hammer, Pencil

WARNINGS:

Do not throw away packing materials and carton until after assembly.
Ensure all parts are present prior to assembly.
Contact customer service immediately if parts are missing.
Assemble all parts on a clean smooth surface.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.
Do not place over heat or Air conditioning vents.
Dust your wood furniture often to prevent the buildup of dust.
Blot spills do not rub, with a clean white cloth.
Before cleaning any part test a small spot in a hidden area.
Natural Fiber products are designed to be used under cover.
Clean spills with a damp cloth with warm water only.
Do not use any harsh chemicals, abrasive cleaners or silicone or alcohol-based agents on woven materials.

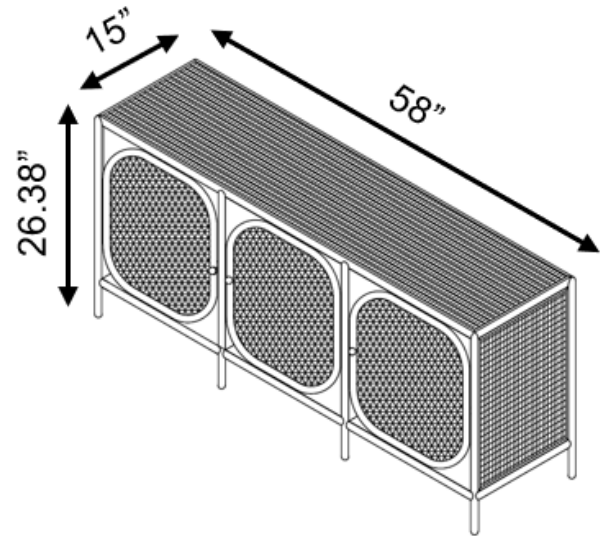

PARTS INCLUDED:




(A) Screw JP
(#8 x 3/4") x2



(B) Screw JP
(#8 x 2") x2




(C) Plastic Anchor
(S6) x2

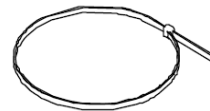

(D) Tipping Restrain
x2




(E) Bracket
x4

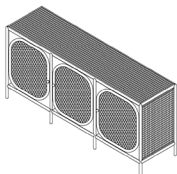

(F) Cabinet
x1


STEP 1

Use a Phillips head screw driver to remove the knobs from inside the cabinet doors and carefully set aside the screws. Align the Knobs with the front of the door frame as shown. Insert the screws through the back of the door frame into the knobs and tighten with a Phillips head screw driver as shown.

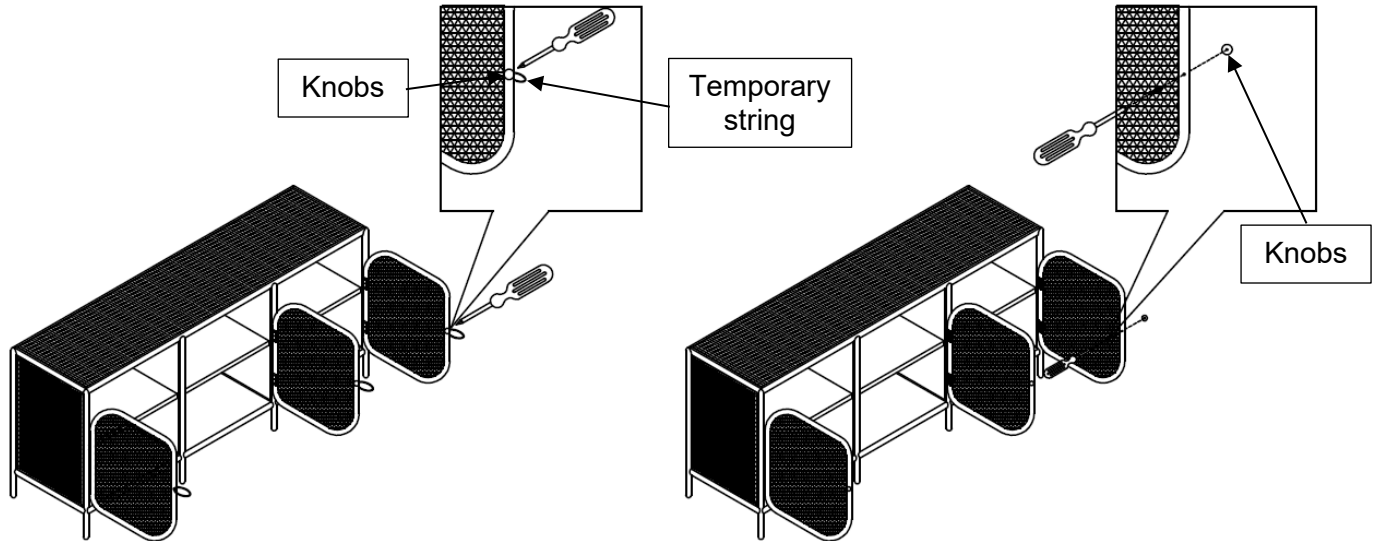


STEP 2

To free the adjustable shelves, remove the screws in the bottom of the shelves attaching them to the shelf clips and carefully set aside the screws. Carefully remove the shelves, then adjust the position of the shelf clips. Ensure the shelf clips are all at the same height, then carefully place the shelves back into the cabinet. Screw attachment is optional.

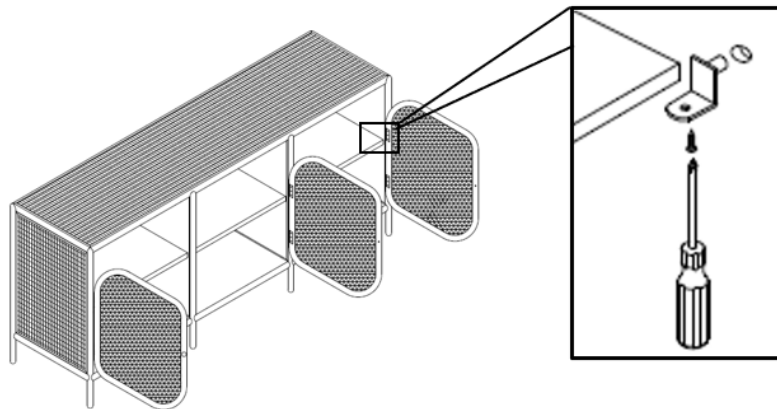

STEP 3

If the floor is uneven, or the gap between the doors is uneven, adjust the levelers in the bottom of the cabinet to ensure it is level.

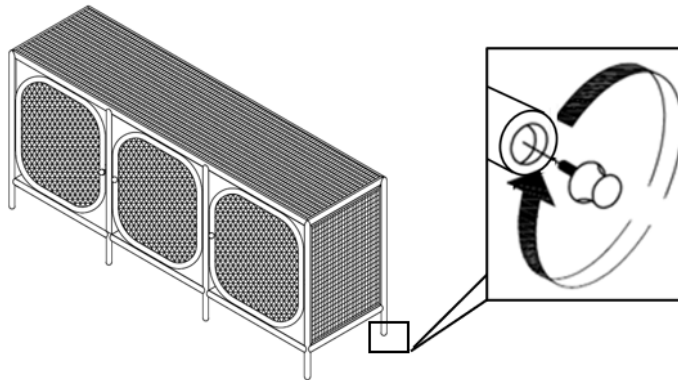

STEP 4

- A) Align the bracket (E) to the top back of the cabinet (F), as shown. Insert screw (A) and tighten with a phillips head screwdriver (not included). Place the second bracket (E) against the wall directly behind the cabinet and mark the location.
- B) Wood or Stud installation:
Insert screw (B) through the second bracket (E). Use a Phillips head screwdriver or drill to fasten the screw (B) directly into the wall at the marked location.
Drywall installation:
Insert the plastic anchors (C) into the wall at the marked locations using a hammer and a drill. Insert the screw (B) through the second bracket (E) and into the anchors, then tighten with a Phillips head screwdriver or drill.
- C) Place the cabinet against the wall aligning the brackets (E), then run the strap (D) through both brackets (E) and pull them tight to secure the cabinet.

The included hardware is intended for attachment to drywall or wooden wall surfaces, contact your local hardware store to find the correct anchor for alternative wall-types such as stone or brick.

