

# LUKA MIRROR

URBAN OUTFITTERS

## Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED: N/A


### WARNINGS:

Do not throw away packing materials and carton until after assembly. Assemble all parts on a clean smooth surface. This floor mirror is meant for floor use only - it is not designed to be hung on a wall.


Use of the provided Anti-tip kit is recommended to avoid damage or injury.

### CARE INSTRUCTIONS:


Avoid direct exposure to sunlight.  
Do not place overheat or air conditioning vents.  
Adjust levelers so that the furniture sits flat on uneven floors.  
Blot spills do not rub, with a clean white cloth. Do not use harsh chemicals.  
Before cleaning any part test a small spot in a hidden area.  
You may need to re-tighten all bolts after initial use.

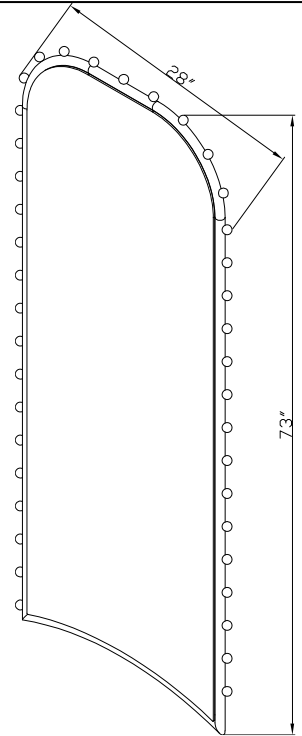


## PARTS INCLUDED

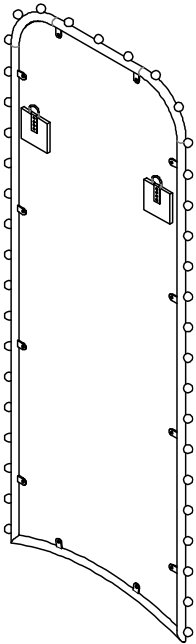

A) Mirror  
x1



B) Screw x4 [4x26mm]


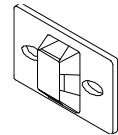


C) Anti-tip Kit Bracket  
x1



E) Drywall Anchor x4  
[13x40mm]

EXCLUSIVE AND CONFIDENTIAL PROPERTY OF URBAN OUTFITTERS, INC.  
© 2017 UO, Inc. All rights reserved, including all applicable copyright, design and patent rights. Any unauthorized reproduction, adaptation, distribution or other infringement will be

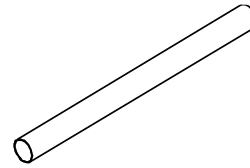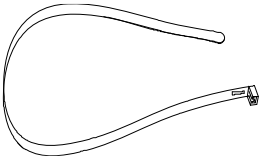

D) Nylon Straps  
x2

### STEP 1

Locate the desired position of the mirror. Mark the approximate height of the D-Rings on the back of the mirror, and the extents of the mirror's width (28") on the wall. Measure 5" inside the marks denoting the width, at the height of the D-rings and mark this location on the wall. Align the Anti-tip kit brackets (C) to the second set of marks and screw it to the wall. Feed the Nylon strap (D) through the anti-tip kit (C) and through the ring on the mirror. Pull the nylon strap tight.

