

Sienna Headboard

Assembly Instructions

URBAN OUTFITTERS

TOOLS REQUIRED BUT NOT INCLUDED:

Phillips head screwdriver, Hammer

WARNINGS:

At least two people recommended for assembly

Do not throw away packing materials and carton until after assembly.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.

Do not place overhead or air conditioning vents.


Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills with a clean white cloth, do not rub.

Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.

You may need to re-tighten all bolts after initial use.

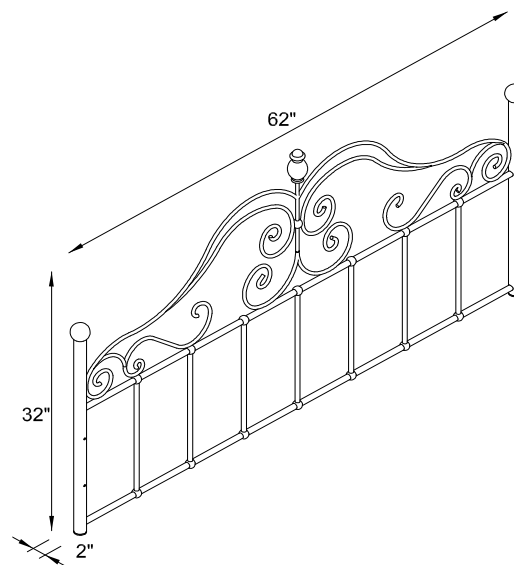

PARTS INCLUDED



A) Headboard



B) Plastic Washer Pad x 4



C) Drywall Anchor x 4



D) Wall Screw [M4x57mm]

STEP 1

Place the headboard (A) against the wall in its desired location. Ensure the headboard (A) is level then, mark the location of the holes on the wall.

Wood or Stud Installation:

Place the washer pads (B) behind the holes in the headboard (A). Insert screws (D) through the headboard (A) and washer pads (B) into the wall and tighten with a Phillips head screwdriver.

Drywall Installation:

Attach the drywall anchors (C) to the wall at the marked location using a drill and hammer. Insert screws (D) through the headboard (A) and washer pads (B) into the wall and tighten with a Phillips head screwdriver.

The included hardware is intended for attachment to drywall, contact your local hardware store to find the correct anchor for alternative wall-type such as wood, stone, or brick.

