

# Etta Bed Queen

## Assembly Instructions

URBAN OUTFITTERS

NO ADDITIONAL TOOLS REQUIRED



### WARNINGS:

Do not throw away packing materials and carton until after assembly.  
Ensure all parts are present prior to assembly.  
Contact customer service immediately if parts are missing.  
Assemble all parts on a clean smooth surface.


### CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.  
Do not place over heat or air conditioning vents.  
Adjust levelers so that the furniture sits flat on uneven floors.  
Blot spills with a clean white cloth, do not rub.  
Do not use harsh chemicals.  
Before cleaning any part test a small spot in a hidden area.  
You may need to re-tighten all bolts after initial use.

### PARTS INCLUDED:

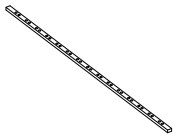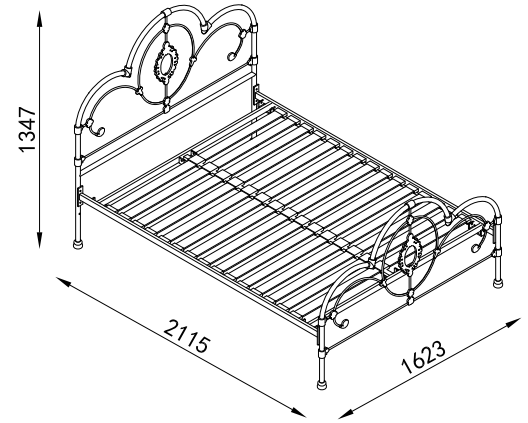


(A) Center Rail 1x

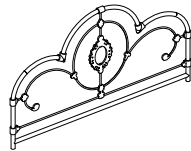


(B) Headboard 1x




(C) Leg 2x

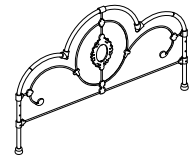

(D) Footboard 1x

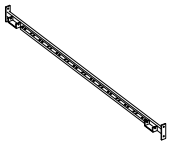


(E) Side Rail 2x

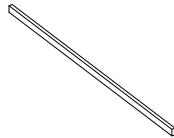

(F) Crossing Rail 2x



(G) End Plastic Cap 30x




(H) Slat 30x



(I) Center Plastic Cap 15x



(J) Bolt 8x  
M8 x 25mm



(K) Bolt 2x  
M6 x 70mm



(L) Bolt 4x  
M6 x 15mm




(M ) Flat Washer 8x  
Φ16



(N ) Flat Washer 8x  
Φ23



(O ) Flat Washer 8x  
Φ18




(P) Nut 2x  
M6



(Q) Hex key 1x  
M5




(R) Hex key 1x  
M4



(S) Wrench 1x  
6mm


### STEP 1

Insert the Legs (C) into Headboard (B) as shown in the drawing below.

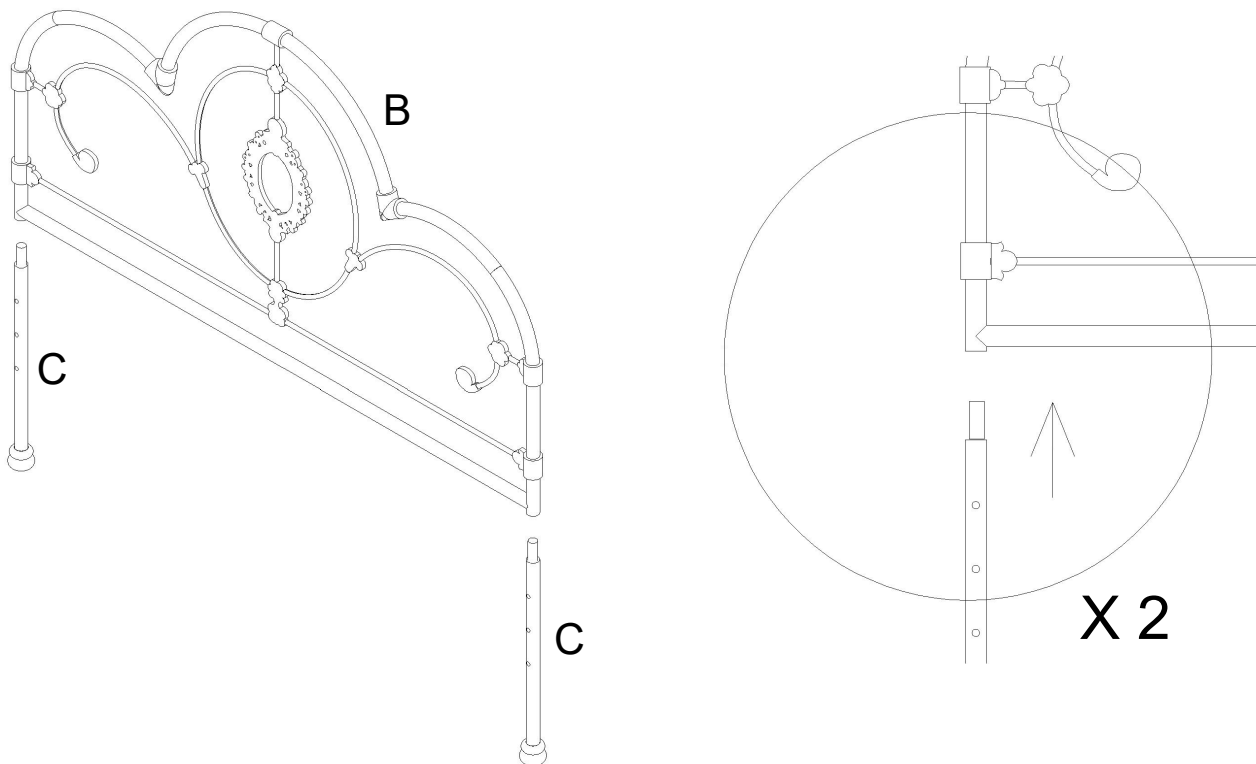


### STEP 2

Attach Side Rails (E) to Headboard (B) with Bolts (J) and Flat Washers (O&N) as shown in the drawing below. Tighten with supplied Hex Key (Q).

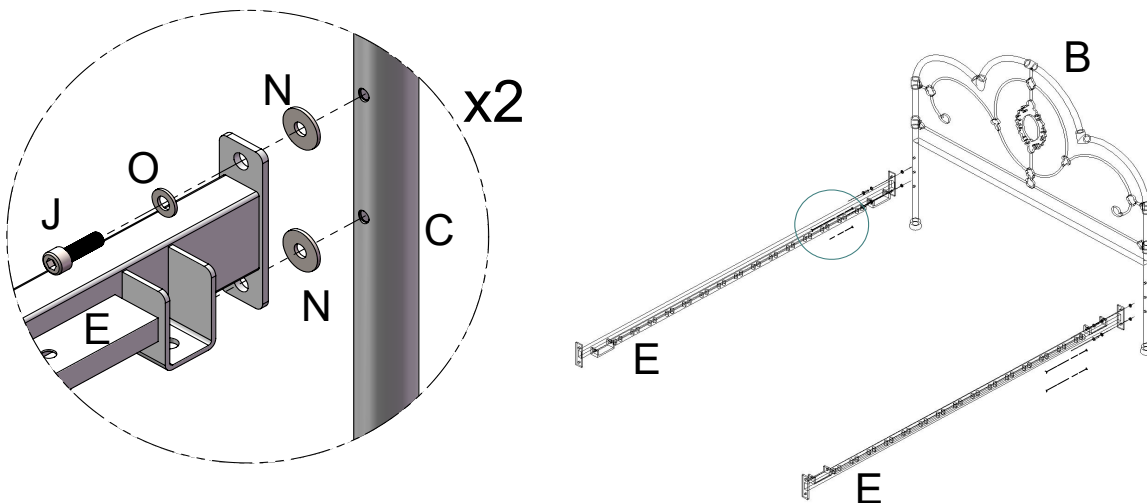


### STEP 3

Attach Side Rails (E) to the Footboard (D) with Bolts (J) and Flat Washers (O&N) as shown in the drawing below. Tighten with supplied Hex Key (Q).

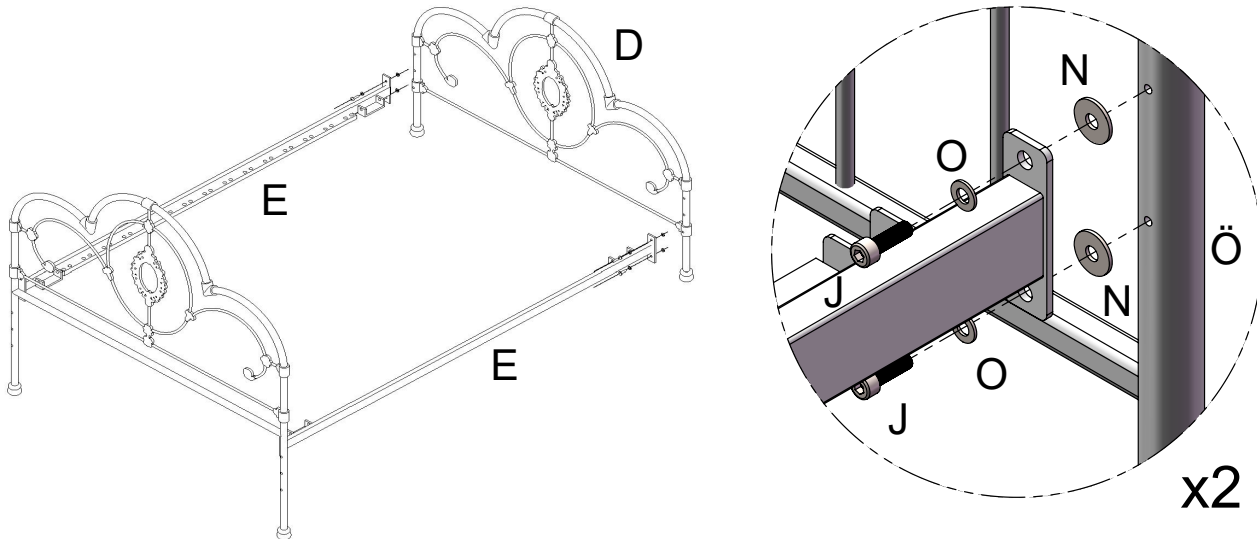


### STEP 4

Place Crossing Rails (F) onto the Side Rails (E). Insert the Bolts (L) and Flat washers (M) as shown in the drawing below, then tighten with supplied Hex Key (R). Align Center Rail (A) with Crossing Rails (F) and insert Bolts (K), Flat Washers (M) and Nuts (P) as shown in the drawing below. Tighten with supplied Hex Key (R) and Wrench (S).

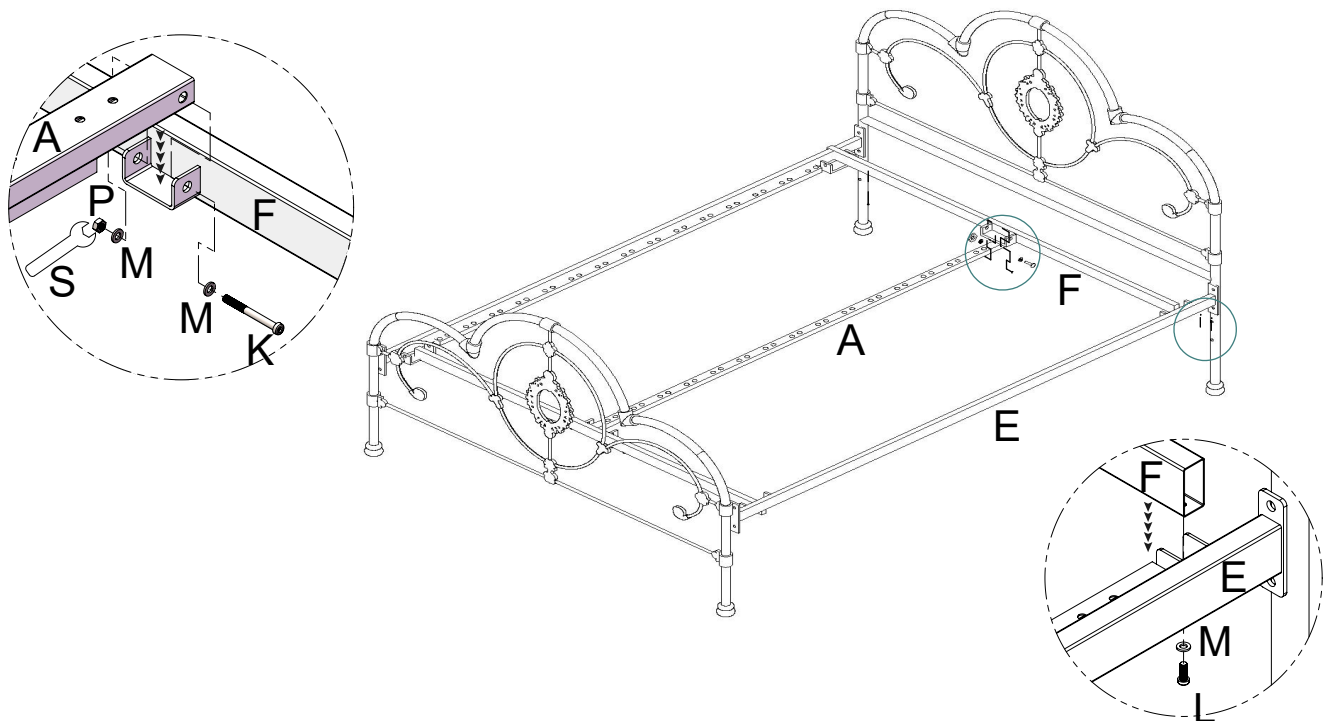



STEP 5

Insert Slats (H) into End Plastic Caps and Center Plastic Cap (G&I) as shown in the drawing below.

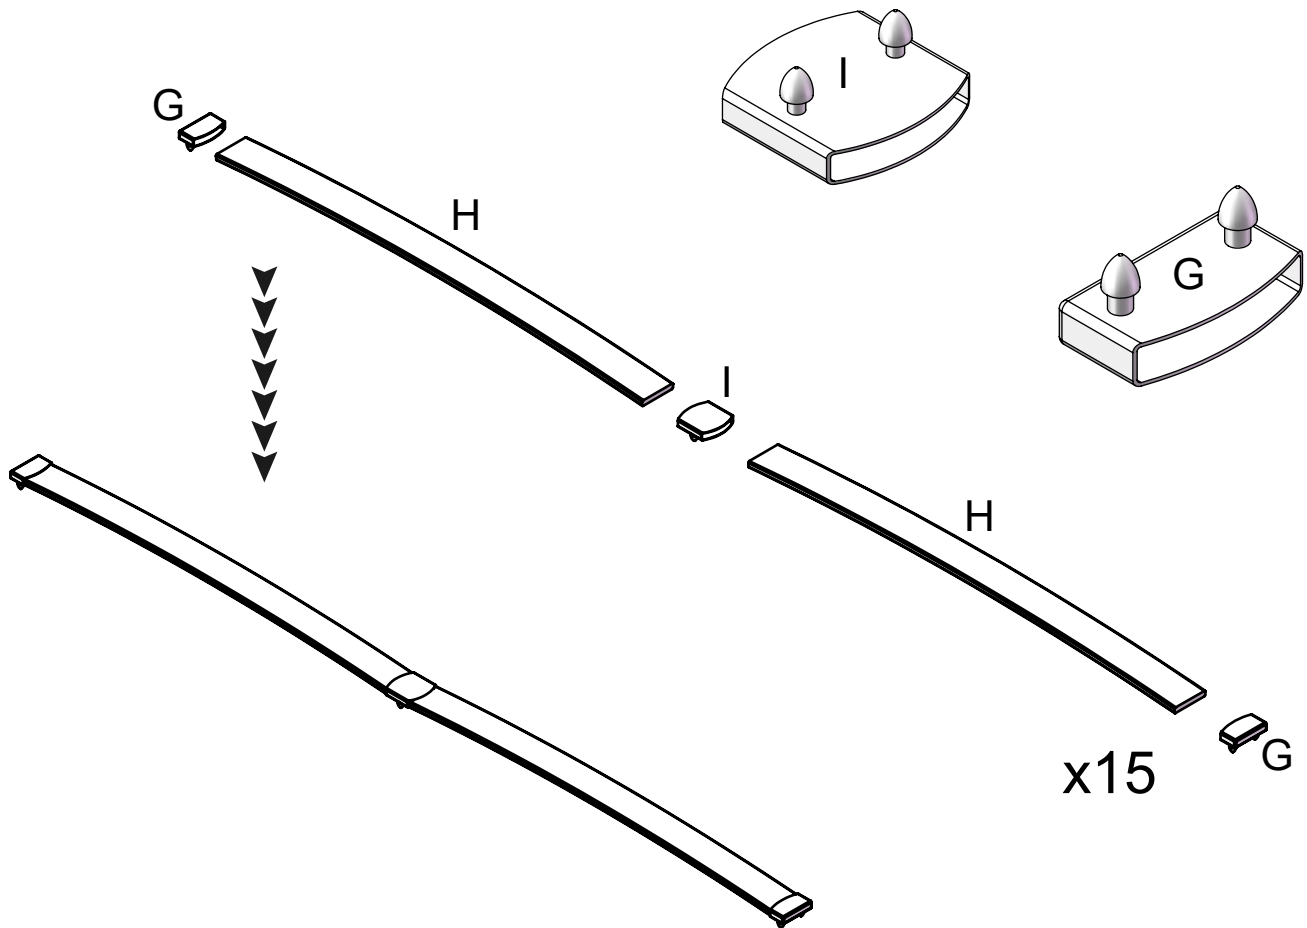

### STEP 6

Firmly press Plastic Caps (G&I) into Side Rails (E) and Center Rail (A) as shown in the drawing below.

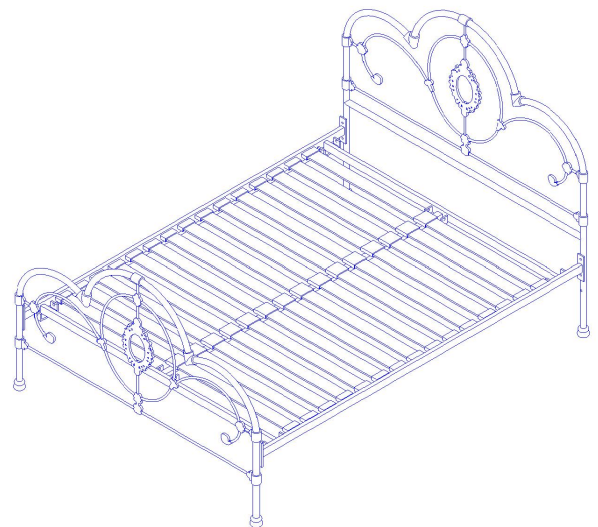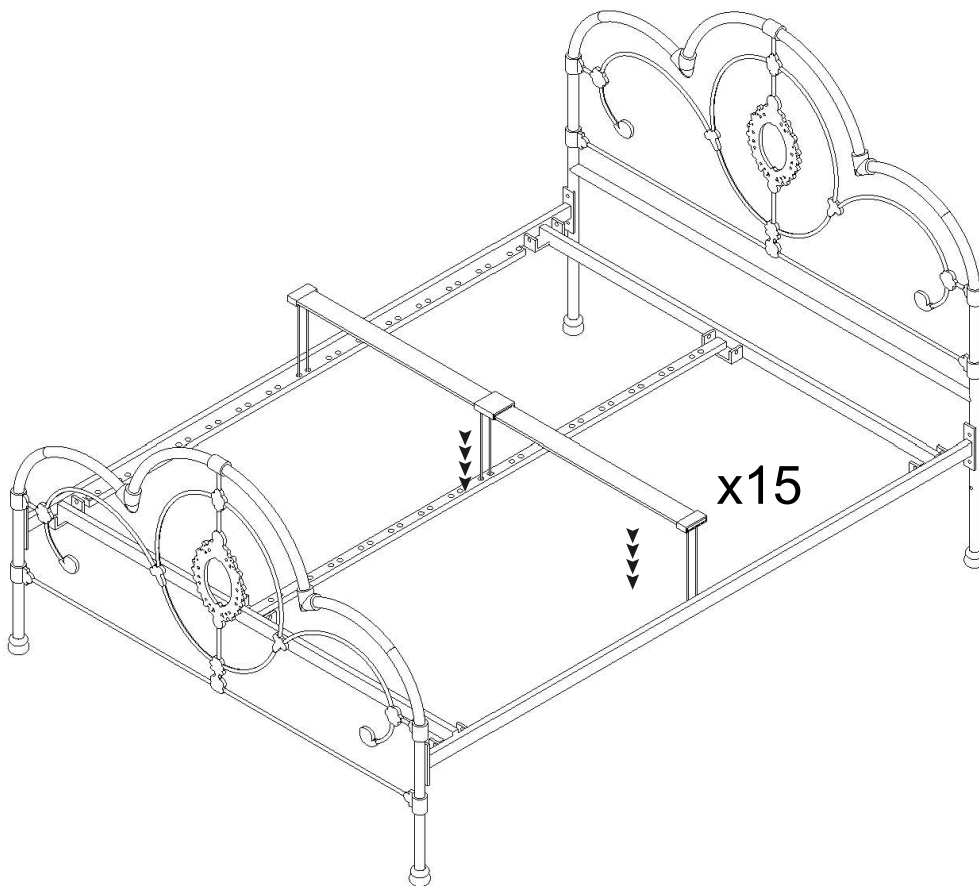

Assembly complete