

Quinn Headboard

Assembly Instructions

URBAN OUTFITTERS

TOOLS REQUIRED BUT NOT INCLUDED:

Step-stool, Drill, Hammer, Pencil, Level

WARNINGS:

Do not throw away packing materials and carton until after assembly.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.

Do not place over heat or air conditioning vents.


Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills with a clean white cloth, do not rub.


Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.

You may need to re-tighten all bolts after initial use.

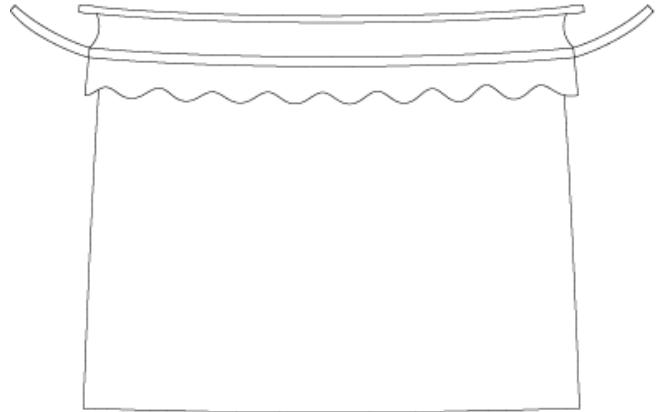

PARTS INCLUDED:

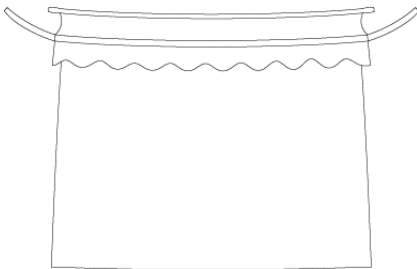


(A) Headboard



(B) Plastic Anchor

[06" x 1.57"] x4
or
[15mm x 40mm] x4

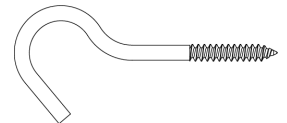

(C) Screw Hook

[1.5" x 2.75"] x4
or
[38 mm x 70 mm] x4


Quinn Headboard

URBAN OUTFITTERS

Assembly Instructions

STEP 1

With help, choose a location for the headboard (A). Use the below diagrams to mark the corresponding locations for hardware on the wall and ceiling. Ensure the marks are level and aligned.

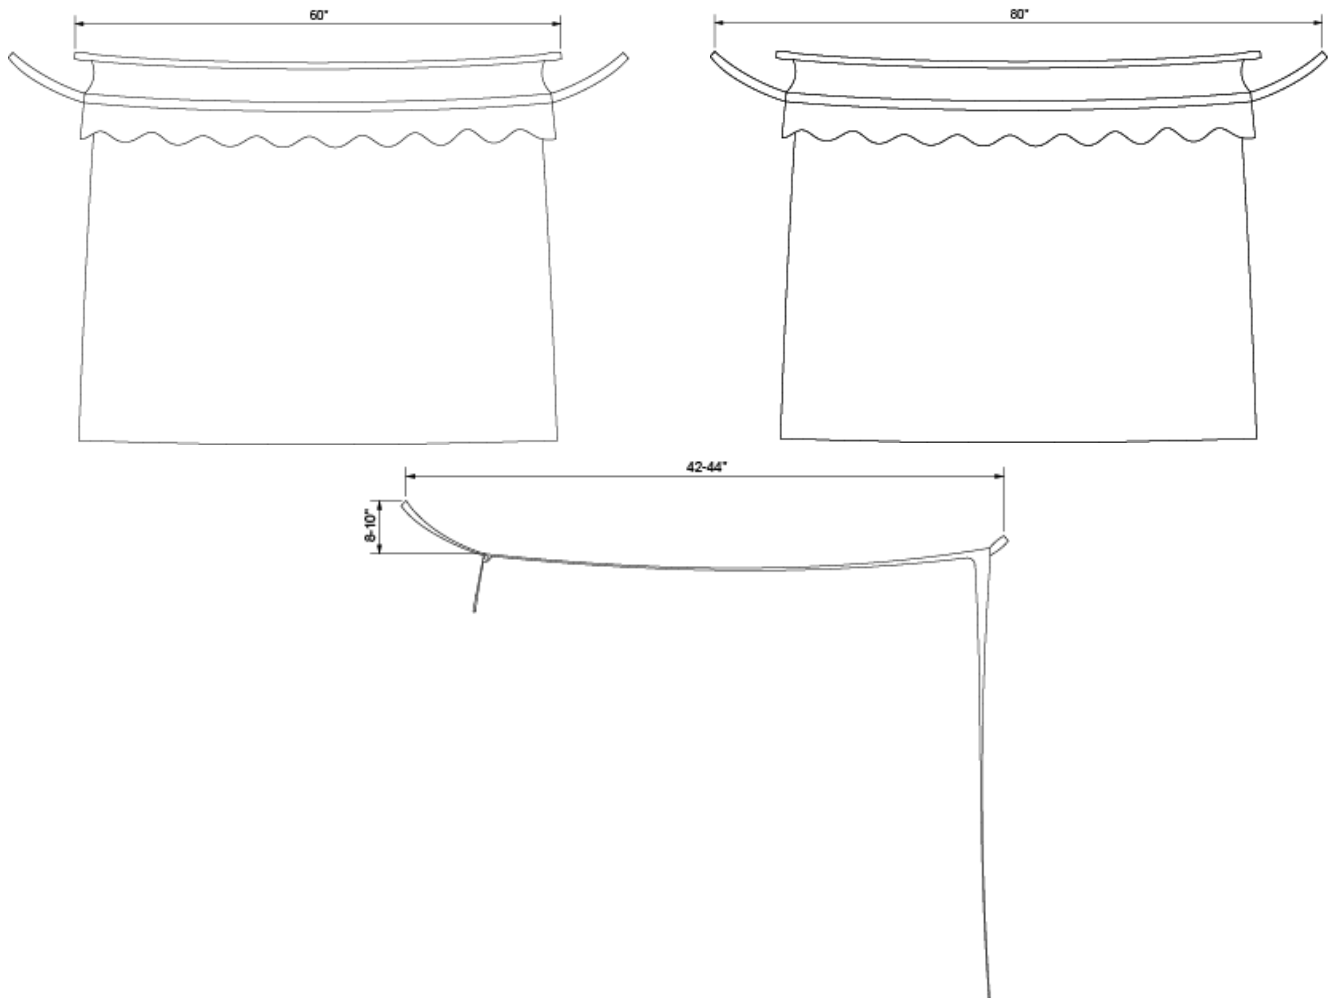

The included hardware is intended for attachment to drywall or wooden wall surfaces, contact your local hardware store to find the correct anchor for alternative wall-types such as stone or brick.

STEP 2

Wood or Stud installation:

Fasten the screw hooks (C) directly into the wall at the marked locations.

Drywall installation:

Insert anchors (B) into the wall at the marked locations using a drill and a hammer then, fasten screw hooks (C) into the anchors.

STEP 3

With help, use the fabric loops attached to the headboard (A) to hang it on the screw hooks one corner at a time.