

Bennet Nightstand

Assembly Instructions

URBAN OUTFITTERS

TOOLS REQUIRED BUT NOT INCLUDED:


Phillips head screwdriver

WARNINGS:

Do not discard packing materials and the carton until assembly is complete. Ensure all parts are present prior to assembly. Contact customer service immediately if any parts are missing. Assemble all parts on a clean, smooth surface.


CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.
Blot spills with a clean, white cloth; do not rub.
Do not use harsh chemicals.
Before cleaning any part, test a small spot in a hidden area.
Do not place over heat or air conditioning vents.
Do not over-tighten the parts.
The parts may loosen after initial use; re-tighten as necessary.

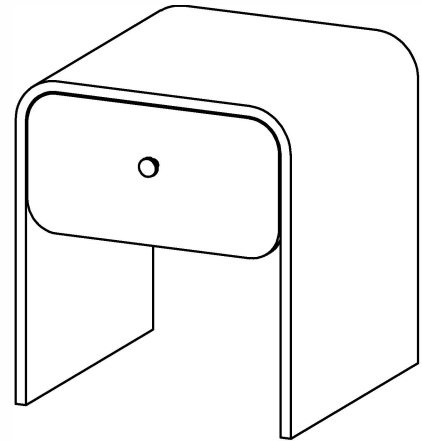

15 3/4"W x 15 3/4"D x 17 3/4"H

PARTS INCLUDED:

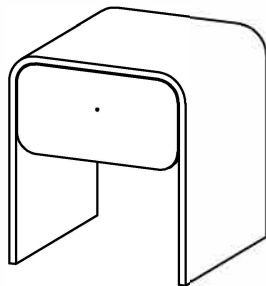

(A) Nightstand x1



(B) Handle x1



(C) Bolt
[M4 x 30mm] x1

STEP 1

Use a Phillips head screwdriver to remove the drawer handle pre-installed on the inside of the drawer. Place the drawer handle on the face of the drawer and re-attach it with the original screws and a Phillips head screwdriver.

