


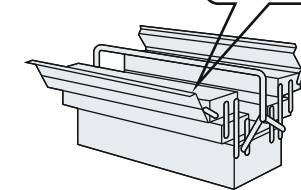
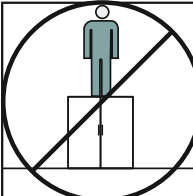
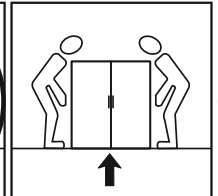
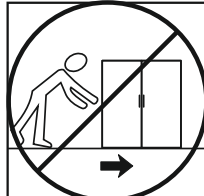
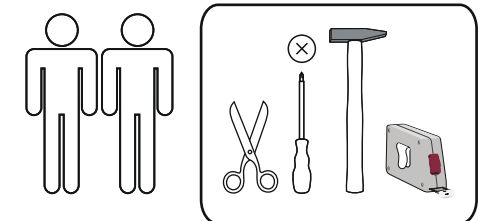
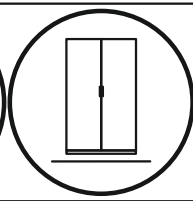
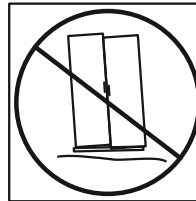
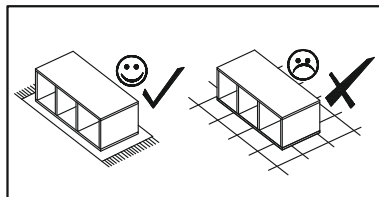
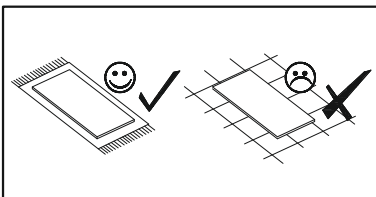
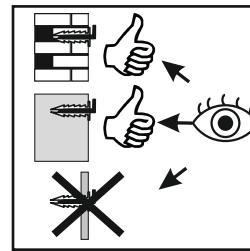
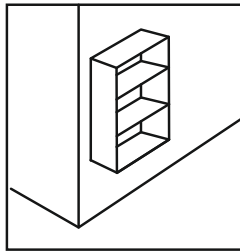
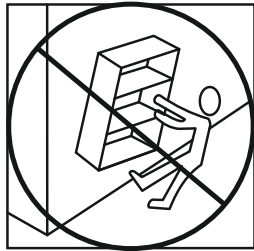
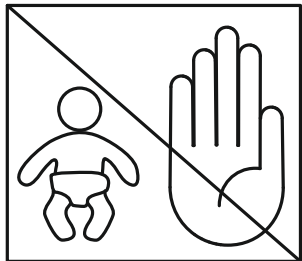
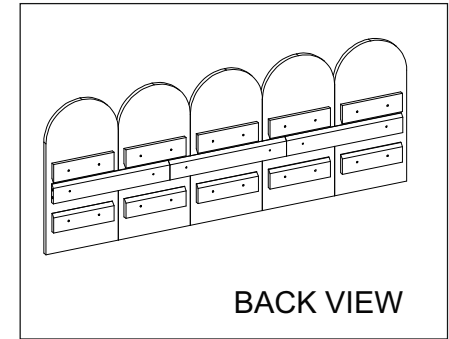


Fern Headboard

Assembly Instructions

URBAN OUTFITTERS


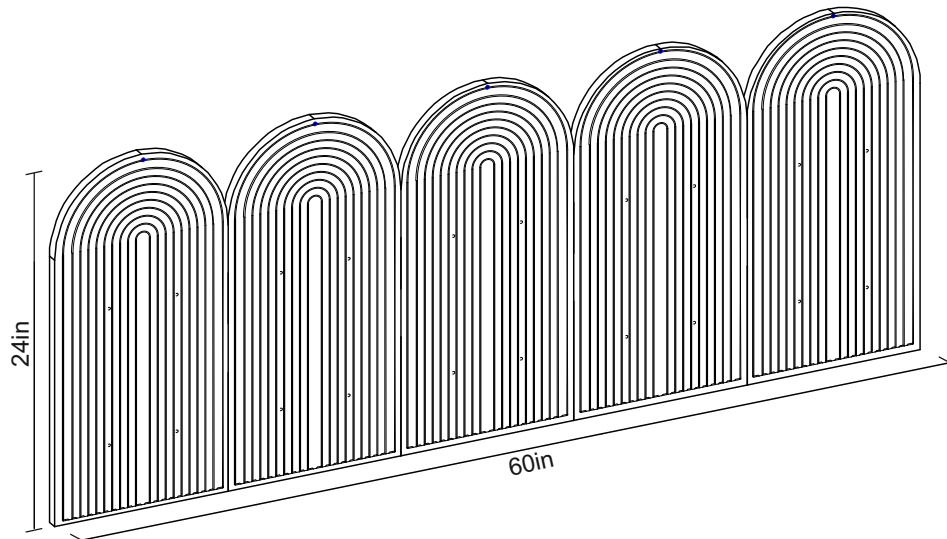


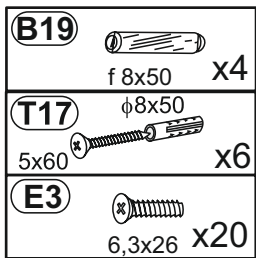



Nr				pcs
1	11,97	24	0,71	5
2	10	2,99	0,59	3
3	19,33	2,99	0,71	10

WARNING:

The included hardware is intended for attachment to drywall or wooden wall surfaces, contact your local hardware store to find the correct anchor for alternative wall-types such as stone or brick.

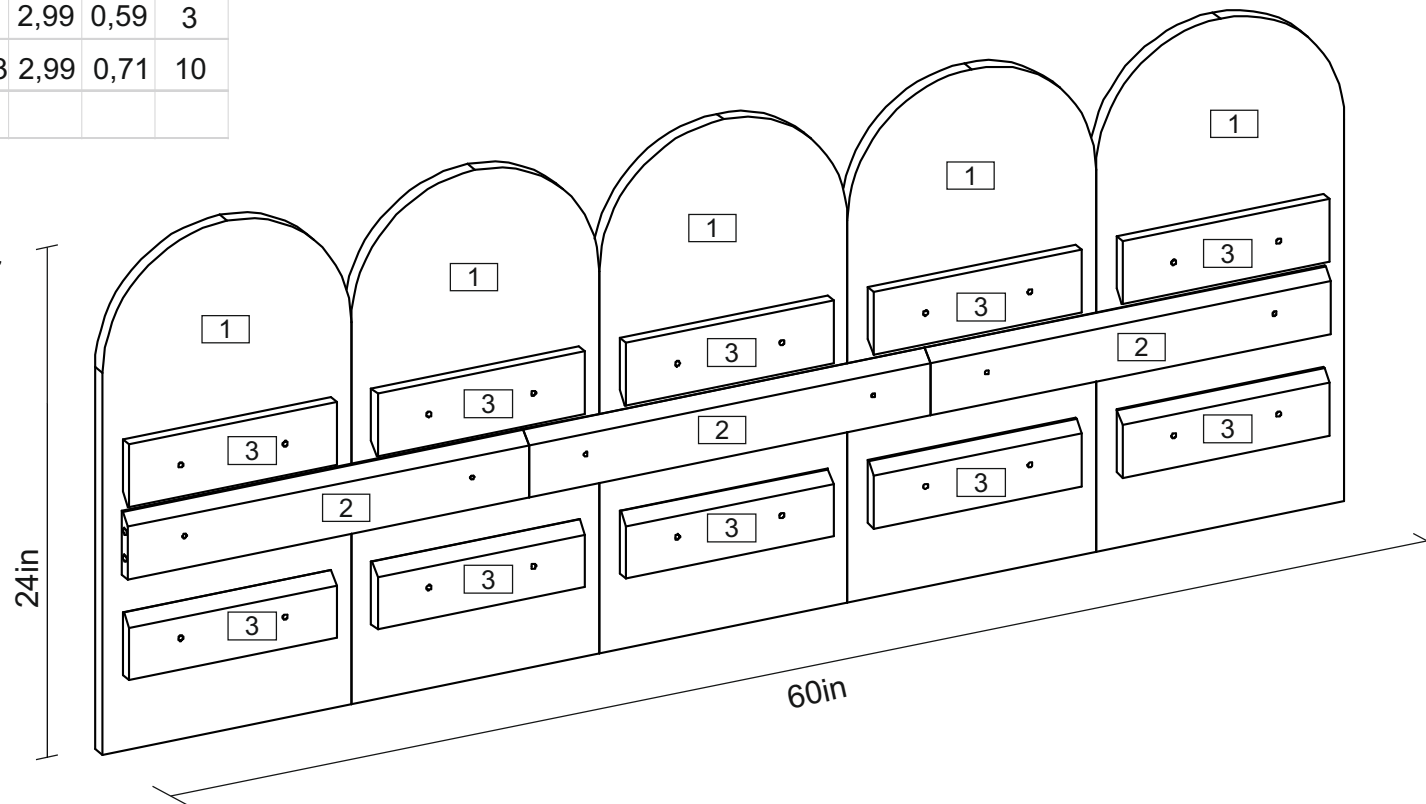


1

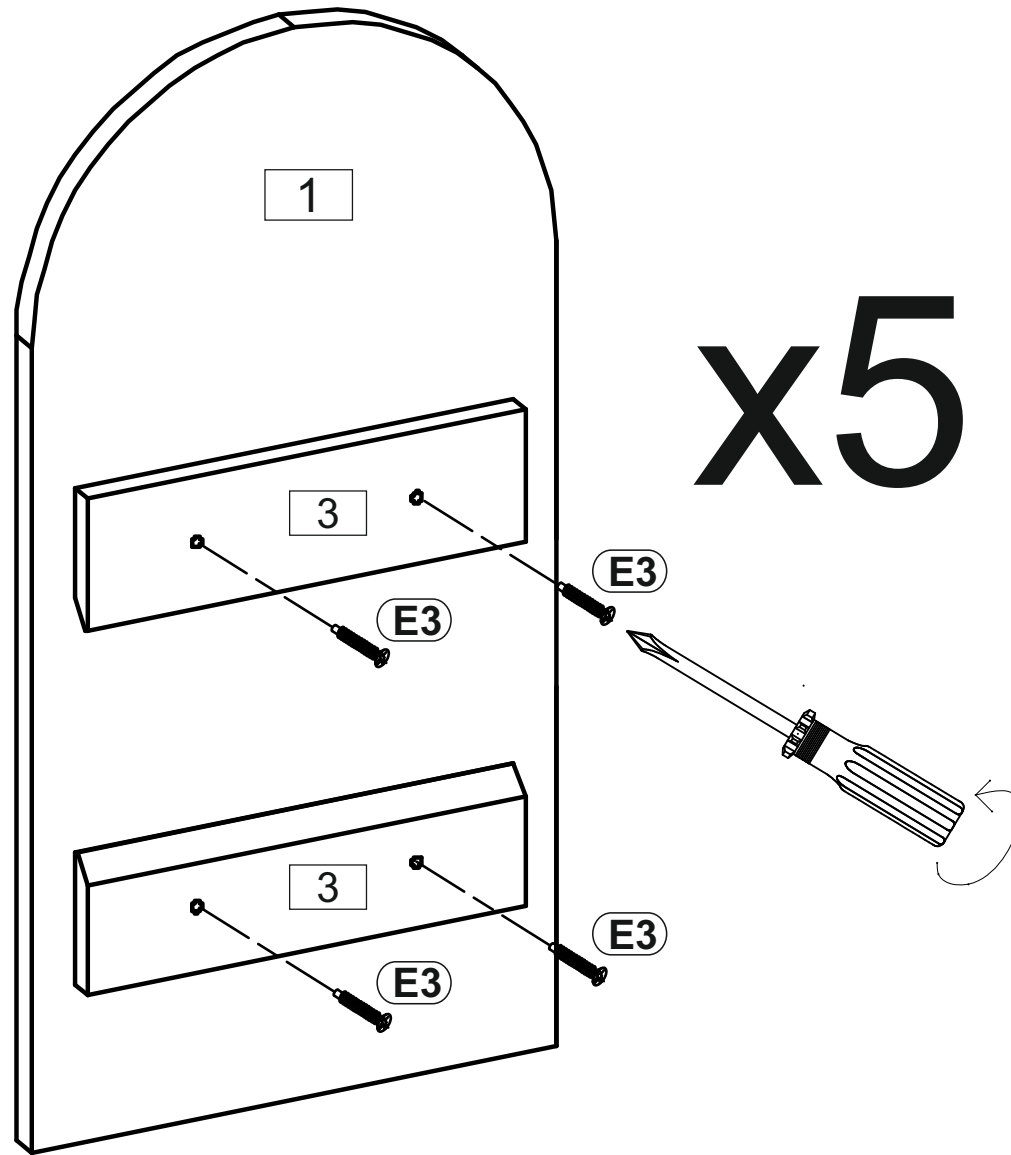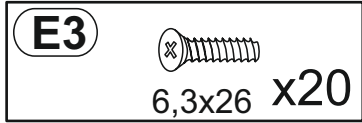


2


(B19)
f 8x50 x4

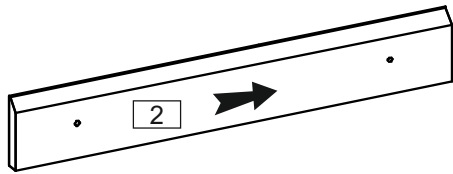





(B19)

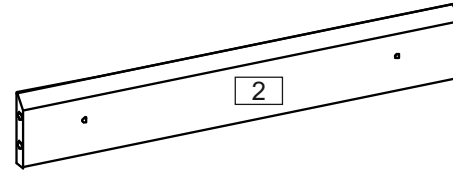


(B19)

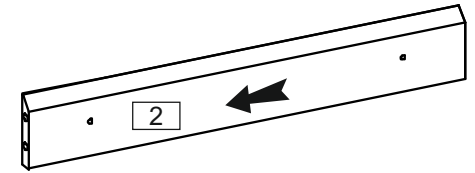

3

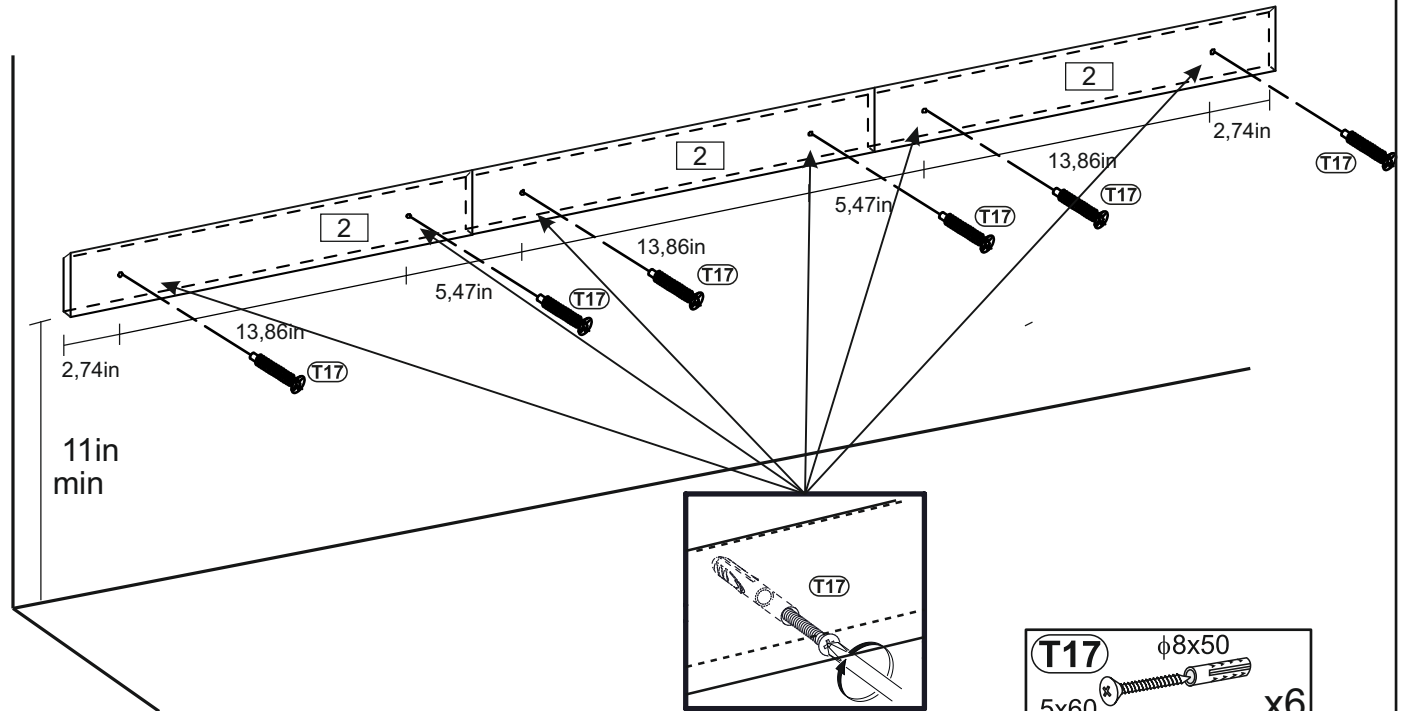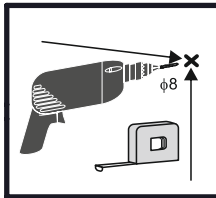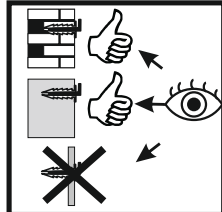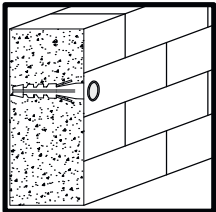

(T17) $\phi 8 \times 50$
5x60 x6

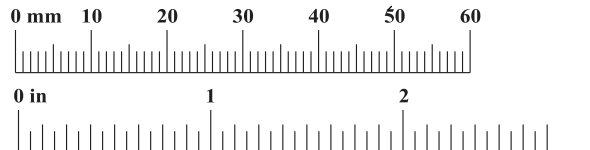

4

