

MODERN LOVE FLOOR LAMP

URBAN OUTFITTERS

Assembly Instructions

NO ADDITIONAL TOOLS REQUIRED

WARNINGS:

Do not discard packing materials and the carton until assembly is complete.

Ensure all parts are present prior to assembly.

Contact customer service immediately if any parts are missing.

Assemble all parts on a clean, smooth surface.

Use a MAX 60W Type A bulb.

Do not use a bulb that exceeds the specified wattage.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.


Blot spills with a clean, white cloth; do not rub.

Do not use harsh chemicals.

Before cleaning any part, test a small spot in a hidden area.

Do not over-tighten the parts.


The parts may loosen after initial use; re-tighten as necessary.

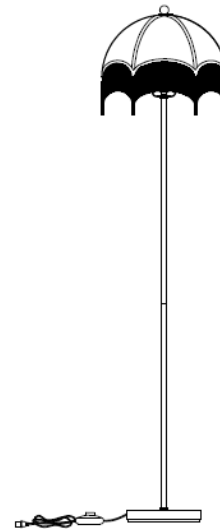

PARTS INCLUDED:



(A) Finial

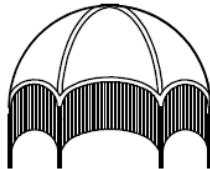

(B) Lamp Shade



(C) Harp



(D) Upper Pole



(E) Lower Pole



(F) Base

MODERN LOVE FLOOR LAMP

URBAN OUTFITTERS

Assembly Instructions

STEP 1

As you unpack and prepare for assembly, place the contents on a carpeted or padded flat surface area

STEP 2

Screw the Lower Pole (E) onto the Base (F) and pull excess cord from the Base (F).

STEP 3

Screw the Upper Pole (D) to the Lower Pole (E).

STEP 4

Place the Harp (C) onto the saddle of the socket at the top of the Upper Pole (D).

STEP 5

Place the Lamp Shade (B) on the Harp (C) and screw the Finial (A) clockwise onto the top of the Upper Pole (D) to secure the Shade (B).

STEP 6

Insert the specified light bulb into the socket. DO NOT EXCEED THE SPECIFIED WATTAGE.

STEP 7

Plug the lamp into the outlet, and use the switch attached to the chord to turn the lamp on and off.

Use a MAX 60W Type A bulb. DO NOT USE A BULB THAT EXCEEDS THE SPECIFIED WATTAGE!

