

Modern Love Flush-mount

Assembly Instructions

URBAN OUTFITTERS

TOOLS REQUIRED BUT NOT INCLUDED:
Phillips head screwdriver, Wire Cutters

WARNINGS:

Do not throw away packing materials and carton until after assembly.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface.

Use two MAX 40W Type A bulbs.

Do not use a bulb that exceeds the specified wattage.

A licensed professional electrician should install direct wire fixtures.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.


Blot spills with a clean white cloth, do not rub.

Do not use harsh chemicals.


Before cleaning any part test a small spot in a hidden area.

Do not over-tighten the parts.


The parts may loosen after initial use; re-tighten as necessary.

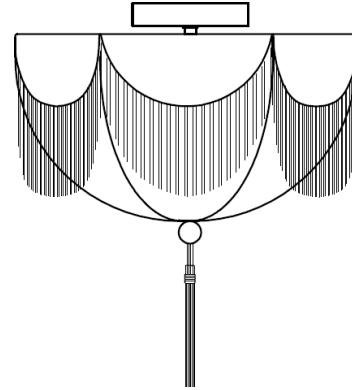


PARTS INCLUDED:



(A) Wire Nuts x3

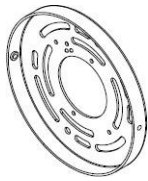


(B) Mounting Plate




(C) Mounting Screws
[8#-32TX25mm] x2



(D) Canopy Screws
[5/32-32T*10mmL] x2



(E) Lamp Body

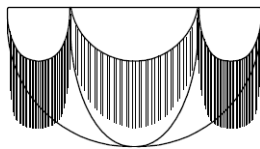

(F) Lamp Shade



(G) Finial

Modern Love Flush-mount

Assembly Instructions

URBAN OUTFITTERS

STEP 1

Carefully unpack the product. Ensure power to the existing wires is disconnected then insert the wires through the center opening of the Mounting Plate (B). Attach the Mounting Plate (B) to the electrical box using the two Mounting Screws (C). Tighten each screw until the Mounting Plate (B) is firmly secured to the electrical box.

STEP 2

Carefully inspect the wire's fixtures:

- Neutral fixture wire = white
- Hot fixture wire = black
- Ground wire = green or bare copper
 - a) Wrap the ground wire of the junction box around the ground screw on the mounting plate and secure the screw
 - b) Attach the remaining ground wire from the junction box to the fixture ground wire with a wire nut and wrap the connection with electrical tape.
 - c) Attach the hot fixture wire from the pendant to the hot junction box wire.
 - d) Fasten each together with a wire nut and wrap the connection with electrical tape.

DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED

STEP 3

Place the Lamp Body (E) onto the Mounting Plate (B) and attach with Canopy Screws (D) using a Phillips head screwdriver.

STEP 4

Insert the specified light bulb into the socket. **DO NOT EXCEED THE SPECIFIED WATTAGE.**

STEP 5

Place the Lamp Shade (F) onto the Lamp Body (E). Screw the Finial (G) onto the Lamp Body (E) clockwise until tight. Do not over tighten the socket ring (H).

STEP 6

Reconnect the main electrical supply from the fuse box/circuit breaker and test fixture, enjoy your new lamp.

Use two MAX 40W Type A bulbs. Do not use bulb that exceeds recommended wattage.

