

Ebba Bed

Assembly Instructions

URBAN OUTFITTERS

TOOLS REQUIRED BUT NOT INCLUDED:
Phillips Head Screwdriver

WARNINGS:

Do not throw away packing materials and carton until after assembly. Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight. Do not place overheat or air conditioning vents. Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills do not rub, with a clean white cloth.


Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.


You may need to re-tighten all bolts after initial use

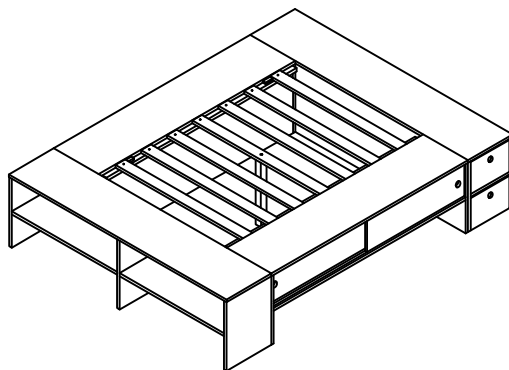


COMPONENTS

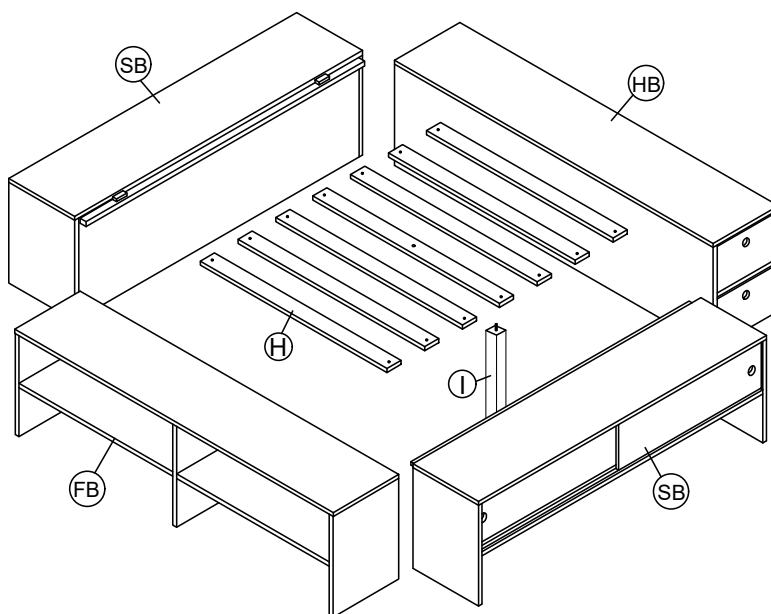


PARTS INCLUDED

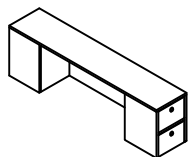


HB) HEAD BOARD
x1

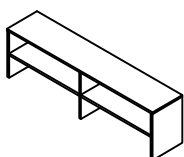


FB) FOOT BOARD
x1

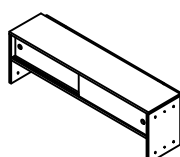

SB) SIDE BOX
x2

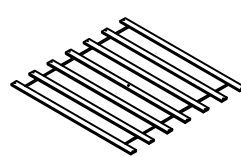

H) Slats x1




I) Support Leg x1

Ebba Bed - Head Board


URBAN OUTFITTERS

Assembly Instructions


HEAD BOARD

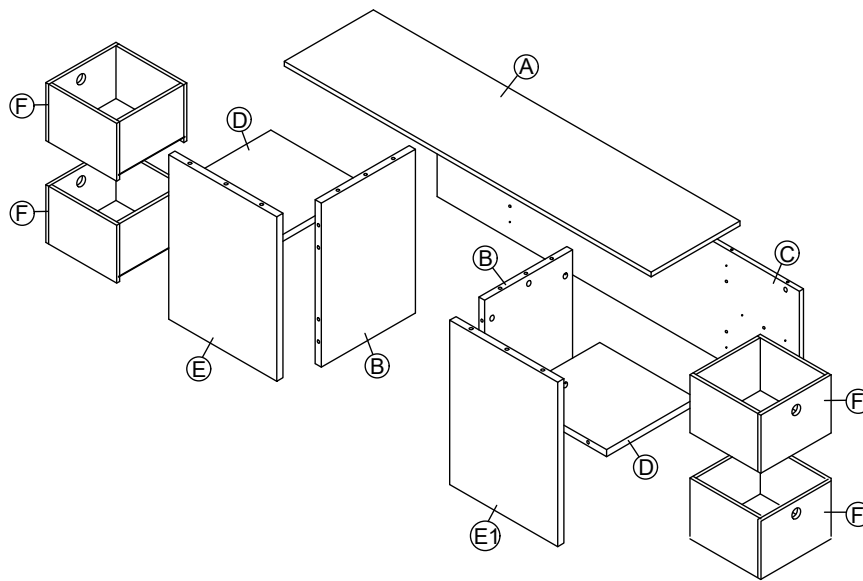


PARTS INCLUDED

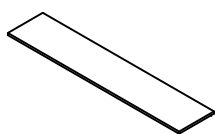


A) HB Top Panel
x1




B) HB End Panel
x2

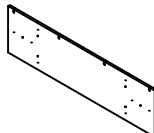


C) HB Front Panel
x2




D) HB Shelf
x2



E) HB Back Panel L
x1




E1) HB Back Panel R
x1

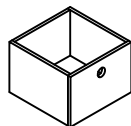

F) Drawer Box
x4


HARDWARE INCLUDED



1) Cam Bolt
[T24] x26



2) Cam Lock
[D15 x 9.5mm] x26



3) Wood Dowel
[M8 x 30mm] x21


Ebba Bed - Head Board

URBAN OUTFITTERS

Assembly Instructions


STEP 1

Screw the cam bolts (1) into the pre-drilled holes in the HB Top Panel (A), HB Front Panel (C) & HB Back Panel L & R (E & E1) as shown.

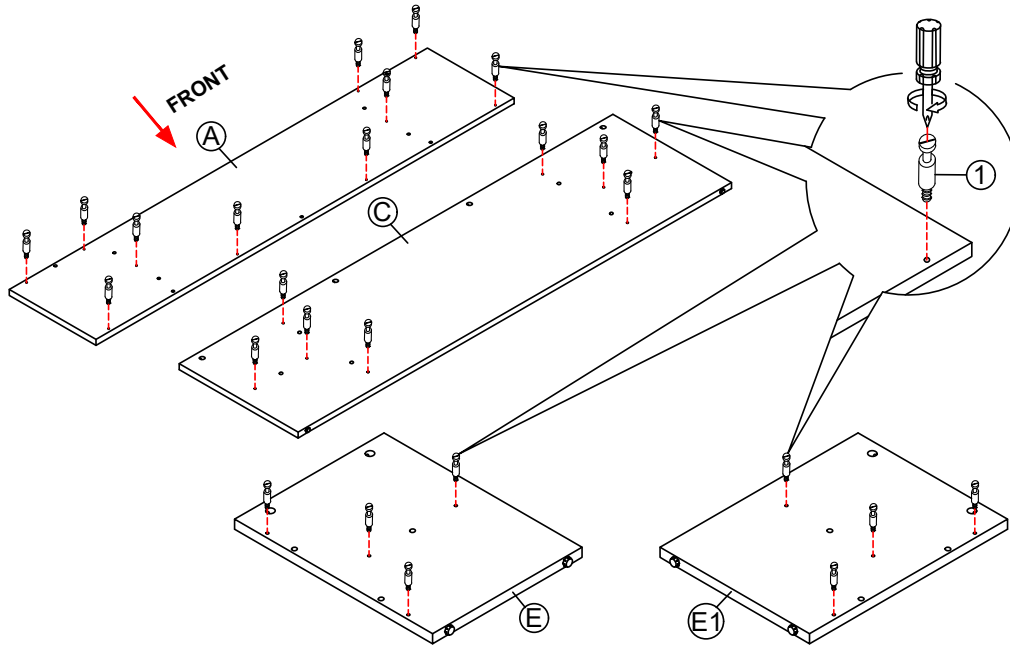

STEP 2

Insert the dowels (3) into the holes in the edge of the HB End Panels (B). Place the HB End Panels (B) onto the cam bolts (1) attached to the HB Front Panel (C) as shown.

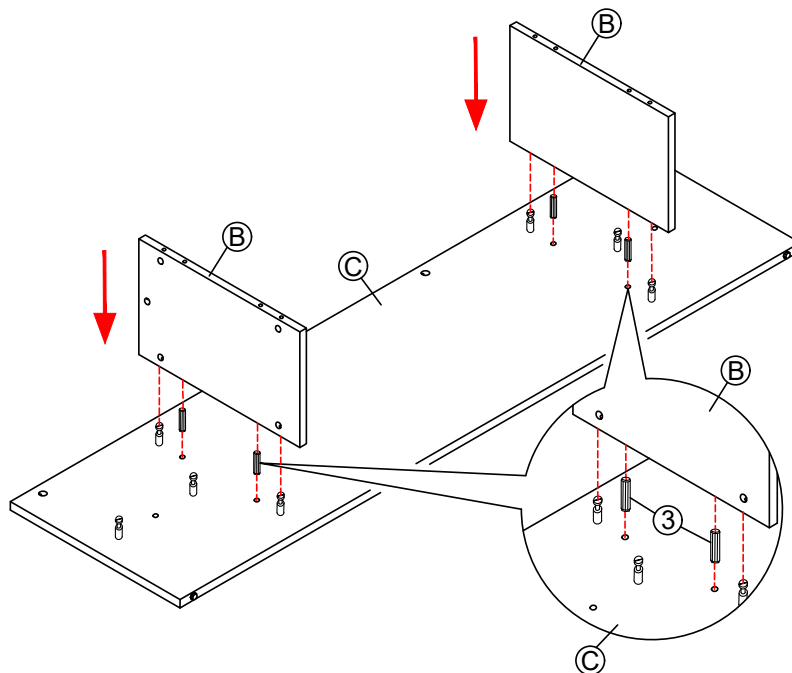


Ebba Bed - Head Board

URBAN OUTFITTERS

Assembly Instructions


STEP 3

Insert the cam locks (2) into the holes in the HB End Panels (B) as shown. Tighten with Phillips head screwdriver (not provided) as shown.

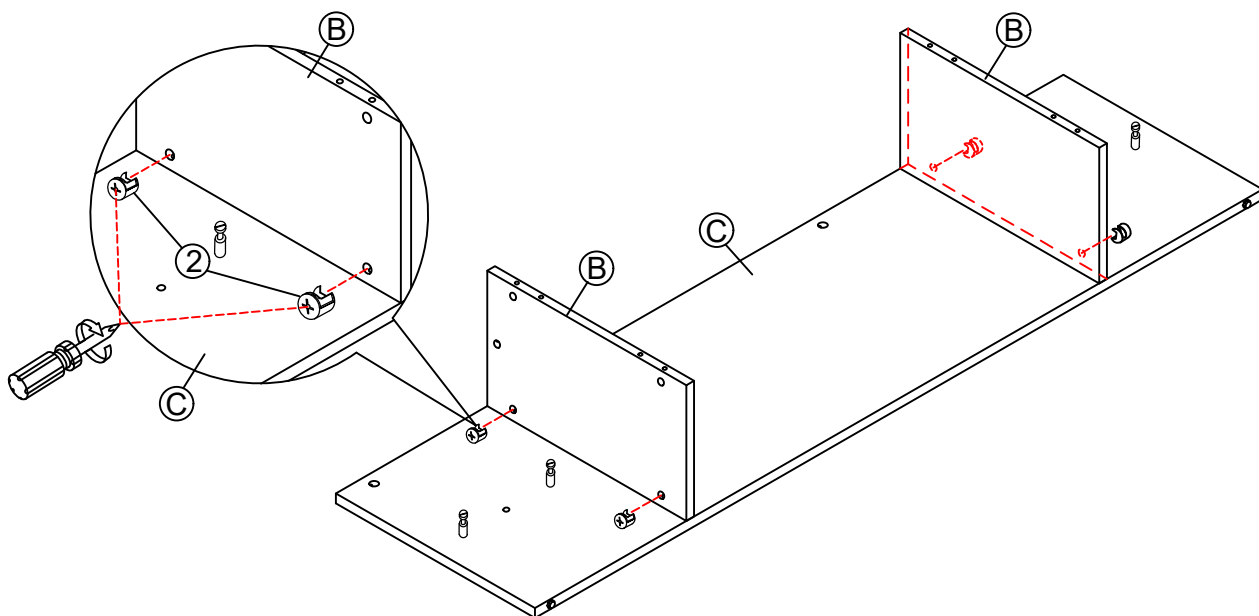

STEP 4

Insert the dowels (3) into the holes in the edge of the HB Shelves (D). Place the HB Shelves (D) onto the cam bolts (1) attached to the HB Front Panel (C) as shown.

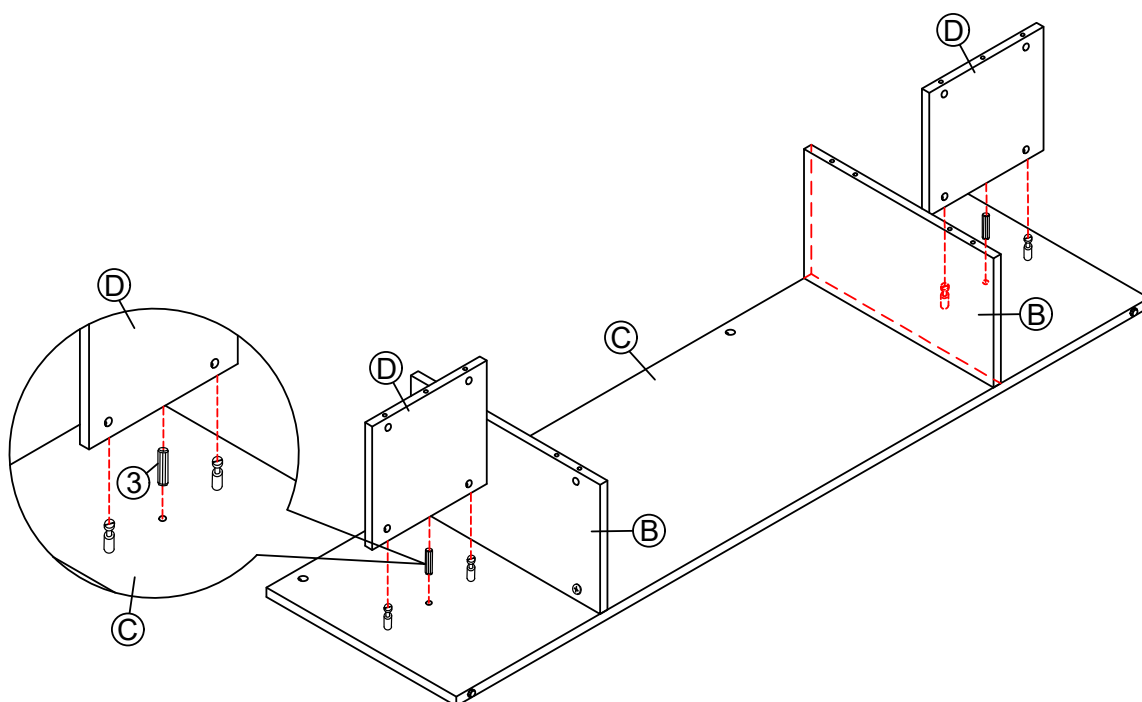


Ebba Bed - Head Board

URBAN OUTFITTERS

Assembly Instructions


STEP 5

Insert the cam lock (2) into the holes in the HB Shelves (D) as shown. Tighten with Phillips head screwdriver (not provided) as shown.

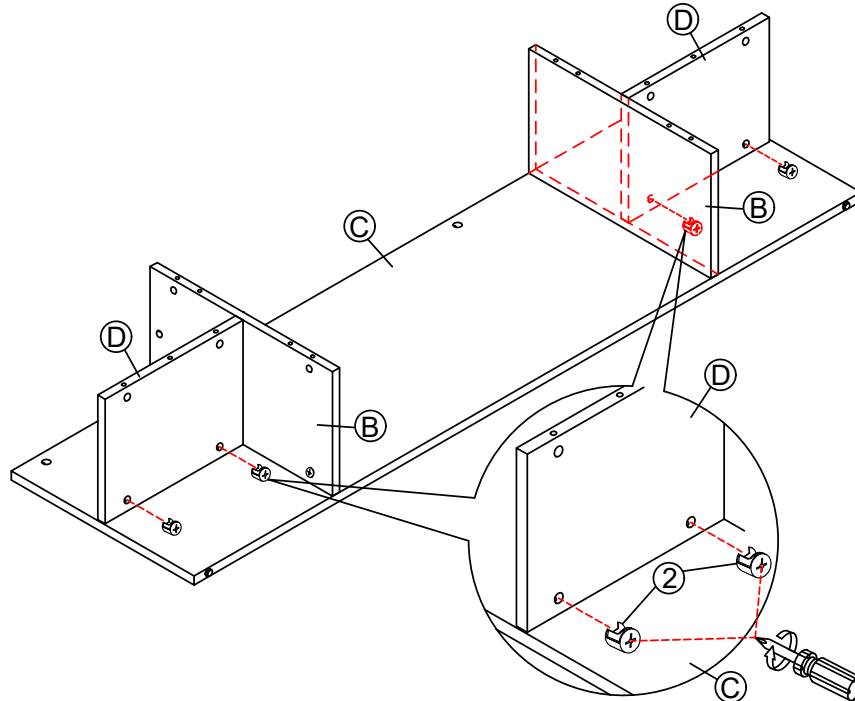

STEP 6

Insert the dowels (3) into the holes in the edge of the HB End Panels (B) and HB Shelves (D). Place the HB Back Panel L & R (E & E1) onto the HB End Panels (B) and HB Shelves (D) aligning the cam bolts (1) and dowels (3) as shown.

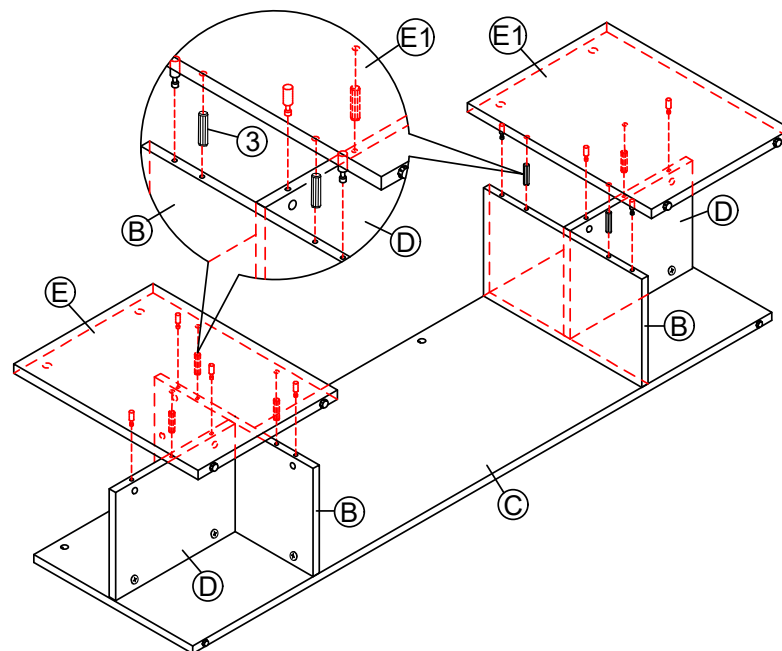


Ebba Bed - Head Board

Assembly Instructions

URBAN OUTFITTERS


STEP 7

Insert the cam lock (2) into the holes in the HB End Panels (B) and HB Shelves (D) as shown. Tighten with Phillips head screwdriver (not provided) as shown.

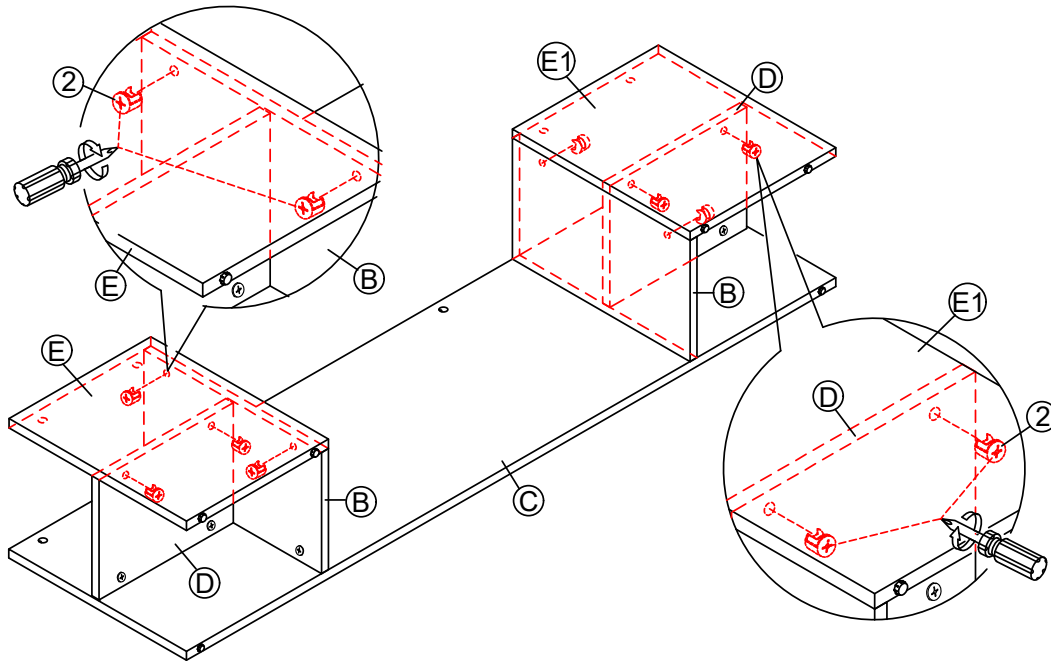

STEP 8

Insert the dowels (3) into the holes in the edge of the HB End Panels (B), HB Front Panel (C) and HB Back Panel L & R (E & E1). Place the HB Top Panel (A) onto the HB End Panels (B), HB Front Panel (C) and HB Back Panel L & R (E & E1) aligning the cam bolts (1) and dowels (3) as shown.

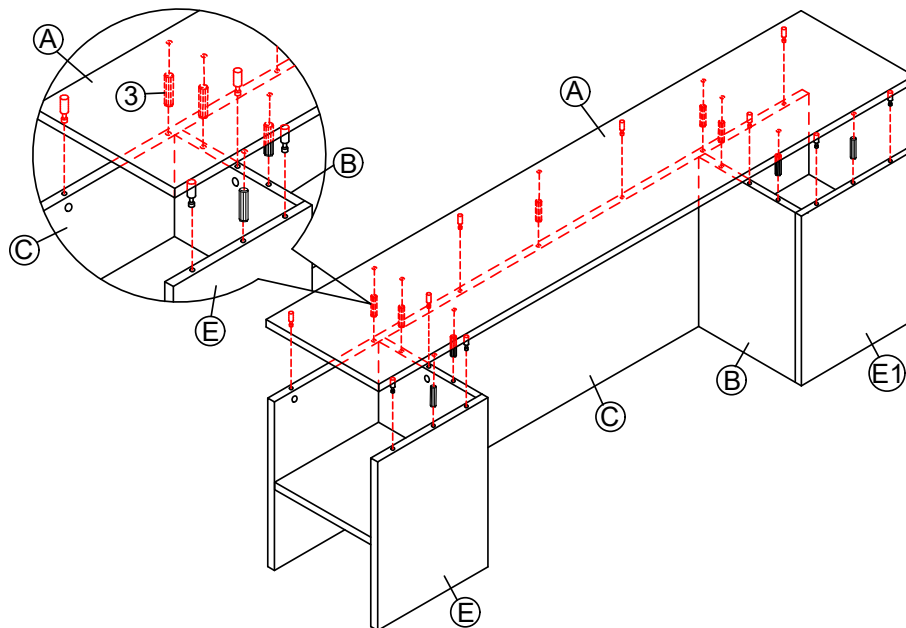


Ebba Bed - Head Board

Assembly Instructions

URBAN OUTFITTERS


STEP 9

Insert the cam locks (2) into the holes in the HB End Panels (B), HB Front Panel (C), HB Back Panel L & R (E & E1) as shown. Tighten with Phillips head screwdriver (not provided) as shown.

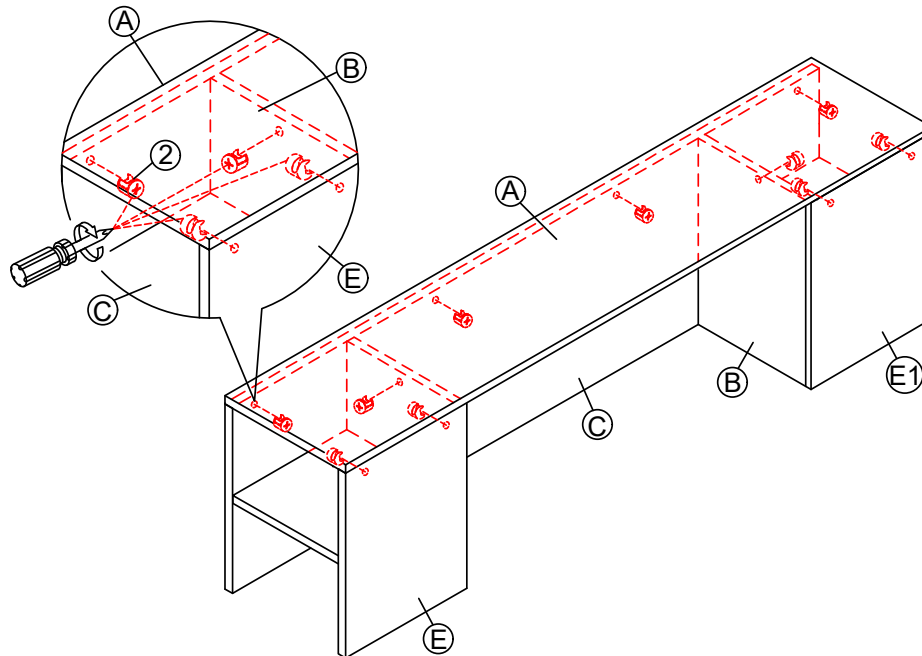

STEP 10

Insert drawer boxes (F) into place.

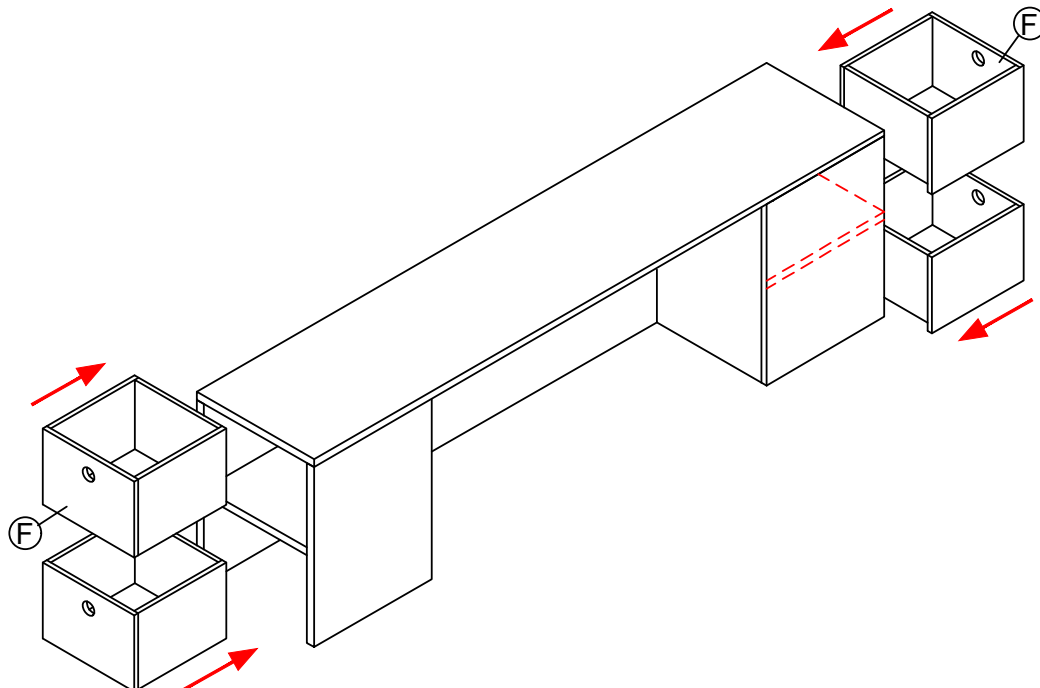


Ebba Bed - Foot Board


URBAN OUTFITTERS

Assembly Instructions


FOOT BOARD

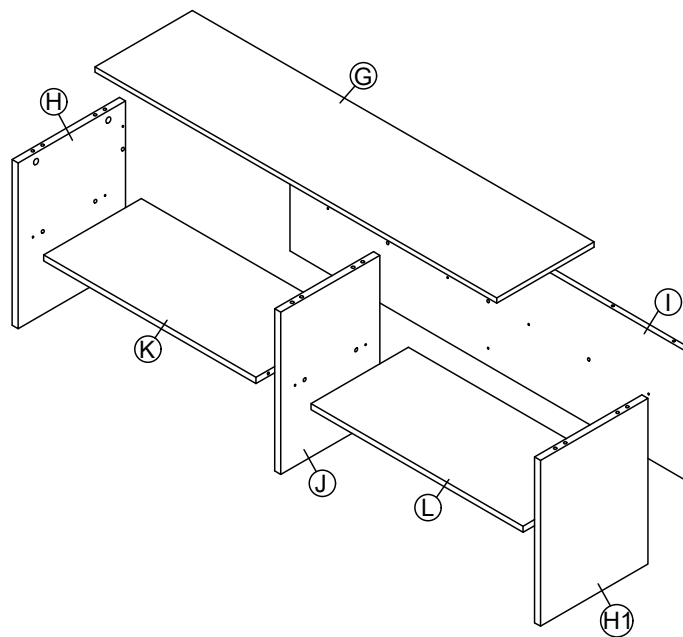

PARTS INCLUDED

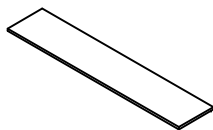


G) FB Top Panel
x1




H) FB Side Panel L
x1




H1) FB Side Panel R
x1

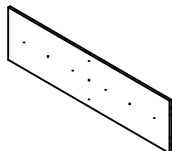


I) FB Back Panel
x1



J) FB Middle Panel
x1

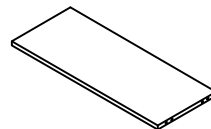


K) FB Shelf L
x1

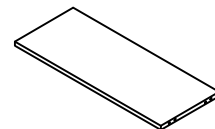

L) FB Shelf R
x1


HARDWARE INCLUDED



1) Cam Bolt
[T24] x28




2) Cam Lock
[D15 x 9.5mm] x28



3) Wood Dowel
[M8 x 30mm] x 24


STEP 11

Screw the cam bolts (1) into the pre-drilled holes in the FB Top Panel (G), FB Side Panel L & R (H & H1), FB Back Panel (I) and FB Middle Panel (J) as shown.

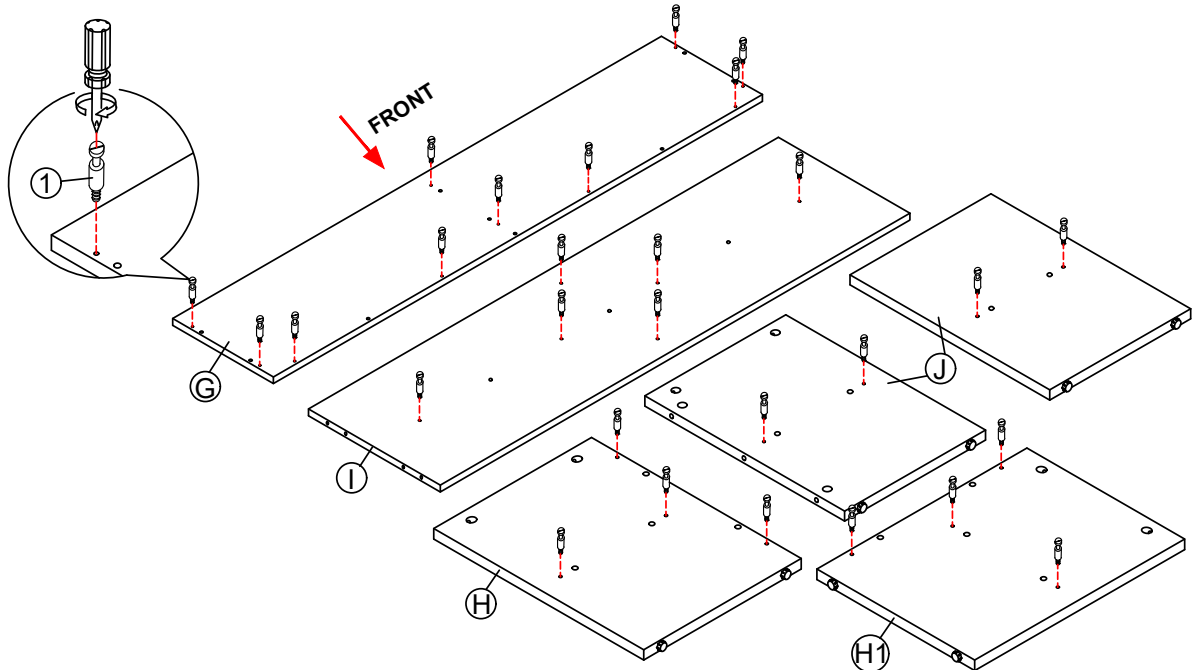


STEP 12

Insert the dowels (3) into the FB Shelf L (K) and FB Shelf R (L). Place the FB Shelf L (K) and FB Shelf R (L) onto the cam bolts (1) attached to the FB Middle Panel (J) as shown.

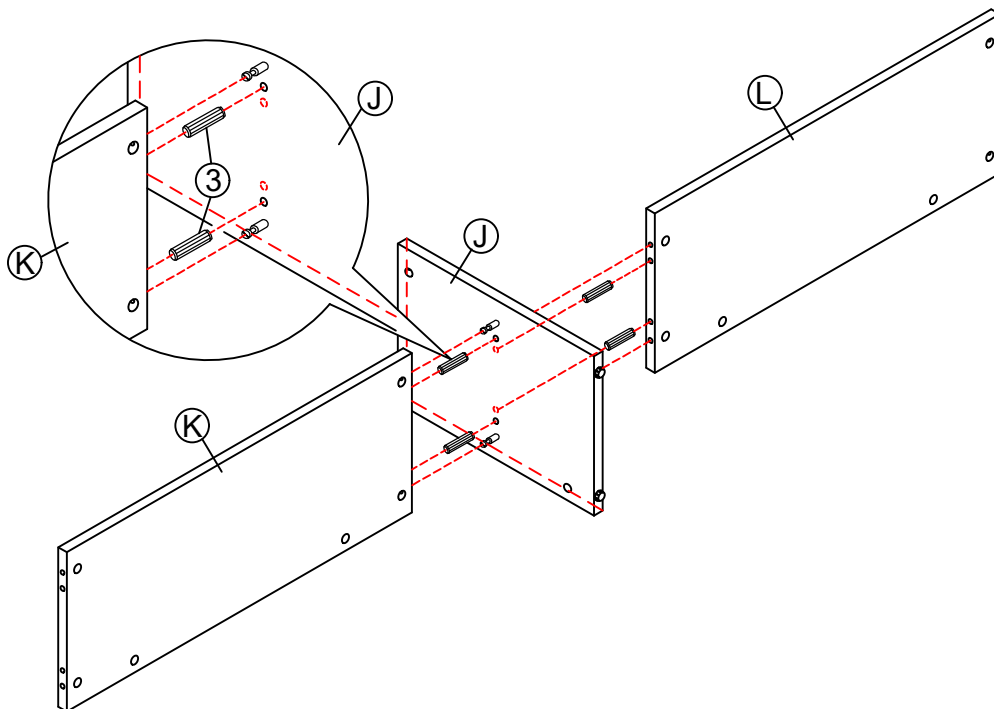


STEP 13

Insert the cam locks (2) into the holes in the FB Shelf L (K) and FB Shelf R (L) as shown. Tighten with Phillips head screwdriver (not provided) as shown.

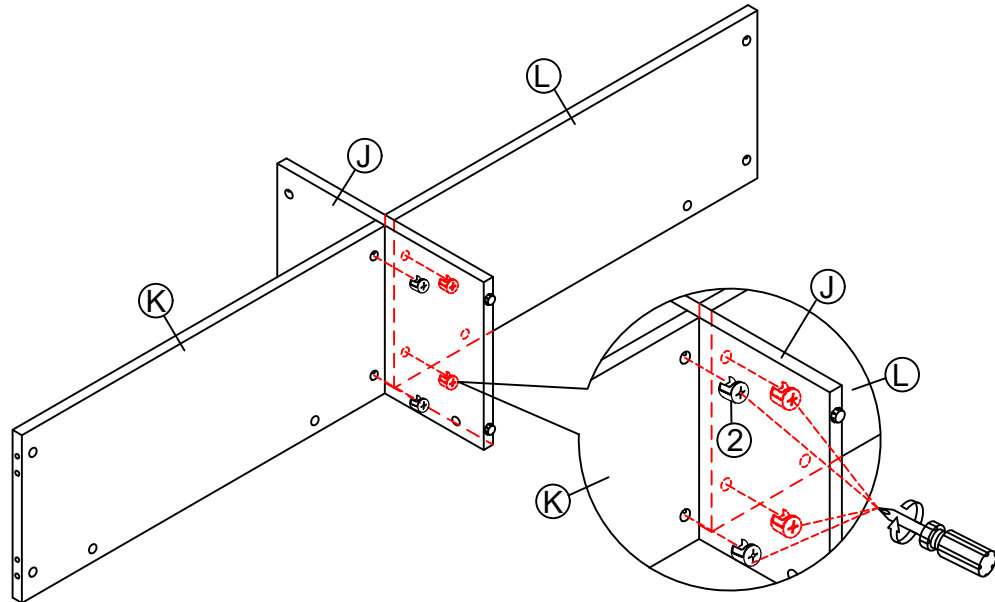


STEP 14

Insert the dowels (3) into the FB Middle Panel (J), FB Shelf L (K) and FB Shelf R (L). Place the FB Middle Panel (J), FB Shelf L (K) and FB Shelf R (L) onto the cam bolts (1) attached to the FB Back Panel (I) as shown.

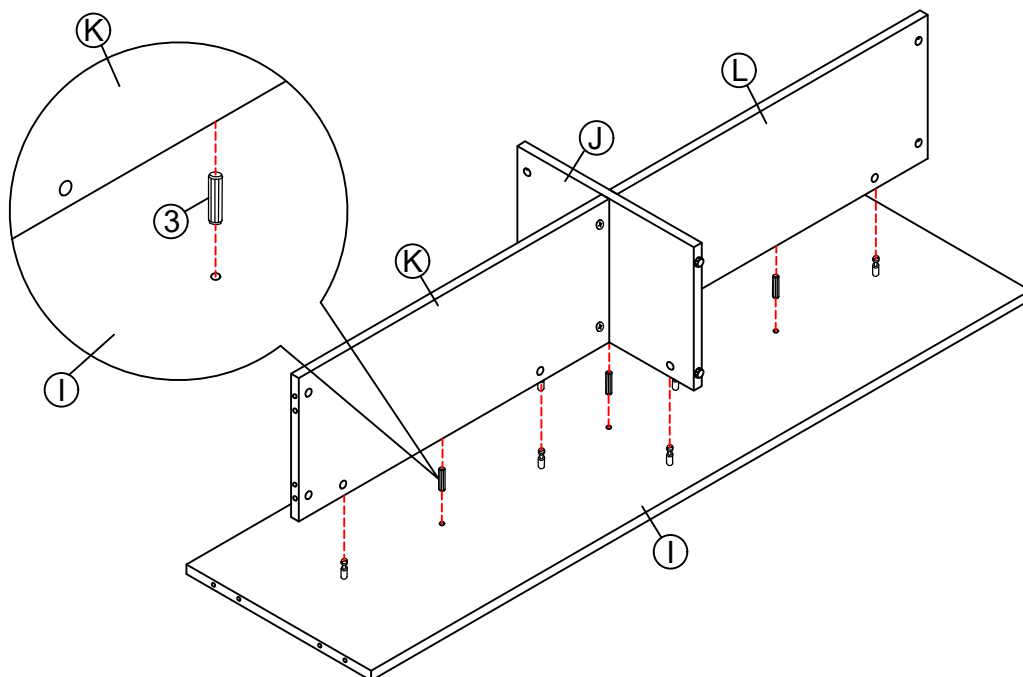


STEP 15

Insert the cam lock (2) into the holes in the FB Middle Panel (J), FB Shelf R (K) and FB Shelf L (L) as shown. Tighten with Phillips head screwdriver (not provided) as shown.

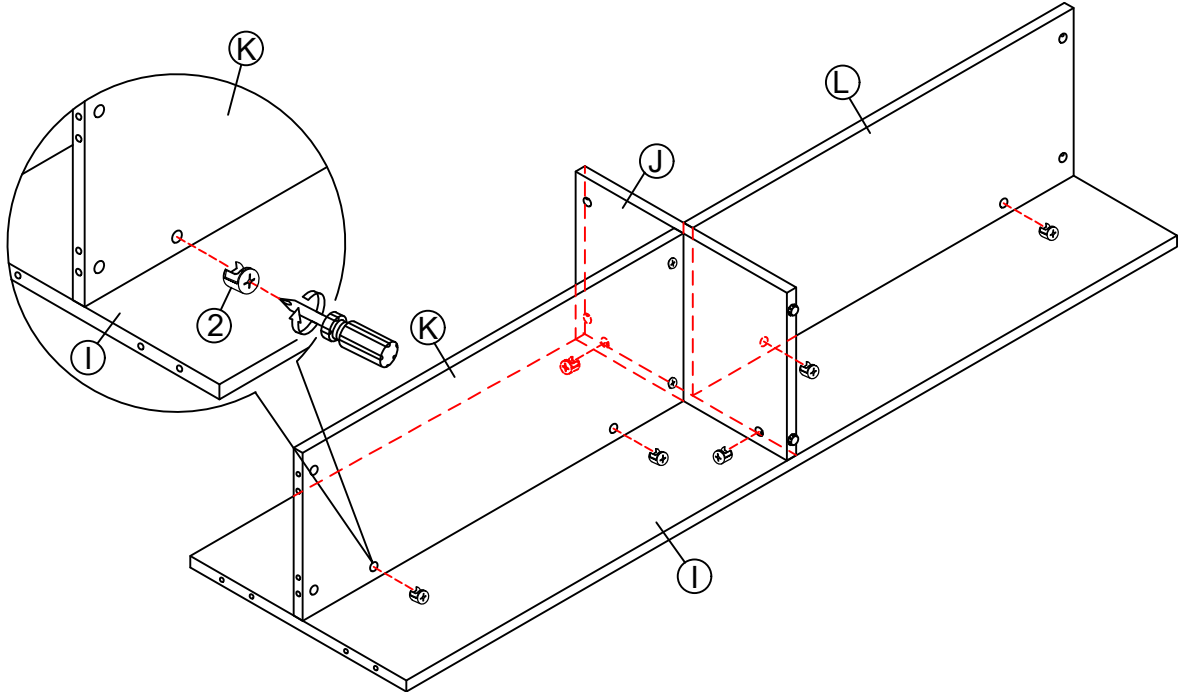

STEP 16

Insert the dowels (3) into the FB Back Panel (I), FB Shelf L (K) and FB Shelf R (L). Place the FB Side Panel L & R (H & H1) onto the FB Back Panel (I), FB Shelf L (K) and FB Shelf R (L) aligning the cam bolts (1) and dowels (3) as shown.

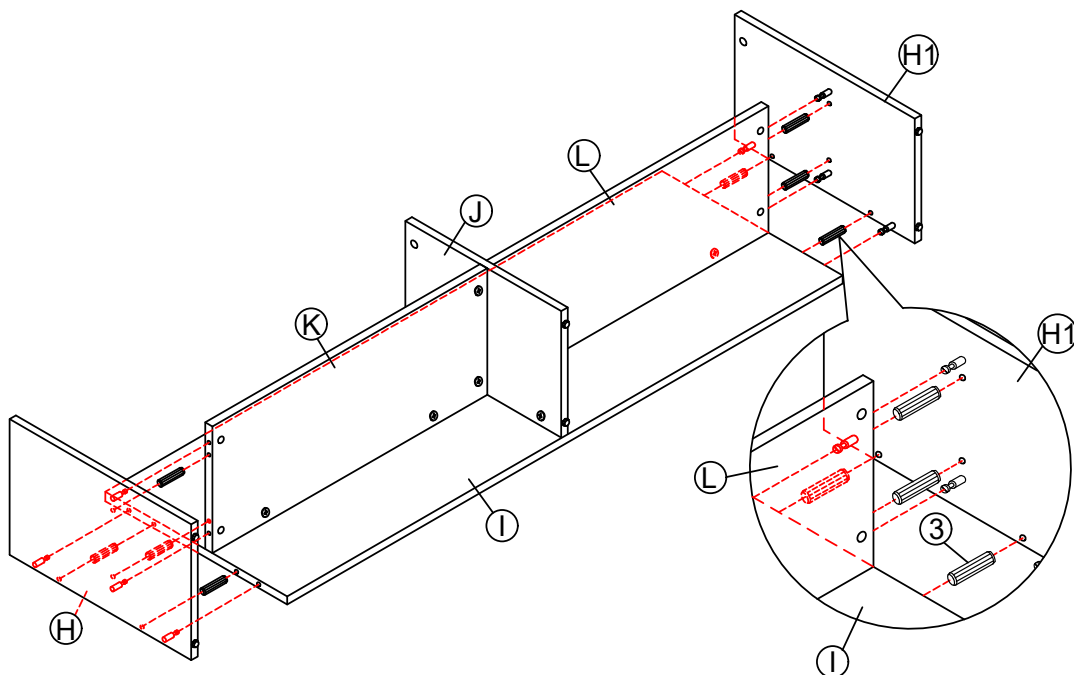


Ebba Bed - Foot Board

URBAN OUTFITTERS

Assembly Instructions


STEP 17

Insert the cam locks (2) into the holes in the FB Shelf L (K) and FB Shelf R (L) as shown. Tighten with Phillips head screwdriver (not provided) as shown.

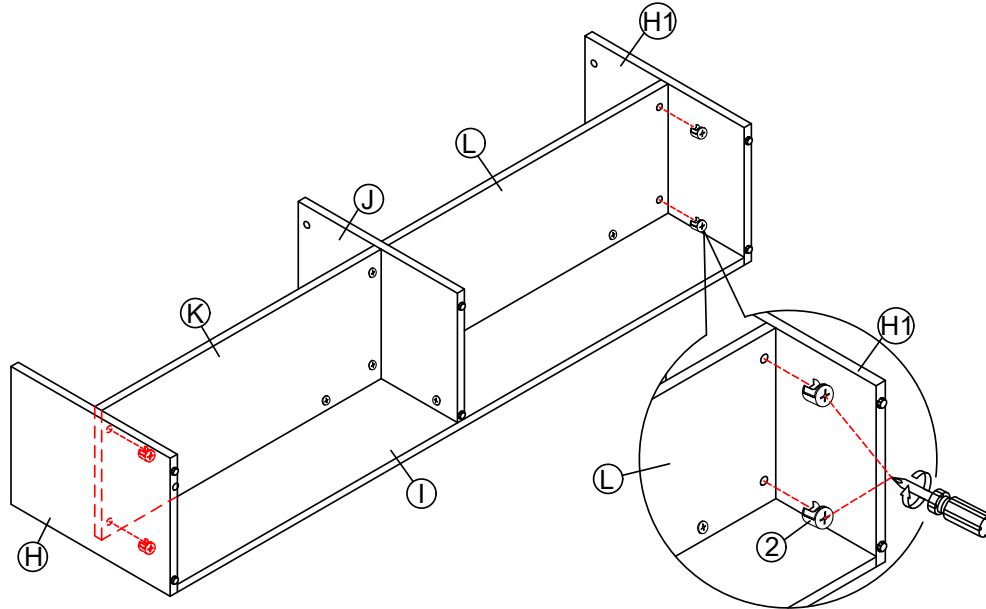

STEP 18

Insert the dowels (3) into the FB Side Panel L & R (H & H1), FB Back Panel (I) and FB Middle Panel (J). Place the FB Top Panel (G) onto the FB Side Panel L & R (H & H1), FB Back Panel (I) and FB Middle Panel (J) aligning the cam bolts (1) and dowels (3) as shown.

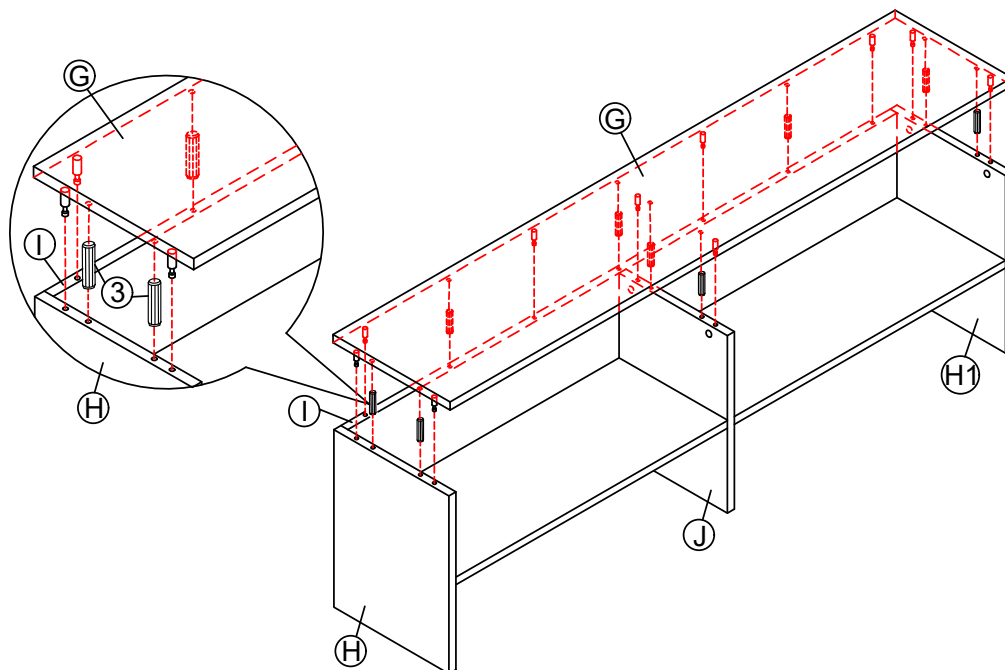


Ebba Bed - Foot Board

URBAN OUTFITTERS

Assembly Instructions


STEP 19

Insert the cam locks (2) into the holes in the FB Side Panel L & R (H & H1) and FB Middle (J) as shown. Tighten with Phillips head screwdriver (not provided) as shown.

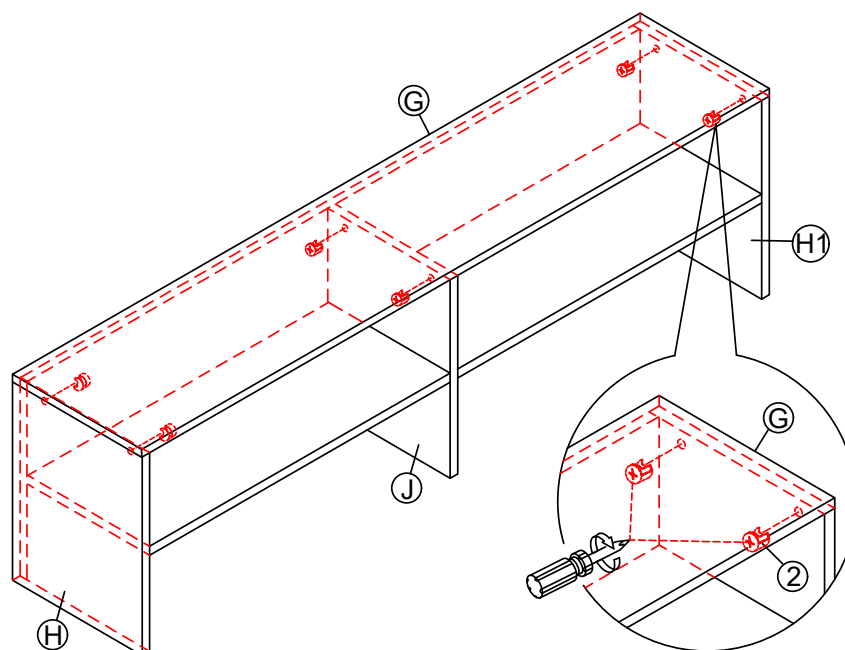

STEP 20

Insert the cam locks (2) into the holes in the FB Back Panel (I) as shown. Tighten with Phillips head screwdriver (not provided) as shown

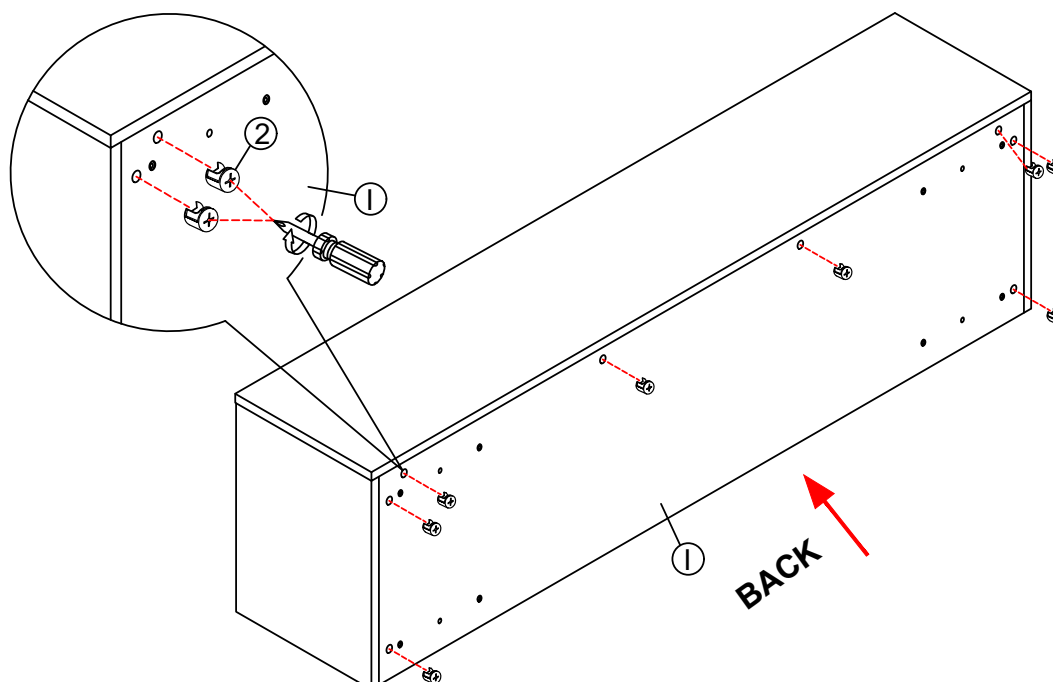


Ebba Bed - Side Boxes


URBAN OUTFITTERS

Assembly Instructions

SIDE BOXES

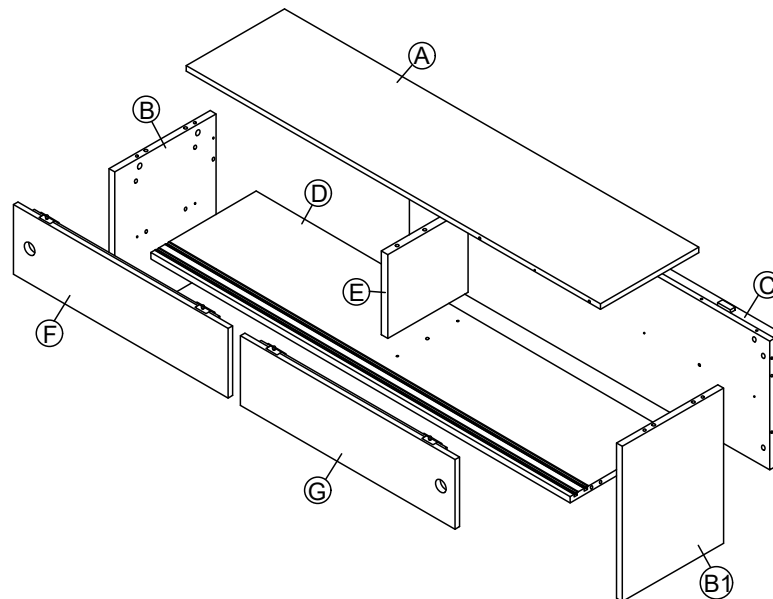

PARTS INCLUDED

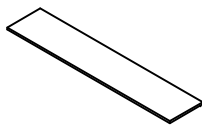


A) SB Top Panel
x2




B) SB Side Panel L
x2




B1) SB Side Panel R
x2

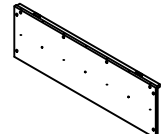


C) SB Back Panel
x2

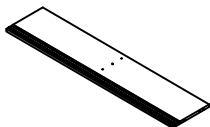


D) SB Base Panel
x2



E) SB Middle Panel
x2

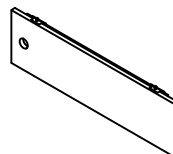


F) SB Door L
x2

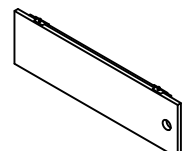

G) SB Door R
x2

HARDWARE INCLUDED



1) Cam Bolt
[T24] x48



2) Cam Lock
[D15 x 9.5mm] x48



3) Wood Dowel
[M8 x 30mm] x40


Ebba Bed - Side Boxes

URBAN OUTFITTERS

Assembly Instructions


STEP 21

Screw the cam bolt (1) into the pre-drilled holes in the SB Top Panel (A), SB Side Panel L & R (B & B1), SB Back Panel (C) and SB Base Panel (D) as shown.

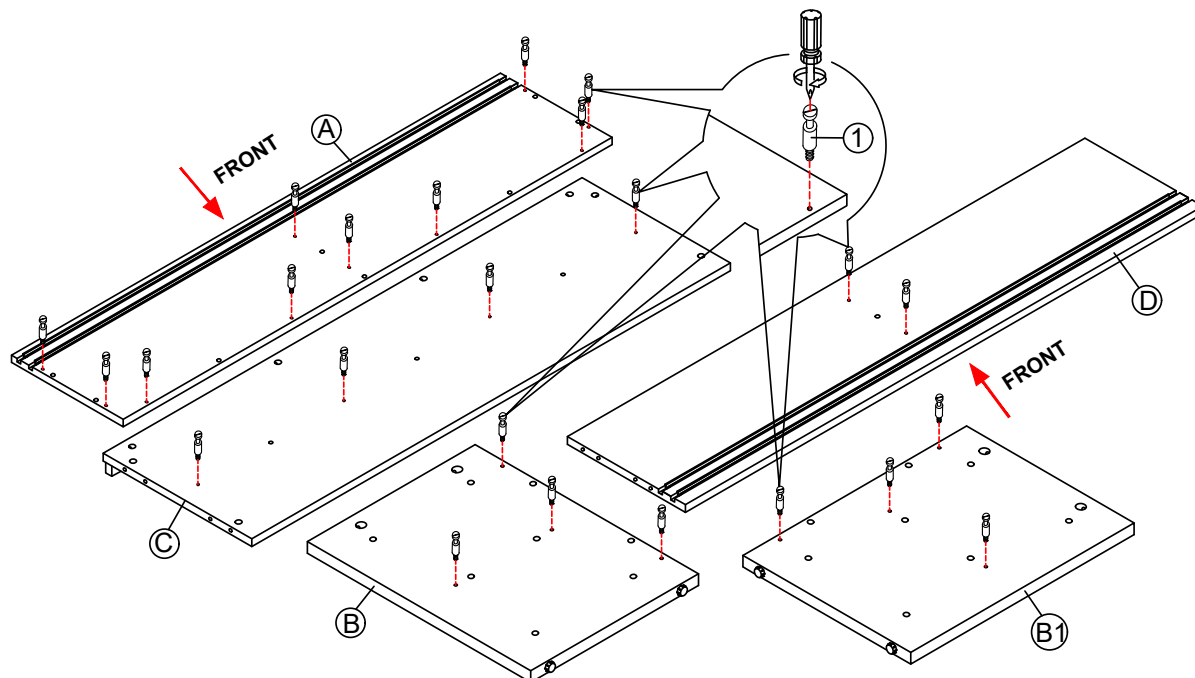


STEP 22

Insert the dowels (3) into the holes in the edge of the SB Base Panel (D). Place the SB Base Panel (D) onto the cam bolts (1) attached to the SB Back Panel (C) as shown.

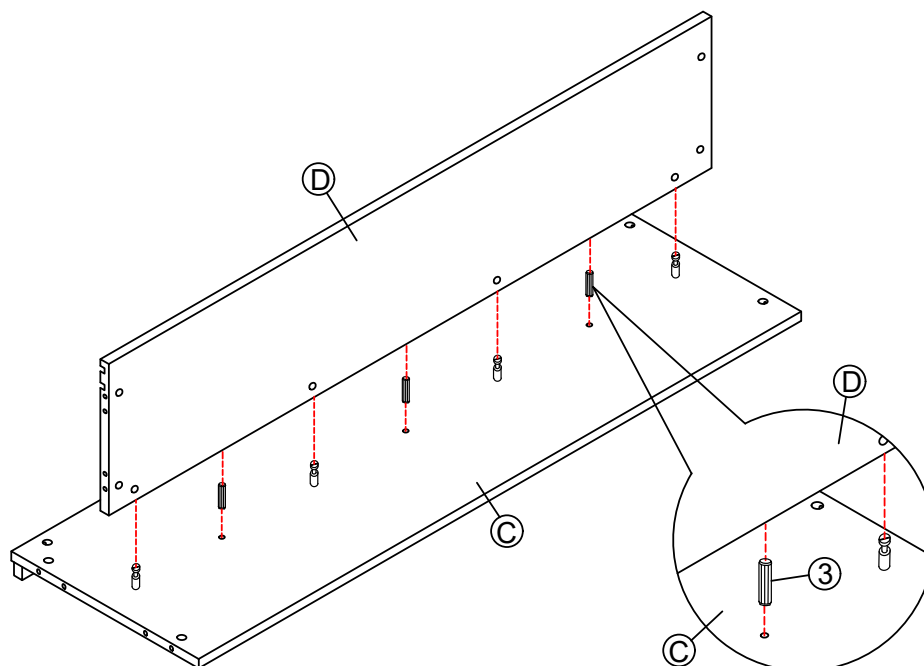


STEP 23

Insert the cam locks (2) into the holes in the SB Base Panel (D) as shown. Tighten with Phillips head screwdriver (not provided) as shown.

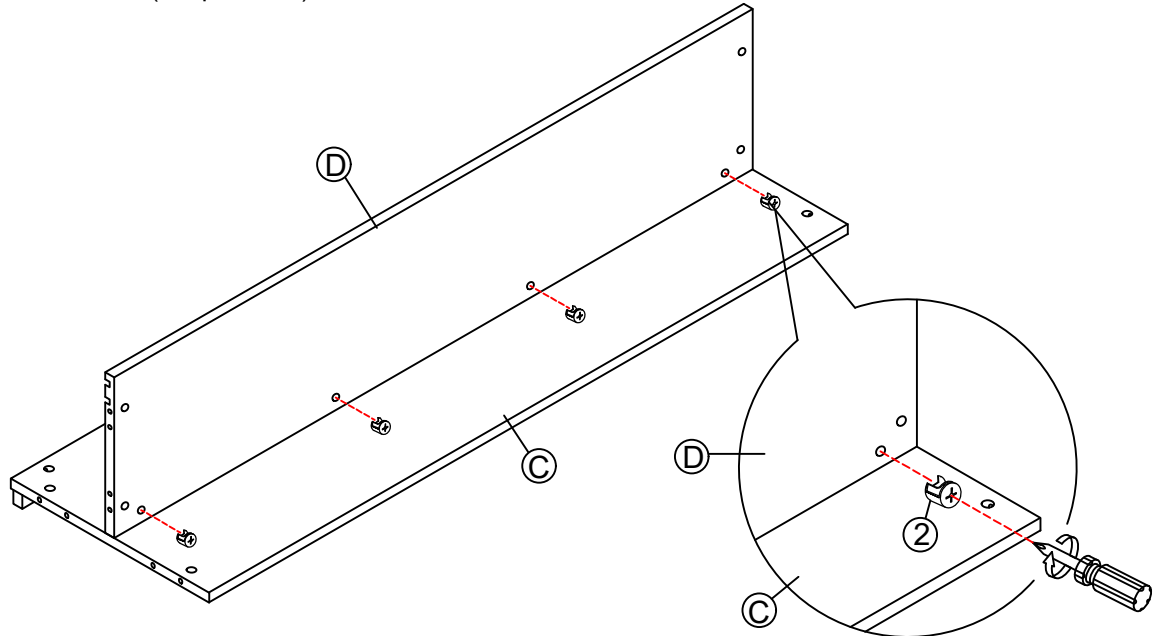


STEP 24

Insert the dowels (3) into the holes in the edge of the SB Back Panel (C) and SB Base Panel (D). Place the SB Back Panel (C) and SB Base Panel (D) onto the cam bolts (1) attached to the SB Side Panel L & R (B & B1) as shown.

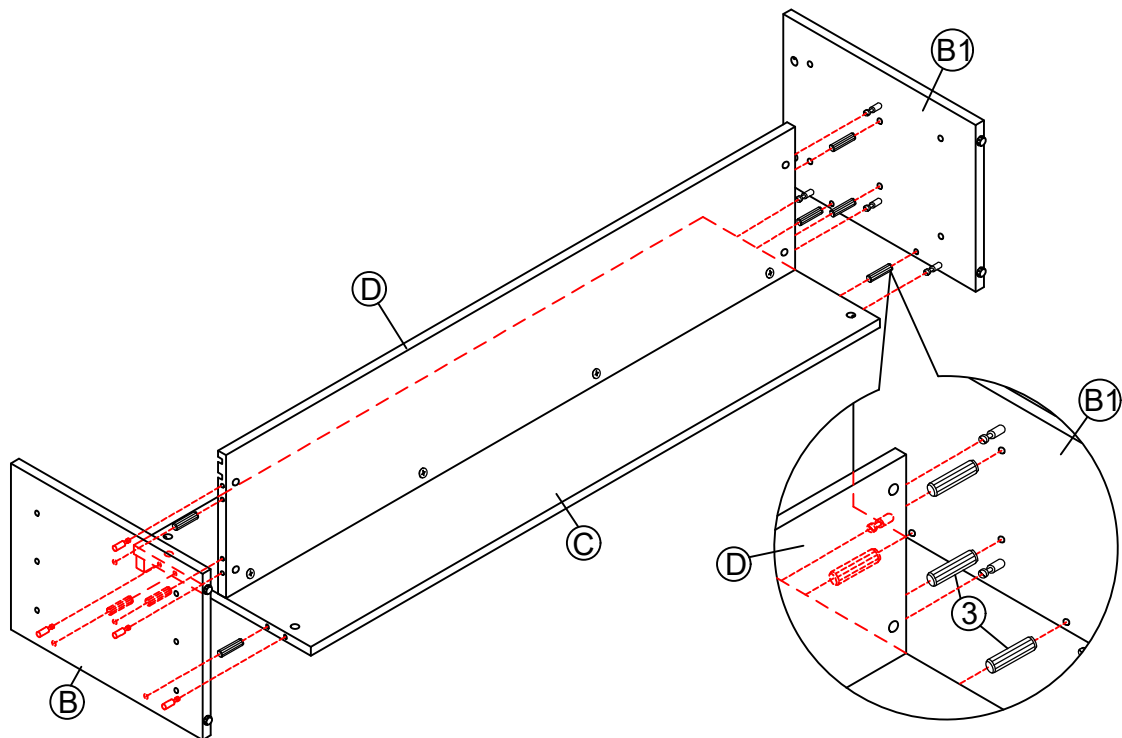


STEP 25

Insert the cam locks (2) into the holes in the SB Back Panel (C) and SB Base Panel (D) as shown. Tighten with Phillips head screwdriver (not provided) as shown.

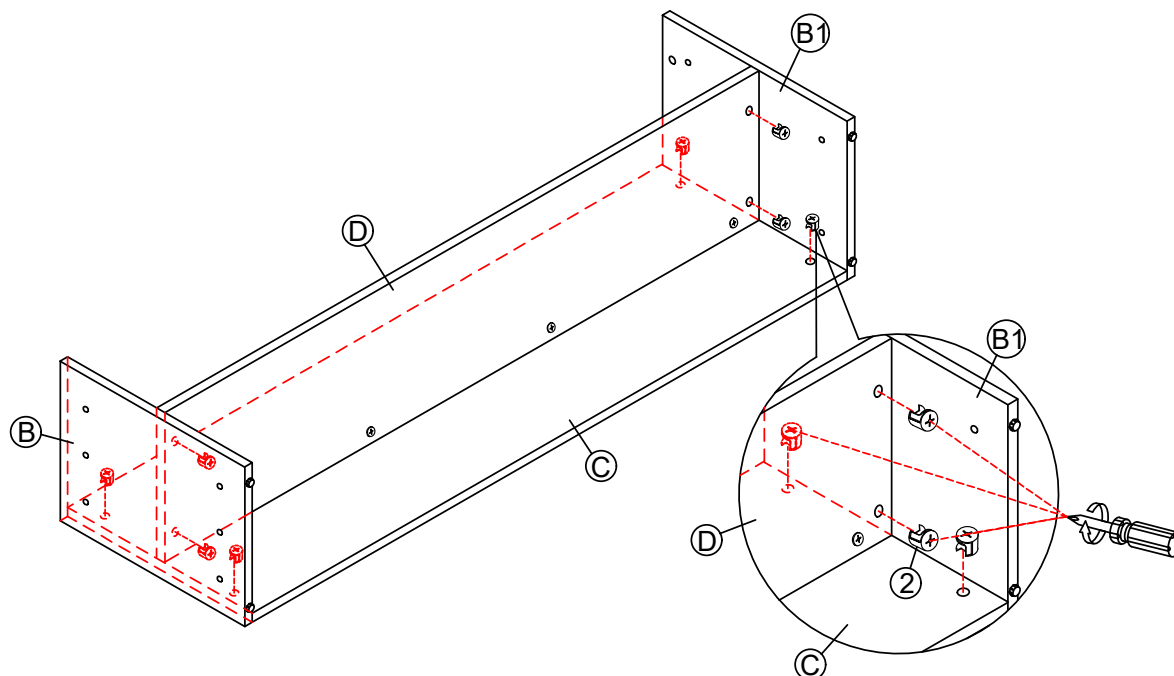


STEP 26

Insert the dowels (3) into the holes in the edge of the SB Middle Panel (E). Place the SB Middle Panel (E) onto the cam bolts (1) attached to the SB Base Panel (D) as shown.

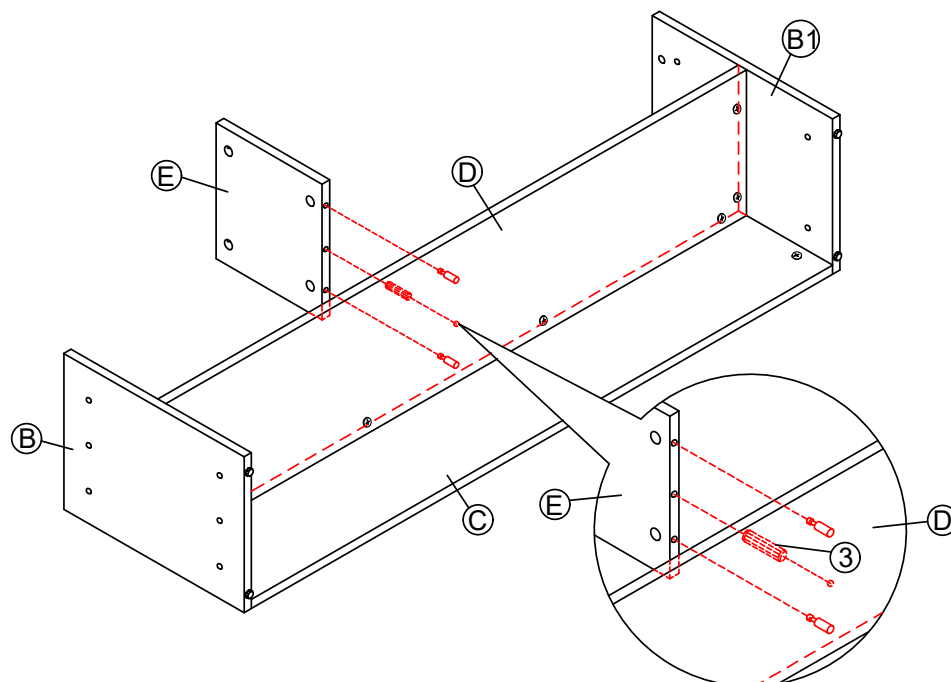


STEP 27

Insert the cam locks (2) into the holes in the SB Middle Panel (E) as shown. Tighten with Phillips head screwdriver (not provided) as shown.

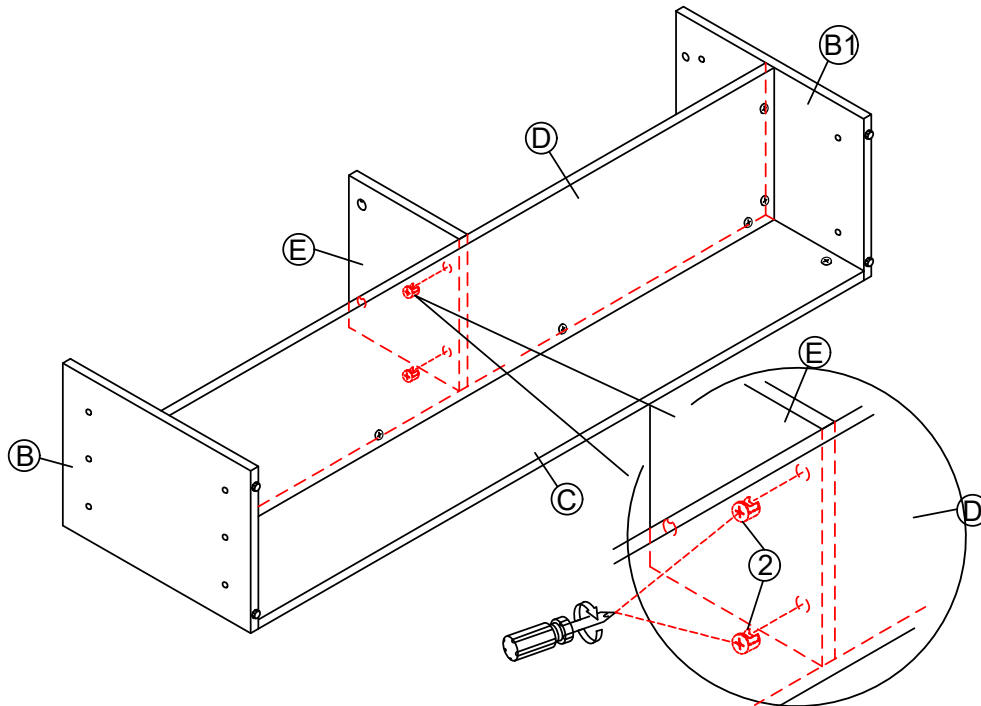

STEP 28

Insert the dowels (3) into the holes in the edge of the SB Side Panel L & R (B & B1), SB Back Panel (C) and SB Middle Panel (E). Place the SB Top Panel (A) onto the SB Side Panel L & R (B & B1), SB Back Panel (C) and SB Middle Panel (E) aligning the cam bolts (1) and dowels (3) as shown.

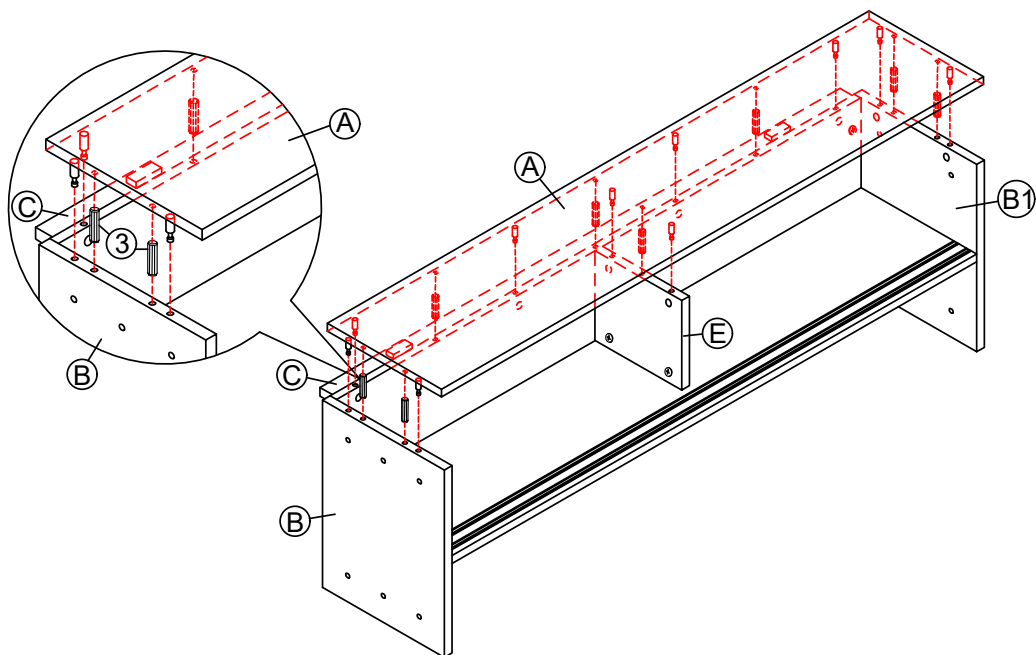


Ebba Bed - Side Boxes

URBAN OUTFITTERS

Assembly Instructions

STEP 29

Insert the cam locks (2) into the holes in the SB Side Panel L & R (B & B1) SB Back Panel (C) and SB Middle Panel (E) as shown. Tighten with Phillips head screwdriver (not provided) as shown.

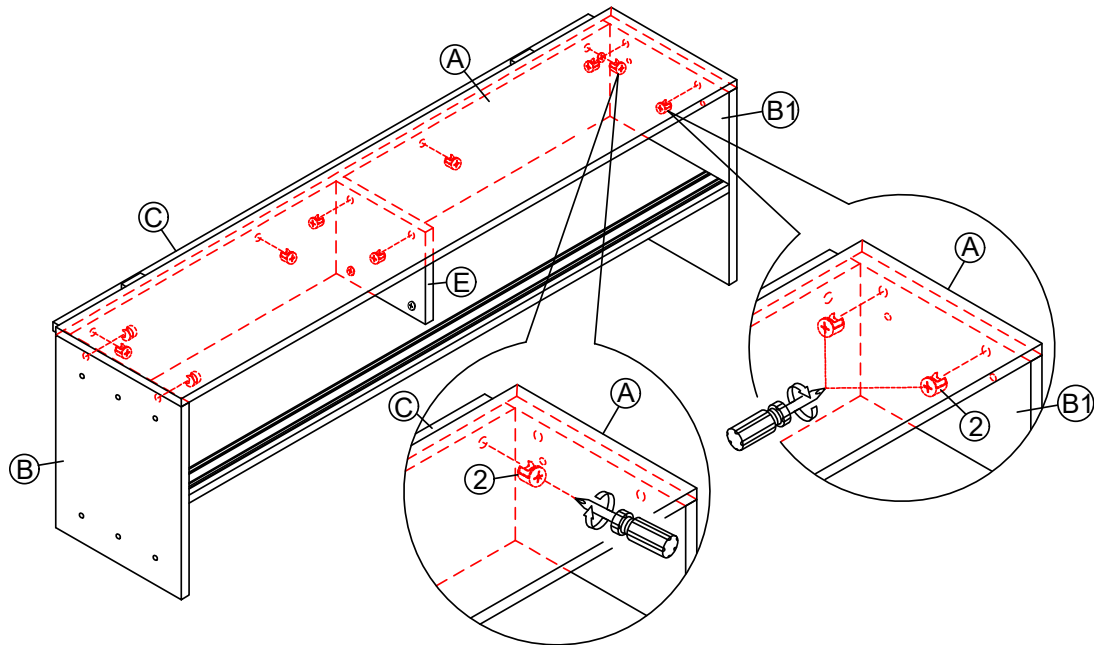


Ebba Bed - Side Boxes

URBAN OUTFITTERS

Assembly Instructions


STEP 30

Insert SB Door L (F) into place.

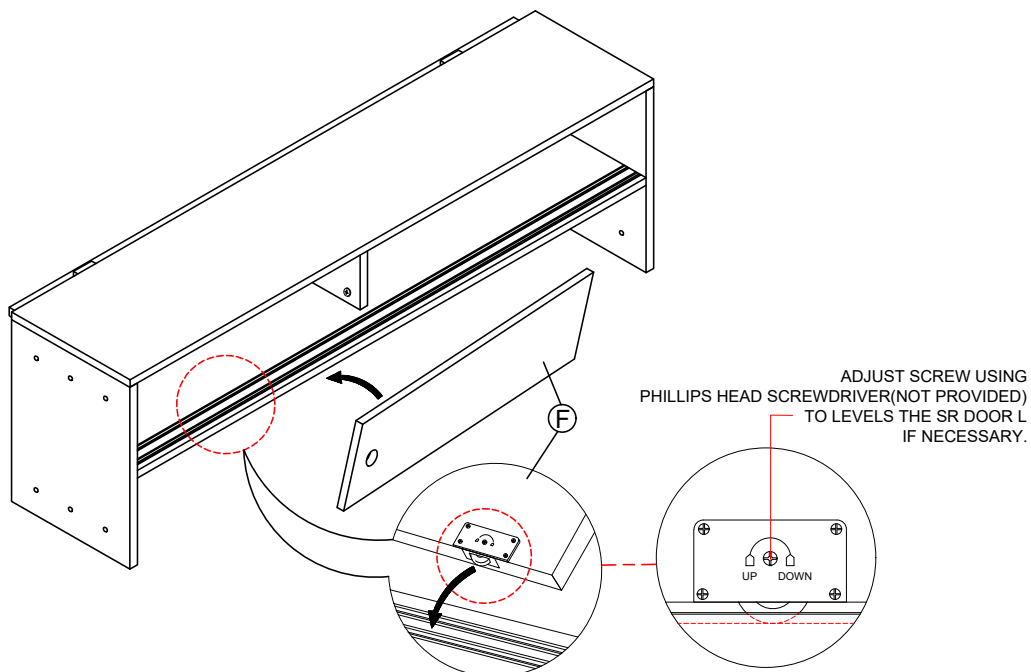

STEP 31

Adjust SB Door L (F) hardware.

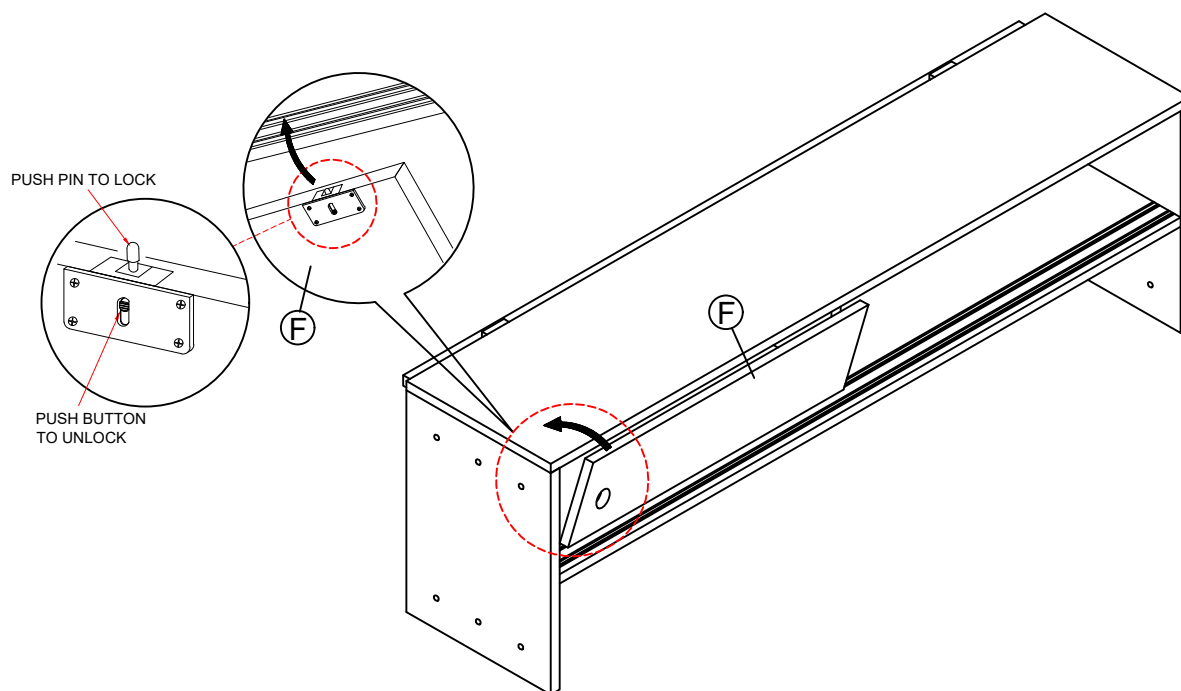


Ebba Bed - Side Boxes

URBAN OUTFITTERS

Assembly Instructions


STEP 32

Insert SB Door R (G) into place.

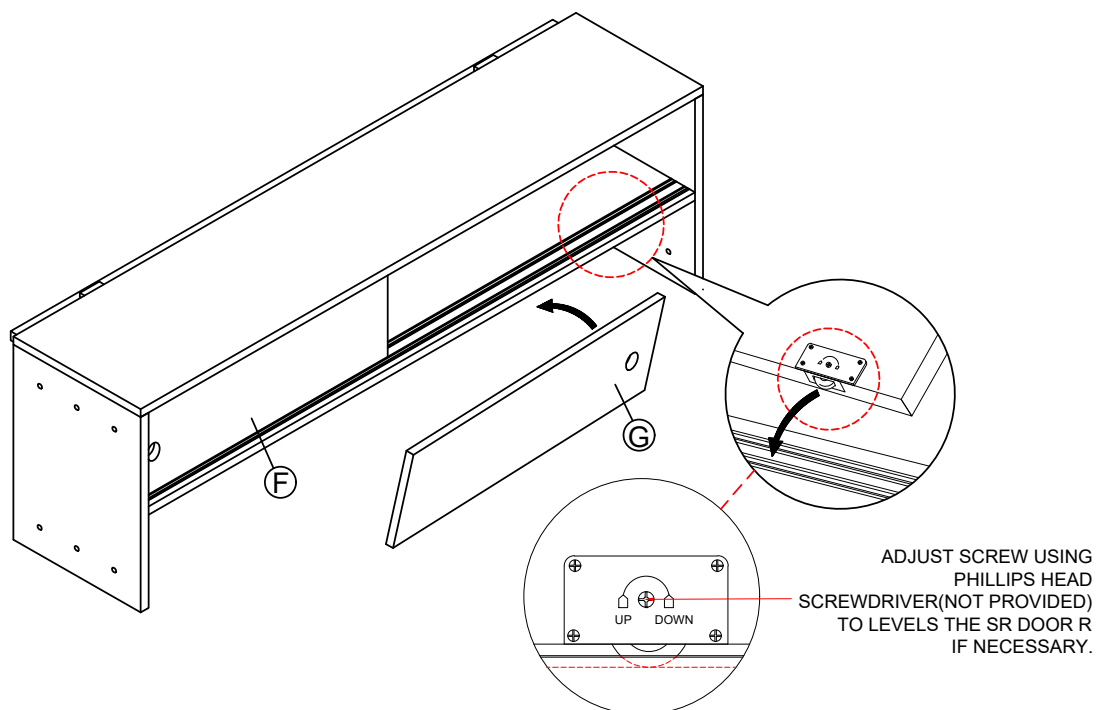

STEP 33

Adjust SB Door R (G) hardware.

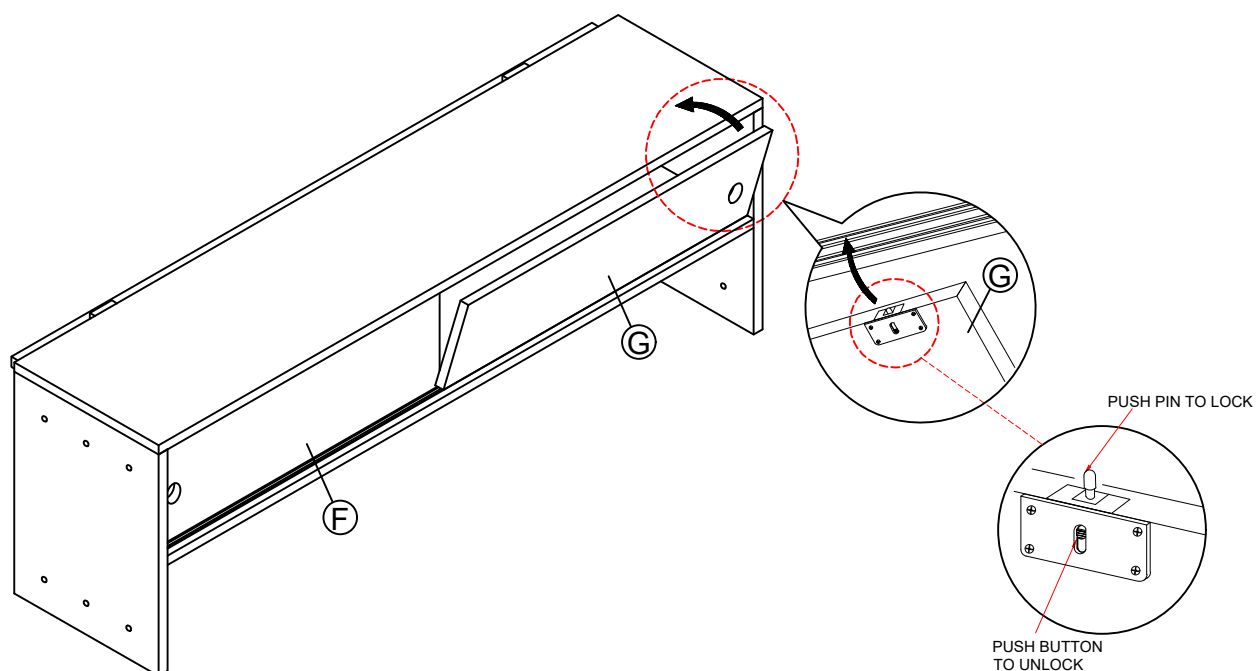


Ebba Bed - Component Assembly


URBAN OUTFITTERS

Assembly Instructions


COMPONENTS

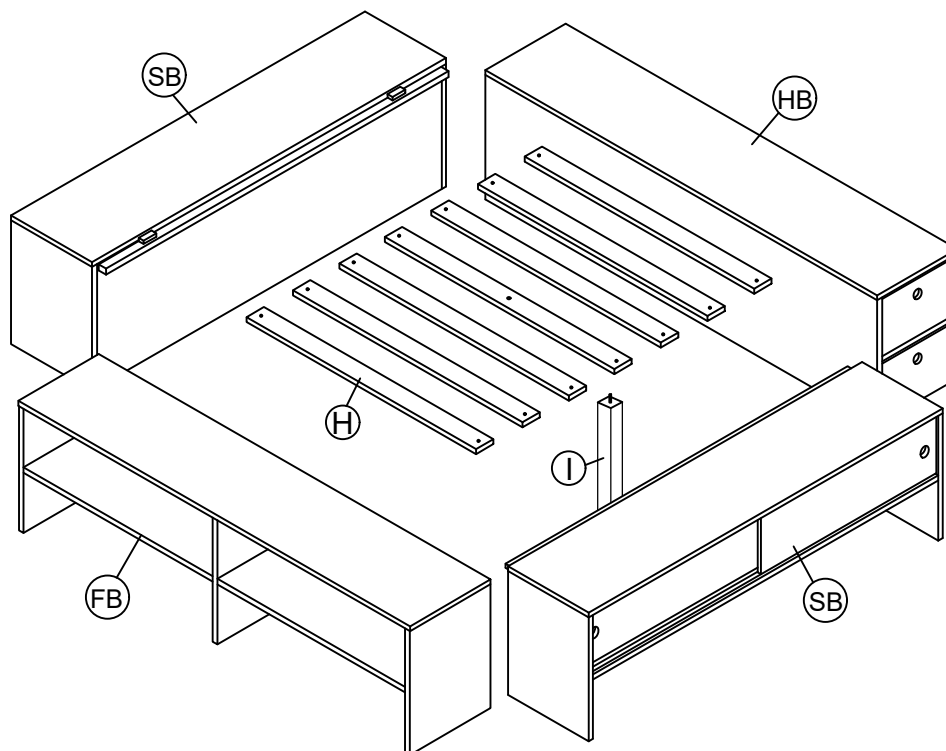


PARTS INCLUDED

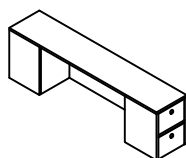


HB) HEAD BOARD
x1

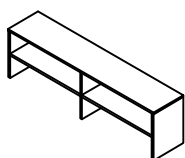

FB) FOOT BOARD
x1

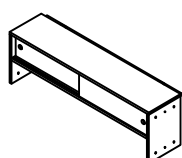

SB) SIDE BOXES
x1

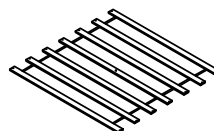


H) Slats
x1



I) Support Leg
x1

HARDWARE INCLUDED



4) Wood Dowel
[M8 x 20mm] x8



5) Screw
[M4 x 32mm] x14



6) Allen K
[M6] x1



7) Collection Bolts,
Washer & Spring Washer
[M6 x 35mm] x16


Ebba Bed - Component Assembly

URBAN OUTFITTERS

Assembly Instructions


STEP 34

Insert the dowels (4) into the holes in the HEAD BOARD (HB), then align and fasten SIDE BOXES (SB) to HEAD BOARD (HB) using bolt (7) and tighten with Allen Wrench (6).

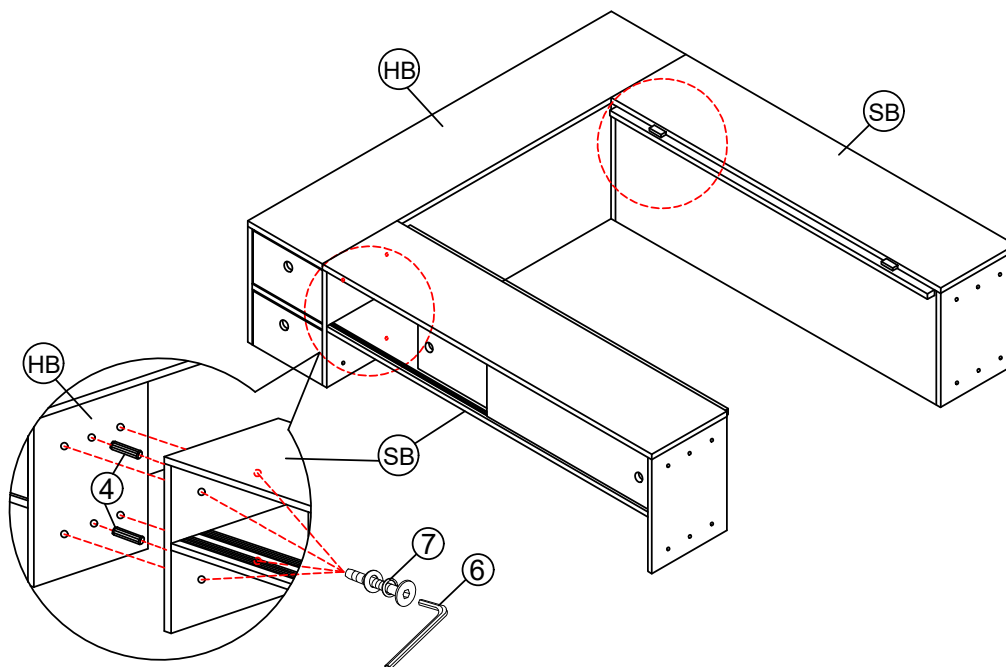

STEP 35

Insert the dowels (4) into the holes in the FOOT BOARD (FB), then align and fasten SIDE BOXES (SB) to FOOT BOARD (FB) using bolt (7) and tighten with Allen Wrench (6).

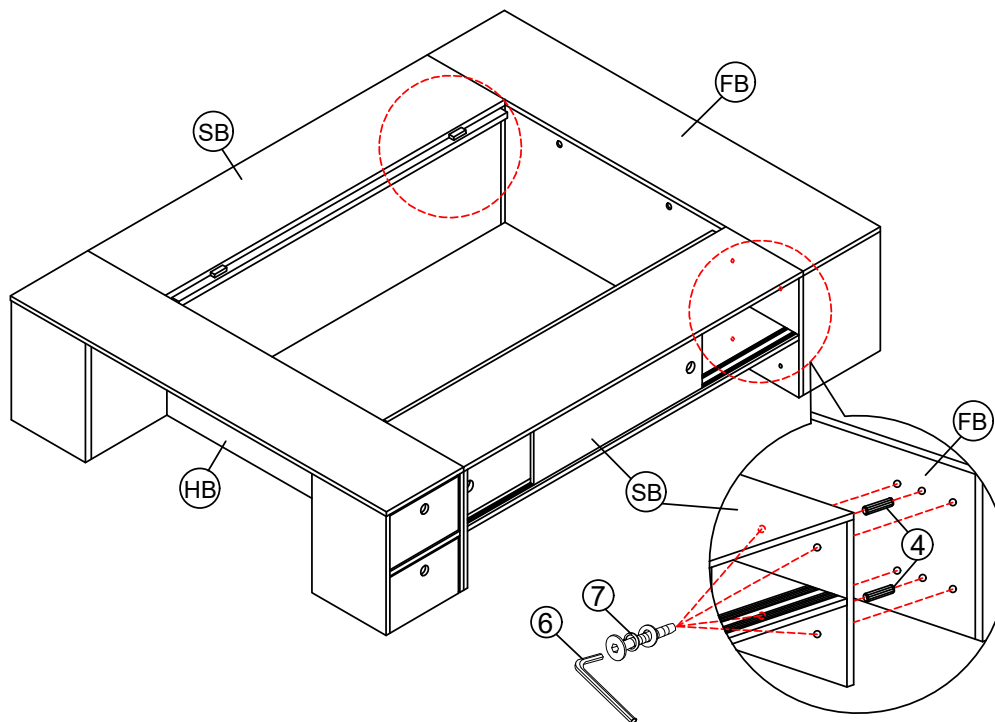

Ebba Bed - Component Assembly

URBAN OUTFITTERS

Assembly Instructions

STEP 36

Align and fasten Slats (H) to bed rail using screw (5). Tighten with Phillips head screwdriver (not provided) as shown.

