

CELESTE VANITY

Assembly Instructions

URBAN OUTFITTERS

TOOLS REQUIRED BUT NOT INCLUDED:


Phillips head screw driver

WARNINGS:

Do not throw away packing materials and carton until after assembly. Ensure all parts are present prior to assembly. Contact customer service immediately if parts are missing. Assemble all parts on a clean smooth surface.


CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.
Do not place over heat.
Do not use harsh chemicals.
Clean with Soft dry cloth.
Before cleaning any part test a small spot in a hidden area.

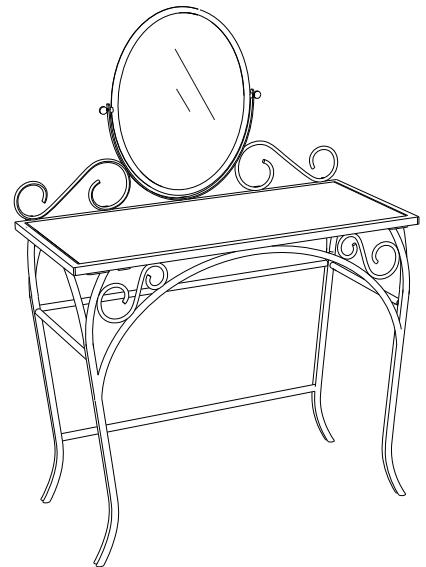

PARTS INCLUDED:


[36" x 17" x 51"]

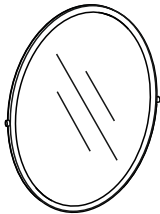

(A) Mirror




(B) Knob

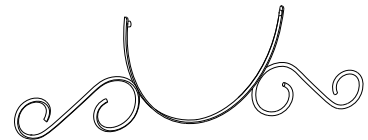


(C) Mirror Frame



(D) Table top

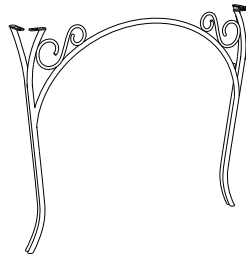


(E) Front Leg

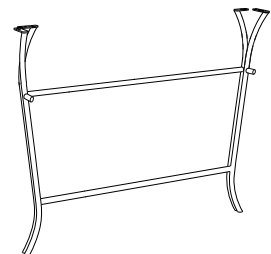


(F) Back Leg



(G) Screw
[6 x 6 x 15 mm] x21



(H) Tubes x2



(I) Anti-tip Brackets



(J) Zip Ties




(K) Screws



(L) Plastic Anchors


STEP 1

Carefully unpack the vanity parts onto a clean smooth surface such as carpet or cardboard. Insert the tubes (H) into the front and back legs (E&F) as shown. Insert the screws (G) as shown and tighten with a phillips head screwdriver.

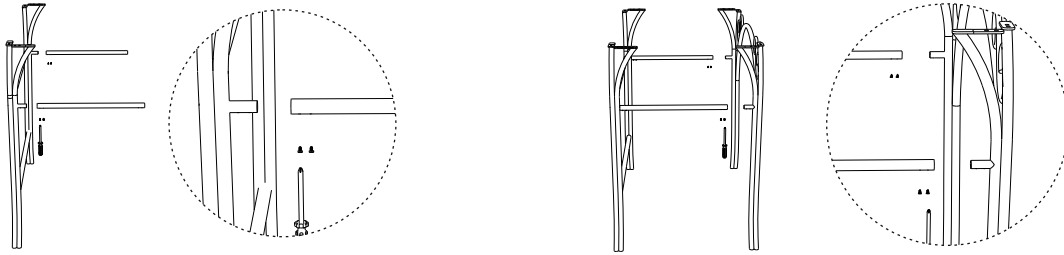


STEP 2

Flip the table top (D) and the partially assembled vanity base upside down then, align them as shown. Insert the screws (G) as shown and tighten with a phillips head screwdriver.

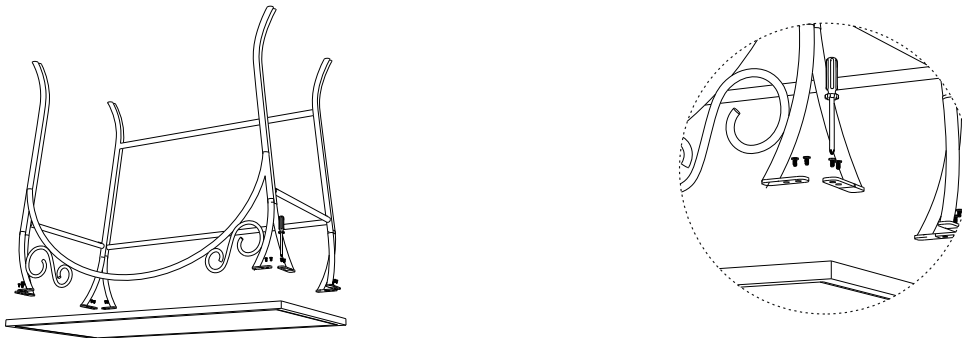


STEP 3

With help, flip the vanity upright. Align the mirror frame (C) with the back of the vanity as shown. Insert the screws (G) as shown and tighten with a phillips head screwdriver.

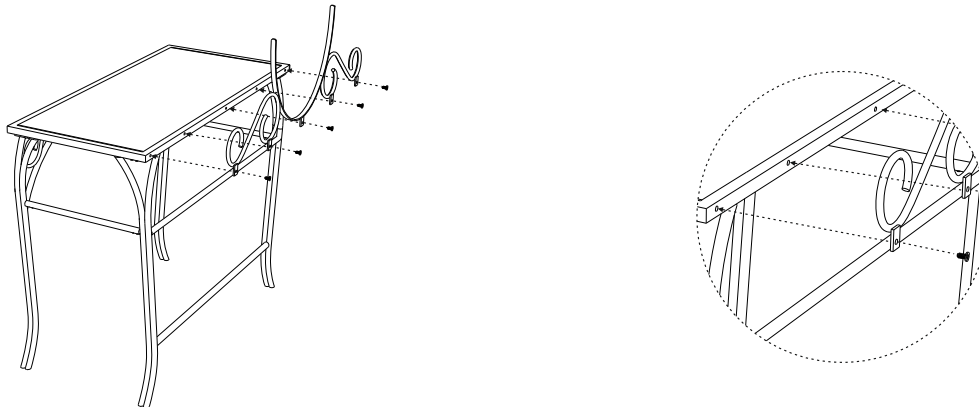

STEP 4

Align the mirror (A) with the mirror frame (C) as shown. Insert the knobs (B) through the mirror (A) and into the mirror frame (C) then, screw them clockwise into the mirror to complete the assembly. Do not over-tighten the knobs (B)

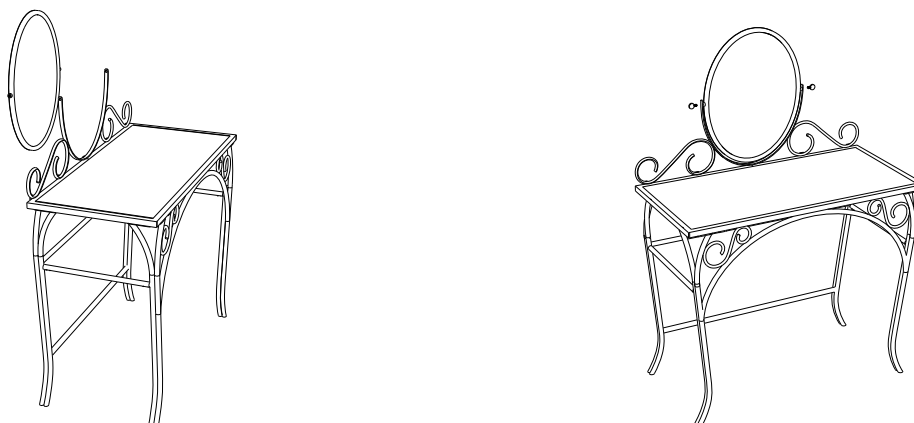


STEP 5 (OPTIONAL)

Place the vanity against the wall in its desired location then, place the anti-tip brackets (I) on the wall below the top shelf on both sides, as shown, and mark the location of the hole in the anti-tip brackets (I) on the wall.


Wood or Stud Installation:

Insert screws (K) through the anti-tip brackets (I) into the wall and tighten with a Phillips head screwdriver.

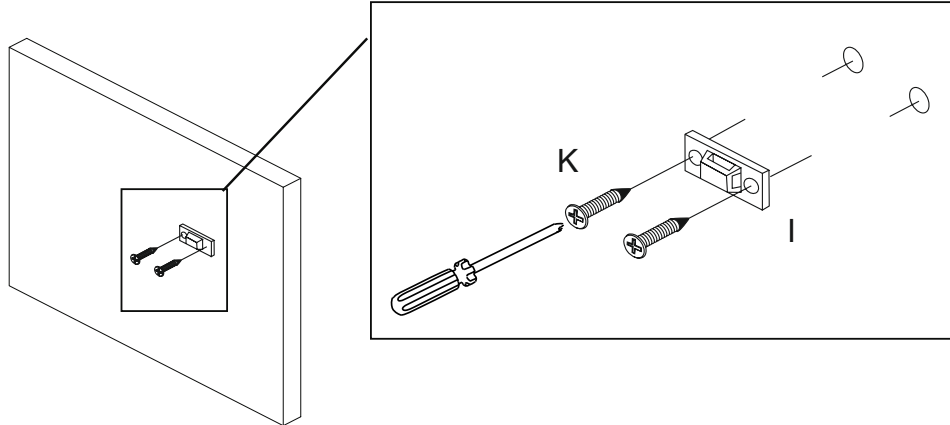

Drywall Installation:

Attach the plastic anchors (L) to the wall at the marked location using a drill and hammer. Insert screws (K) through the anti-tip brackets (I) into the plastic anchors (L) and tighten with a Phillips head screwdriver.

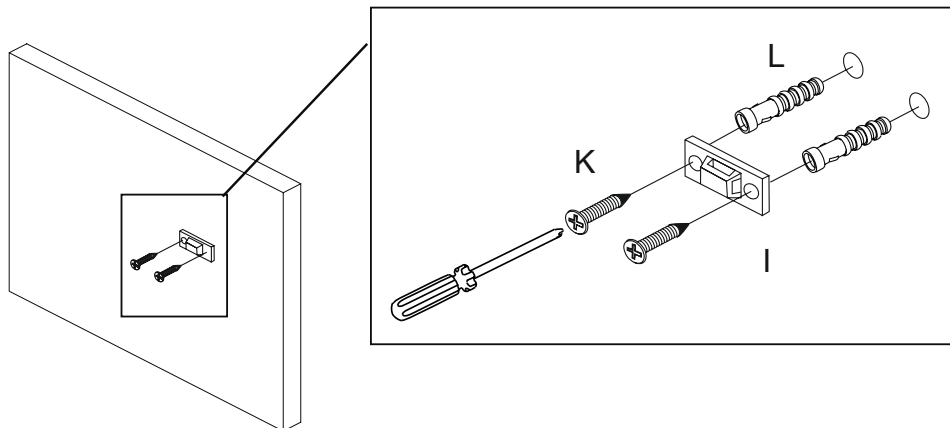

STEP 6

Feed the zip ties (J) through the anti-tip brackets (I) and around the vanity then, pull the zip ties (J) tight.

