


Assembly Instructions


TOOLS REQUIRED BUT NOT INCLUDED: Phillips Head Screwdriver




Do not throw away packing materials and carton until after assembly.
Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight. Do not place over heat or Air conditioning vents.
Adjust levelers so that the furniture sits flat on uneven floors.
Blot spills do not rub, with a clean white cloth.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.

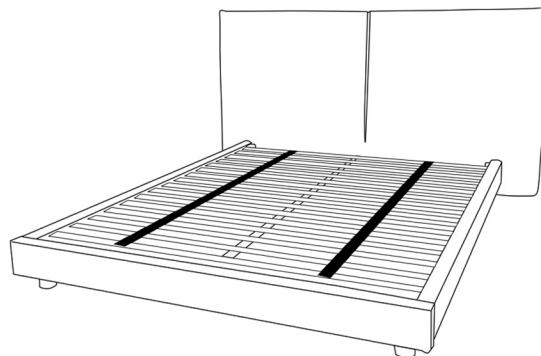

PARTS INCLUDED



(A) Bolt 16x
φ 5/16 x 30mm



(B) Spring washer 16x
φ13mm




(C) Flat washer 16x
φ18mm




(D) Hex Key 1x
M5 x 100mm



(E) Screw 48x
φ4 x 30mm

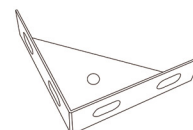


(F) Corner Brace 2x
98mm x 98mm x 30mm



(G) Wrench 1x
98mm




(H) Nut 2x
φ 5/16 x 15mm




(I) Wood Legs 2x




(J) Middle Legs 2x

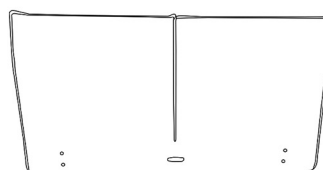

(K) Headboard 1x

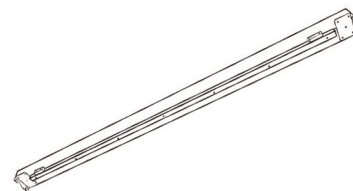

(L) Side rail 2x

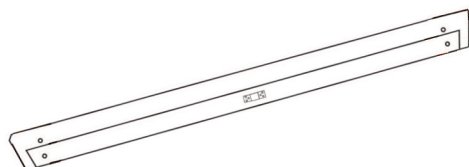

(M)Footboard 1x




(N) Center rail 1x




(O) Roll Slats 1x

Assembly Instructions

Step 1. Insert Bolt (A), Lock Washer (B), and Flat Washer (C), into the holes in the Headboard (K) and Footboard (M) as shown in the image below. Leave at least 1/4" gap behind the head of the bolt and washers and the Headboard (K) and Footboard (M) face. With help align the Side Rail (L) to the bolts in the Headboard (K). Slide the Side Rail (L) Steel Corner Bracket over the bolts between the Flat washer (C) and Headboard (K) as shown below. With help align the Footboard (M) with the other end of the Side Rail. Slide the Side Rail (L) Steel Corner Bracket over the bolts between the Flat Washer (C) and Footboard (M) as shown below. Repeat this step for the other Side Rail (L). After both Side rails (L) are attached tighten all bolts with supplied Hex Key (D).

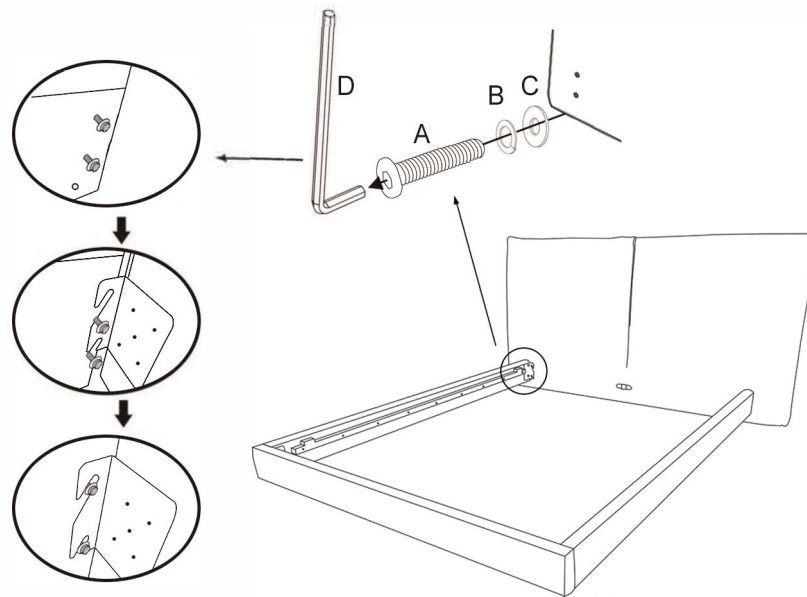


Step 2. With help, flip the bedframe over on its side onto a clean smooth surface such as carpet or cardboard. Align the Corner Brace (F) with the four inside corners of the bed. Insert Bolt (A), Lock Washer (B), and Flat Washer (C), into the holes in the Headboard (K) and Footboard (M) as shown in the image below. Tighten all bolts with supplied Hex Key (D). Make sure all bolts are completely tightened.

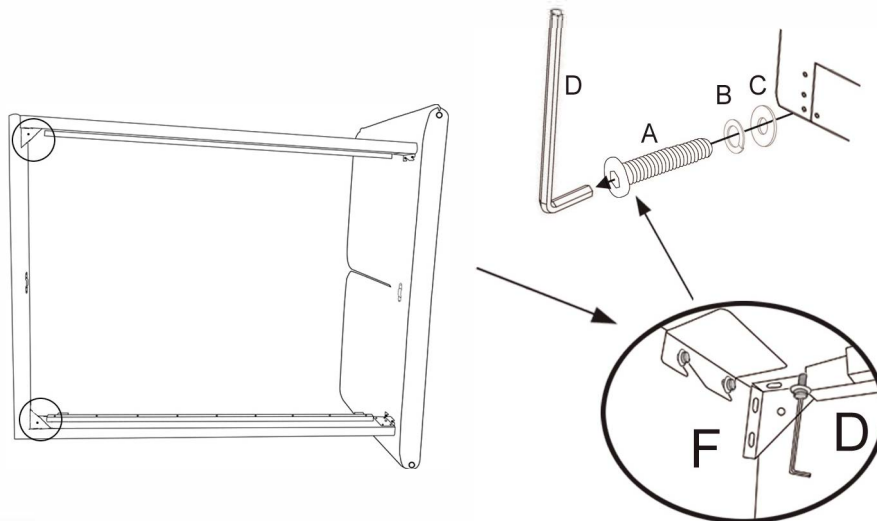


Assembly Instructions

Step 3. Insert Wood Legs (I) into the Corner Brace (F). Align Flat Washer (C), Lock Washer (B), and Nut (H). Tighten with supplied Wrench (G). With help carefully lay the bed down onto the legs. **DO NOT DROP THE BED.** This can damage the frame.

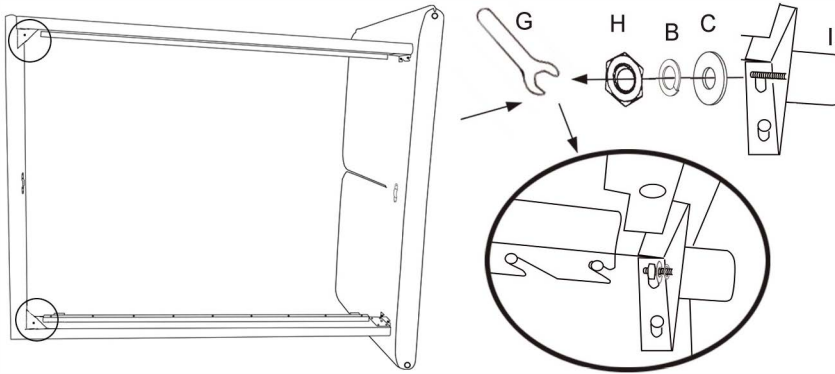


Step 4. Carefully lay the bed down onto the floor with help. Align Center Rail (K) with the Middle Legs (G) screw in tight. Align center rail with headboard and footboard brackets as shown below.

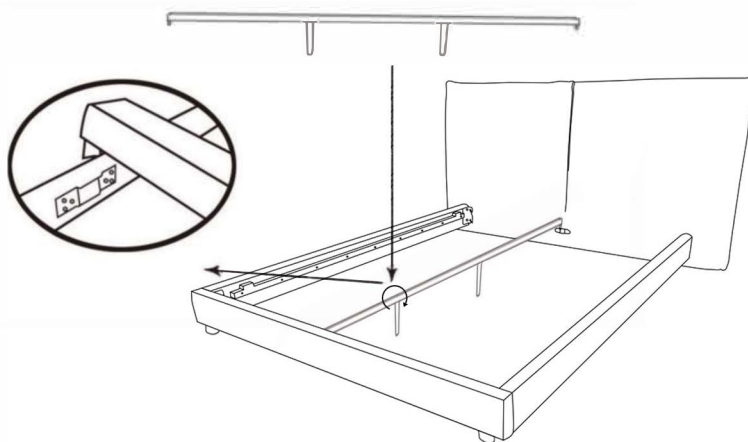

Assembly Instructions

Step 5. Make sure your bed is fully assembled and all bolts are tight. With help unroll the slats onto a clean surface. Make sure the fabric strips are facing upward. Locate the "Slat Blocks" mounted on the side rails. The last slat on the slat roll will lock over the slat blocks as shown below.

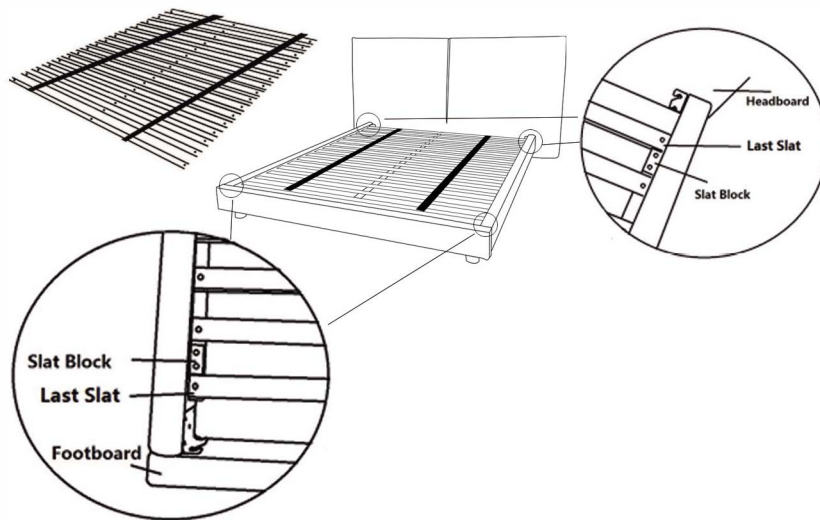

Step 6. Screw in each rail with Screws(E). You may need to re-tighten all bolts after use.

