

MARGOT FLOOR MIRROR

Assembly Instructions

URBAN OUTFITTERS

TOOLS REQUIRED BUT NOT INCLUDED:

Screwdriver, Drill, Hammer, Level, Pencil

WARNINGS:

Do not throw away packing materials and carton until after assembly.
Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight. Do not place overheat or air conditioning vents. Adjust levelers so that the furniture sits flat on uneven floors. Blot spills do not rub, with a clean white cloth.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.



PARTS INCLUDED:



A) Mirror

[21.9 x 1.2 x 64"] x1
or
[55.5 x 3 x 162.5 cm]



B) French Cleat

[11.8 x 1.97 x 0.2"] x1
or
[30 x 5 x 0.5 cm]



C) Screw

[D 0.35 / 0.19 x 2.32"] x4
or
[D 8.9/4.8 x 59 mm]



D) Plastic Anchor

[D 0.35 " x 1.4" Bolt] x 4
or
[D 9 x 36 mm]


MARGO FLOOR MIRROR

Assembly Instructions

URBAN OUTFITTERS


STEP 1

Locate the desired position of the mirror (A) on your wall and mark the position lightly on the wall. Measure the distance from the floor to the bottom of the French cleat attached to the back of the mirror and subtract 1 cm (~3/8") to determine the mounting height for the loose French cleat (B). Mark the mounting height on the wall and align the holes on the loose French cleat (B) to the marked mounting height. Ensure the cleat is level and mark the location of the holes in the loose French cleat (B) on the wall.

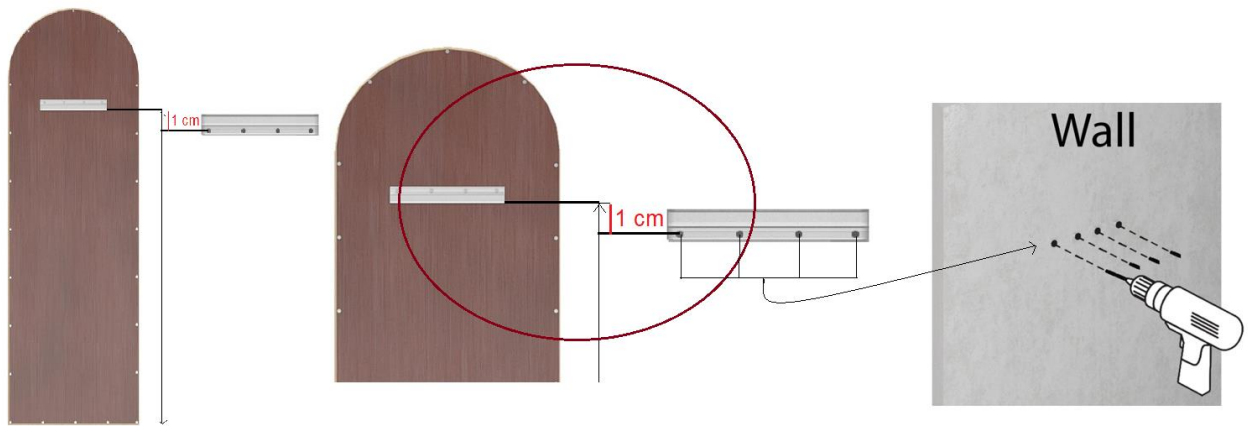

STEP 2

Pre-drill holes for the plastic anchors (D) with a drill at the marked hole locations and use a hammer to tap them into the wall. Align the Loose French Cleat (B) and insert screws (C). Tighten with a Phillips head screw driver.

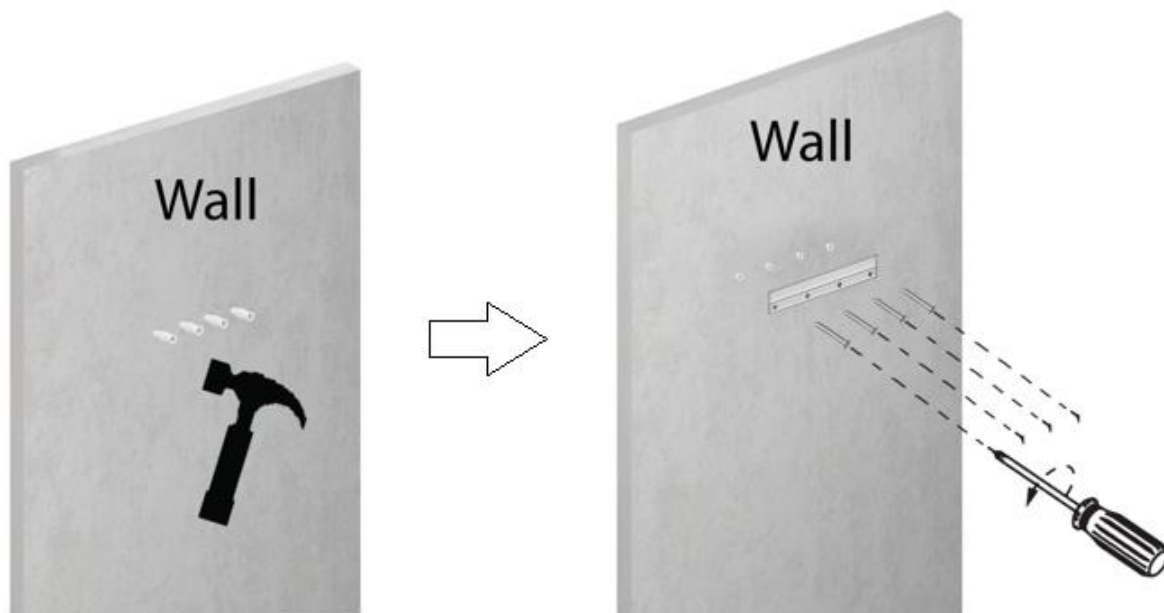

MARGO FLOOR MIRROR

Assembly Instructions

URBAN OUTFITTERS

STEP 3

Hang the mirror (A) on the French cleat now attached to the wall to complete the installation.

