

DISPLAY SIDE TABLE

Assembly Instructions

URBAN OUTFITTERS


No additional tools required

WARNINGS:


At least two people recommended for assembly.
Do not throw away packing materials and carton until after assembly.
Ensure all parts are present prior to assembly.
Contact customer service immediately if parts are missing.
Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight.
Do not place overhead or air conditioning vents.
Adjust levelers so that the furniture sits flat on uneven floors.
Blot spills with a clean white cloth, do not rub.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.

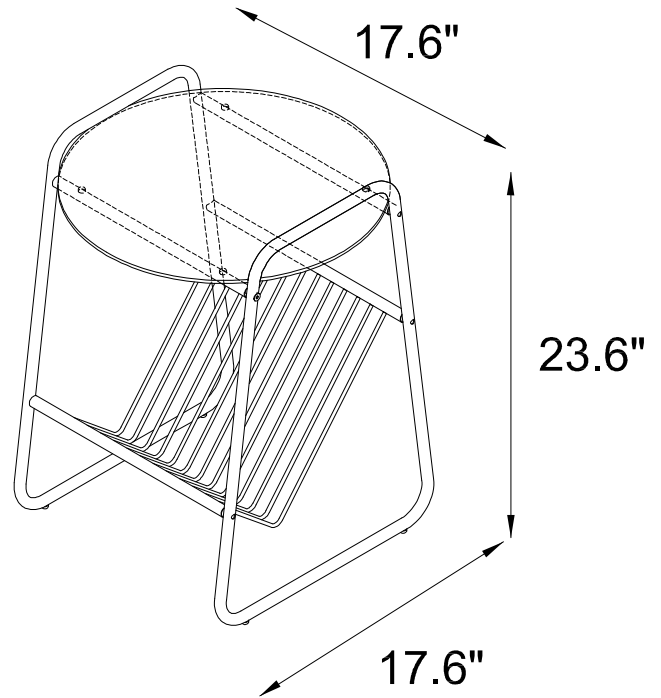


PARTS INCLUDED

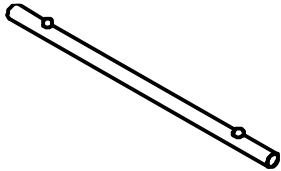


A) Cross rail x 2

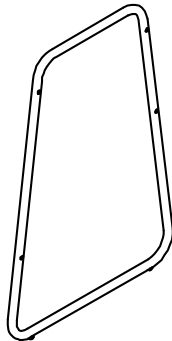


B-L) Left Side frame

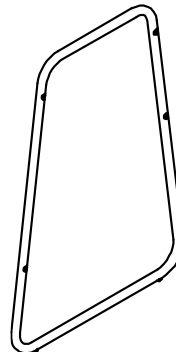


B-R) Right Side frame

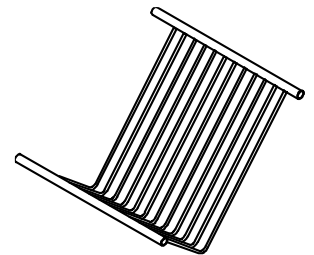

C) Metal rod storage

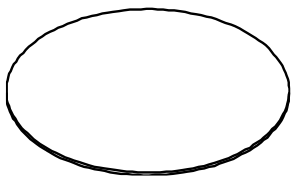

D) Glass




E) Bolt [M6xL34mm] x 8



F) Allen Key

STEP 1

Lay down all the parts onto clean carpet or cardboard for assembly. One at a time, align Coss Rail (A), Metal Rod Storage (C) with left Side Frame (B-L). Insert Bolt (E), and partially tighten with Allen Key (F).

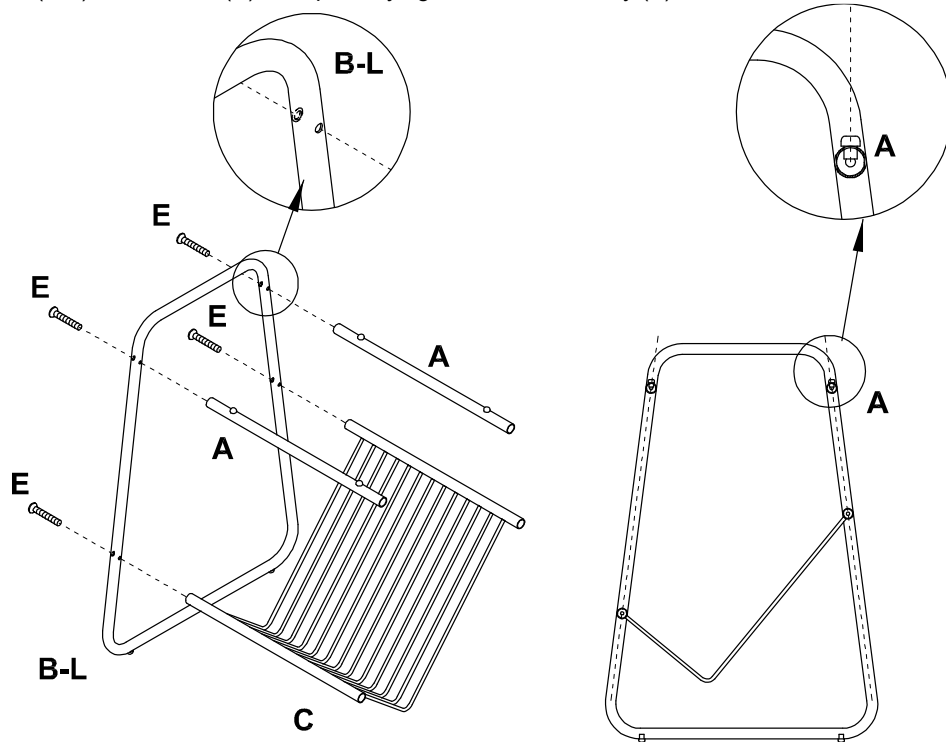

STEP 2

Align Right Side Frame (B-R) with left frame as shown. Insert Bolts (E), and partially tighten with Allen Key (F). Once all bolts are inserted and partially tightened, fully tighten the bolts.

