

STORAGE SHELF

URBAN OUTFITTERS


Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED:

Do not throw away packing materials and carton until after assembly.
Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight. Do not place over heat or Air conditioning vents.
Adjust levelers so that the furniture sits flat on uneven floors.
Blot spills do not rub, with a clean white cloth.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.

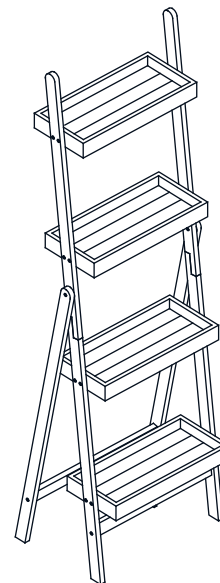

PARTS INCLUDED



Ax1



Bx1



Cx1




Dx1




Ex1



Fx1



Gx4



Hx1




Jx1

(a) Screw
[M6x20mm] x16pcs



(b) Bolt
[M6x25mm] x2pcs



(d) Screw
[M3x12mm] x2pcs



(e) Screw
[M5x40mm] x4pcs




(f) Wooden Dowel
[M6x20mm] x8pcs



(g) Hex Key
[4mm] x1pc



(h) Tape
[300mm] x1pc

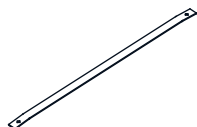

(j) Screw
[M5x30mm] x4pcs




STORAGE SHELF


URBAN OUTFITTERS

Assembly Instructions

STEP 1 Insert wood dowels (f) into the ends of rails (A) and (C). Align rails (A) and (B), press firmly together. Align rails (C) and (D) and press firmly together.

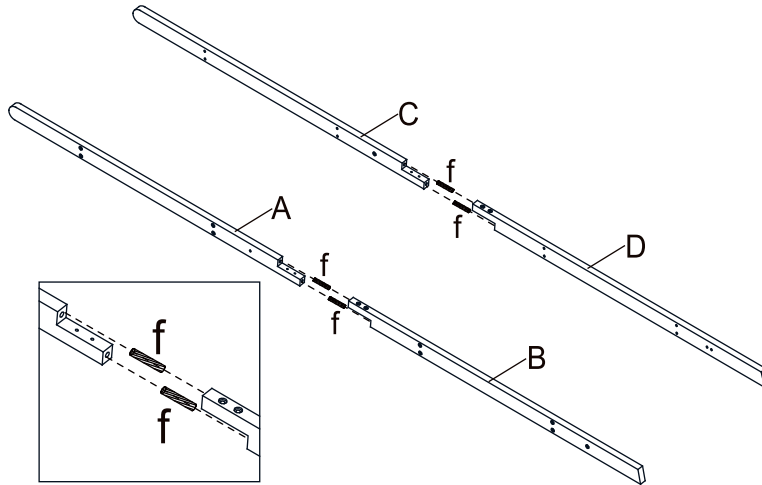

STEP 2 Insert screws (j) and tighten with supplied hex key (g).

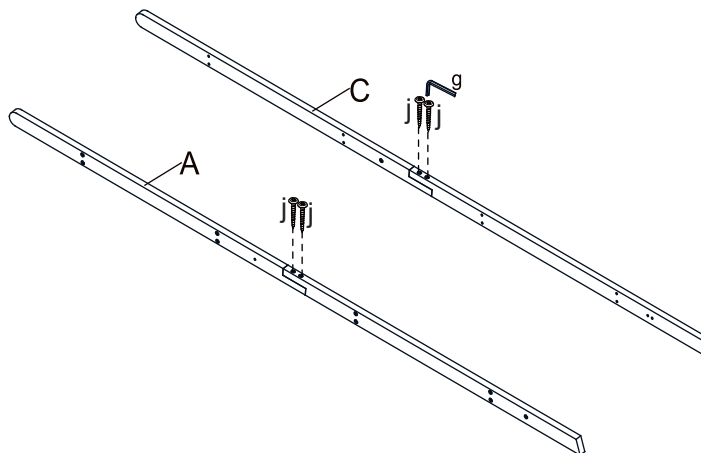


STORAGE SHELF


URBAN OUTFITTERS

Assembly Instructions

STEP 3 Align shelves (G) as shown with rails (A&B). Insert bolt (a) and tighten with supplied hex key (g). Align rail (J). Insert screw (e).

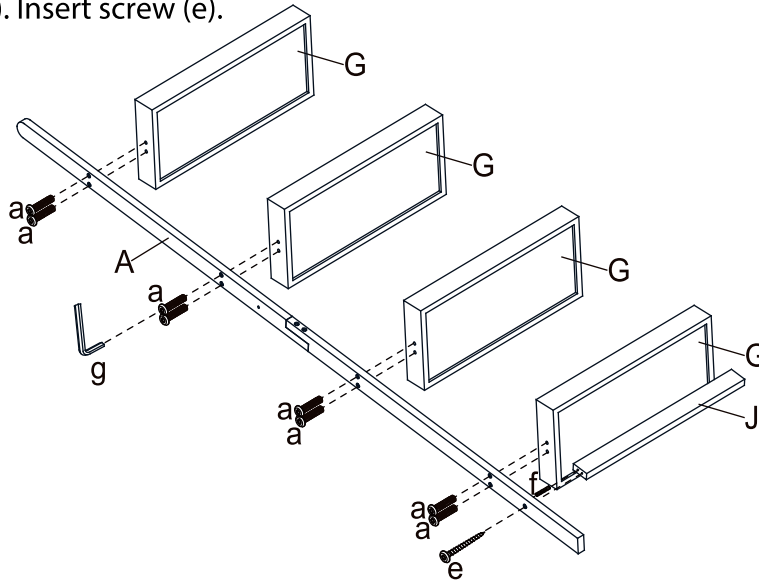

STEP 4 Align rails (C&D) and insert bolts (a) as shown. tighten with supplied hex key. Insert screw (e).

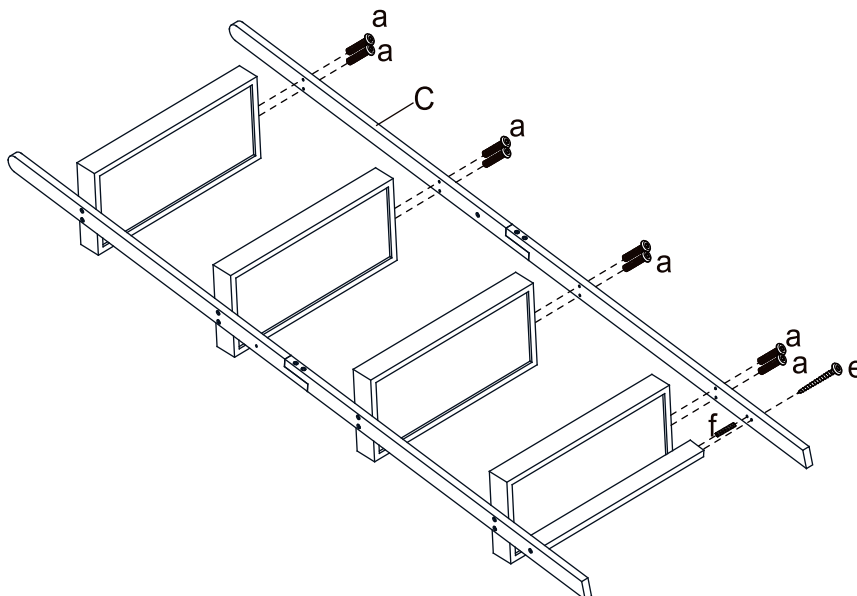


STORAGE SHELF

URBAN OUTFITTERS

Assembly Instructions

- STEP 5** Align rail (H) with Rail (F) and (E). Insert wooden dowel (f) and screw (e). Do not overtighten.

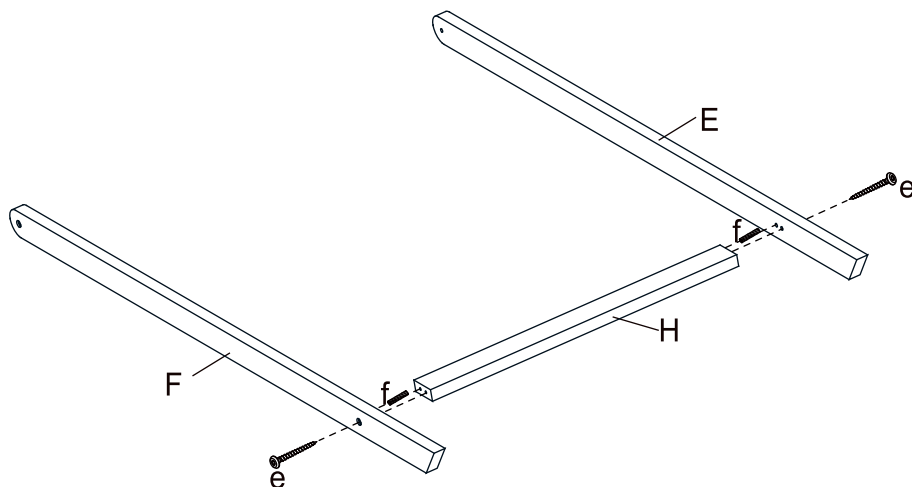

- STEP 6** Align rails to the assembled frame as shown. Insert bolt (b). Tighten with hex key. Align the tape (h) and insert screw (d).

