

# OLLIE SHOE STORAGE

## Assembly Instructions

URBAN OUTFITTERS


NO ADDITIONAL TOOLS REQUIRED

### WARNINGS:


Do not discard packing materials and the carton until assembly is complete.  
Ensure all parts are present prior to assembly.  
Contact customer service immediately if any parts are missing.  
Assemble all parts on a clean, smooth surface.

### CARE INSTRUCTIONS:


Avoid direct exposure to sunlight.  
Blot spills with a clean, white cloth; do not rub.  
Do not use harsh chemicals.  
Before cleaning any part, test a small spot in a hidden area.  
Do not place over heat or air conditioning vents.  
Do not over-tighten the parts.  
The parts may loosen after initial use; re-tighten as necessary.

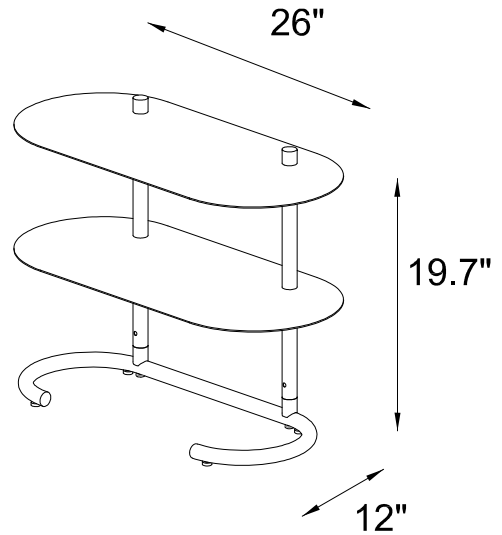

### PARTS INCLUDED:

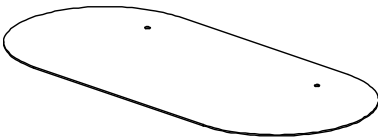


A) Shelf x 2

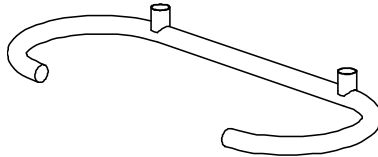


B) Base



C) Studded metal tube



D) Threaded Metal tube



E) Bolt [M6xL50mm] x2



F) Adjustable leveler x4



G) Metal cap x2



H) Allen Key

# OLLIE SHOE STORAGE

## Assembly Instructions

URBAN OUTFITTERS

### STEP 1

Lay down all the parts on a clean carpet or cardboard for assembly. One at a time, insert threaded metal tubes (D) into base (B) as shown. Insert bolts (E) as shown, and partially tighten the bolts (E) with allen key (H). Align the shelf (A) with the threaded metal tube (D) as shown. Insert the studded metal tubes (C) through the shelf (A) and screw them into the threaded metal tubes (D) until tight. Align the second shelf (A) with the studded metal tubes (C) as shown. Screw the metal cap (G) onto the end of the studded metal tubes (C) above the second shelf (A). Fully tighten the bolts (E) and screw the adjustable levelers into the base (F). Adjust the levelers as necessary to accommodate uneven floors.

