

JENAVIVE SIDEBOARD

Assembly Instructions

URBAN OUTFITTERS

TOOLS REQUIRED BUT NOT INCLUDED:


Phillips head screwdriver

WARNINGS:

Do not throw away packing materials and carton until after assembly.
Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight.
Do not place overheat or air conditioning vents.
Adjust levelers so that the furniture sits flat on uneven floors.
Blot spills do not rub, with a clean white cloth.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.

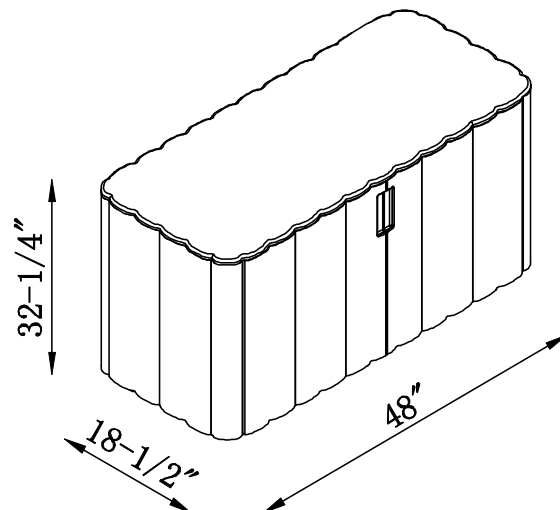


HARDWARE LIST




(A) Nylon strip
x1

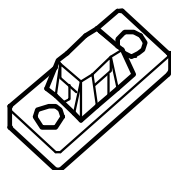

(B) Bracket
x2

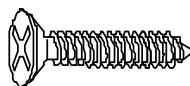


(C) Screw
[M3 x 32mm] x2

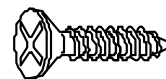


(D) Screw
[M3 x 19mm] x2

STEP 1

Adjust the levelers as shown below to accommodate uneven floors.

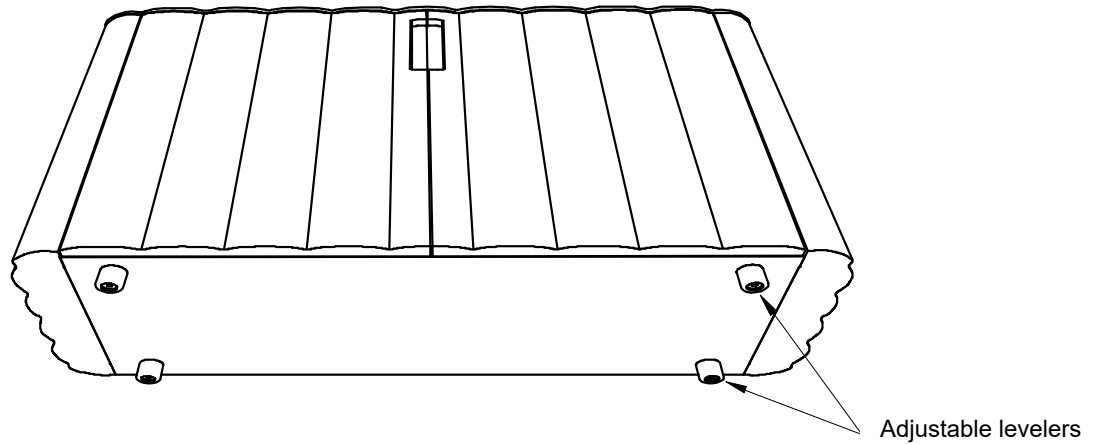


Turn the levelers clock- wise to shorten leveler. Turn the leveler counter clockwise to lengthen it.

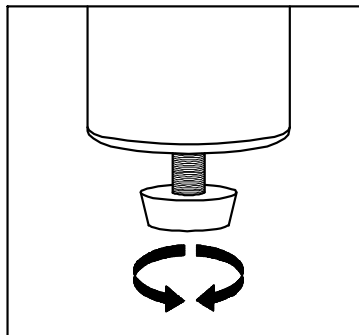

STEP 2

Sideboard hinges are adjustable. A combination of these adjustments may be necessary to level doors.

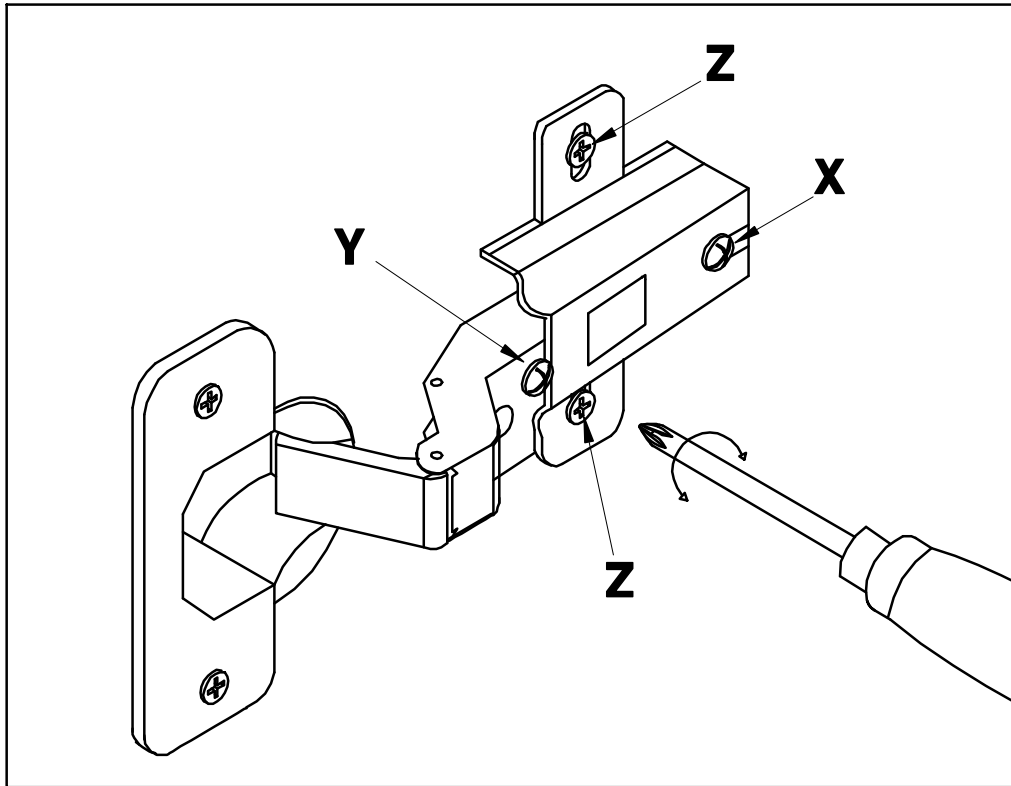

FOR SIDE ADJUSTMENT: Tighten and loosen the 'Y' screw to move the door from side to side as necessary.

FOR DEPTH ADJUSTMENT: Loosen the screw 'X' and adjust the depth of the door as necessary, then re-tighten the screw 'X'.

FOR HEIGHT ADJUSTMENT: Loosen the screws 'Z' and adjust the height of the door as necessary, then re-tighten the screws 'Z'.

STEP 3

- a) Align the Anti Tip Brackets (B) to the Top back of the Case. Insert Screws (C) and tighten completely. Do not over-tighten.
- b) Contact your local hardware store to purchase the correct anchors for your wall-type.
- c) Align the second Anti Tip Bracket (B) to the wall and make sure it lines up with the brackets on the back of the case from step (a).
- d) Screw the bracket to the wall using the correct anchors.
- e) Slide the case to the wall leaving a little bit of room between the case and the wall.
- f) Feed the Nylon Strap through both brackets and pull tight.

