

PHOEBE FLOOR LAMP

URBAN OUTFITTERS

Assembly Instructions


This lamp requires a E26 style bulb 60 watt max

Do not throw away packing materials and carton until after assembly.
Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight. Do not place over heat or Air conditioning vents.
Adjust levelers so that the furniture sits flat on uneven floors.
Blot spills do not rub, with a clean white cloth.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.

PARTS INCLUDED

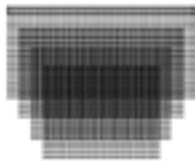

(A) Shade 1x



(B) Base 1x




(C) Support Bar 1x

PHOEBE FLOOR LAMP


URBAN OUTFITTERS

Assembly Instructions

STEP 1. Align Post with Base as shown. Screw in clockwise.

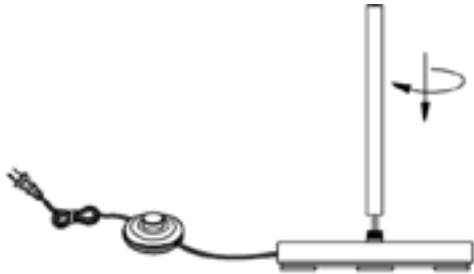

STEP 2. Screw in Top Post as shown.

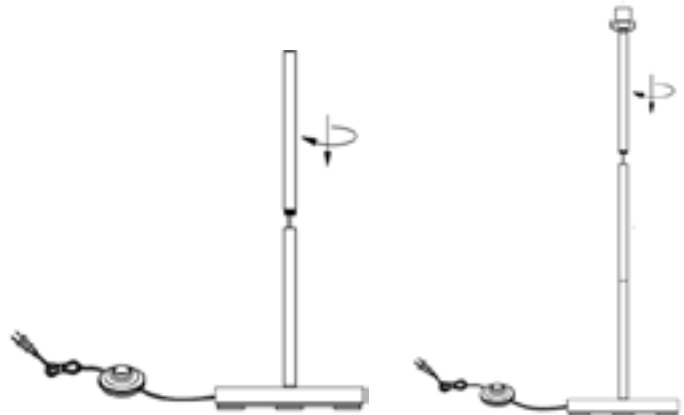

STEP 3. Screw in Light bulb
(Not Included)



STEP 4. Squeeze the Support Bar (C) and slide it into the base as shown.



PHOEBE FLOOR LAMP

URBAN OUTFITTERS

Assembly Instructions

STEP 5. Unscrew the decorative cap off of the Support Bar (C).



STEP 6. Mount the Shade (A) onto the Support Bar (C) as shown.



STEP 7. Screw the Decorative cap back onto the Support Bar (C) over the Shade (A) as shown.



STEP 8. Remove the protective cap from the plug as shown.

