

FREYA VANITY

Assembly Instructions

URBAN OUTFITTERS

TOOLS REQUIRED BUT NOT INCLUDED:

(Not Applicable)

Do not throw away packing materials and carton until after assembly. Assemble all parts on a clean smooth surface.

CARE INSTRUCTION:


Avoid direct exposure to sunlight. Do not place overheat or air conditioning vents. Adjust levelers so that the furniture sits flat on uneven floors.

Do not rub blot spills. Clean with a dry white cloth.

Do not use harsh chemicals.


Before cleaning any part test a small spot in a hidden area.

You may need to re-tighten all bolts after initial use.

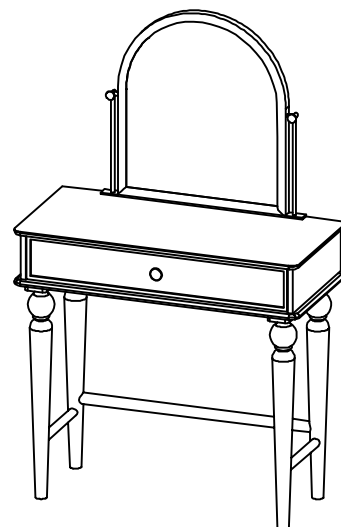

PARTS INCLUDED

CONTENTS

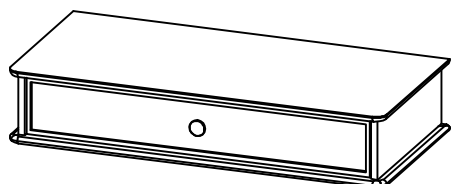


A) DRAWER BOX 1x



B) LEGS 2x




C) LEG SUPORT 1x

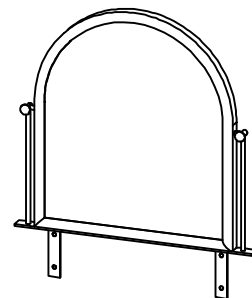

D) MIRROR 1x



E) ALLEN BOLT JCB (25mm x 6mm) X12



F) ALLEN BOLT CSK(15mmX6mm) 4X



G) ALLEN KEY 4mm 1X



H) CONNECTOR SCREW 2X



I) CAP 2X




J) WASHER (16mmx6mm)12x

FREYA VANITY


Assembly Instructions

URBAN OUTFITTERS

STEP 1 : Insert Part (H) into Part (B). Then, using a screwdriver, rotate Part (H) clockwise until it is securely tightened. Do not over-tighten.

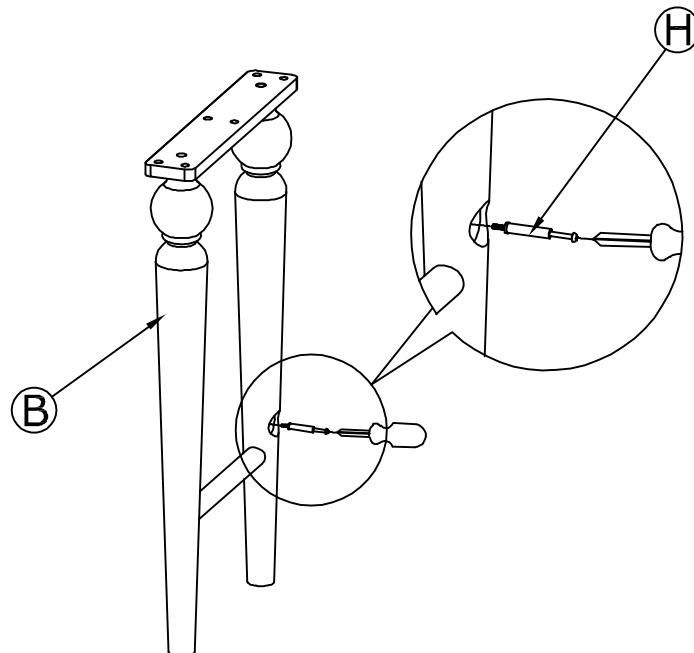

STEP 2 : Place Part (A) on a soft, clean surface to prevent damage. Then place Part (B) onto Part (A) and align the pre-drilled holes of Part (B) with Part (A). Insert Part (E) along with the flat washer and lock washer. Using Part (G), rotate Part (E) clockwise until it is securely tightened. Do not over-tighten.

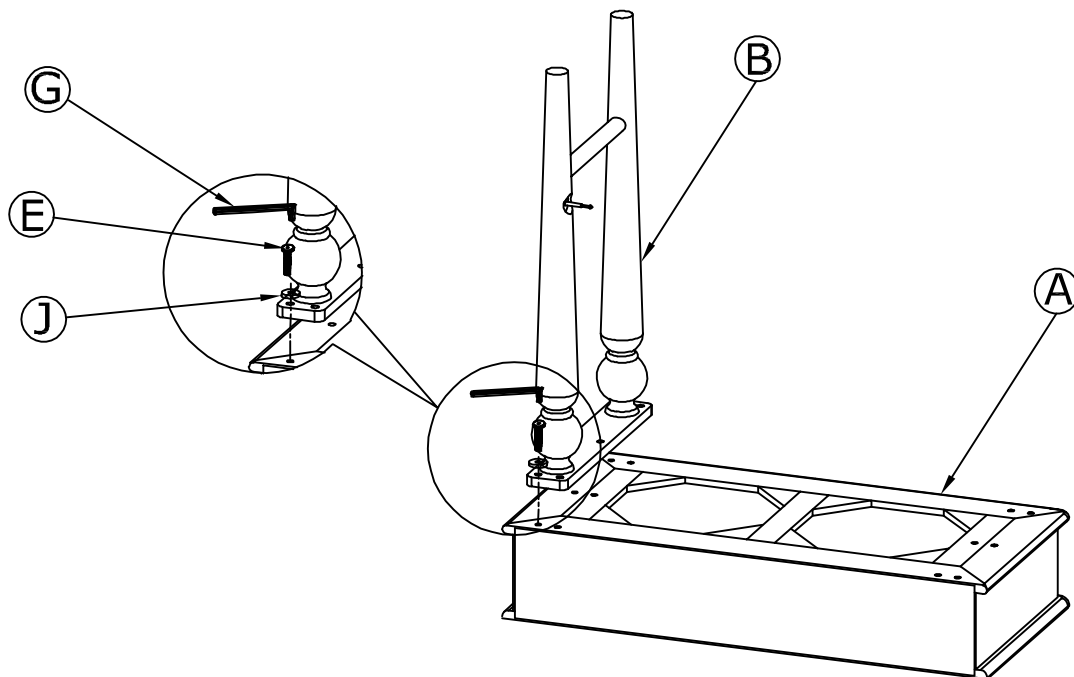


FREYA VANITY


Assembly Instructions

URBAN OUTFITTERS

STEP 3 : Insert Part (C) into Part (B). Then insert Part (I) into Part (C). Using a screwdriver, rotate Part (I) clockwise until it is securely tightened. Do not over-tighten.

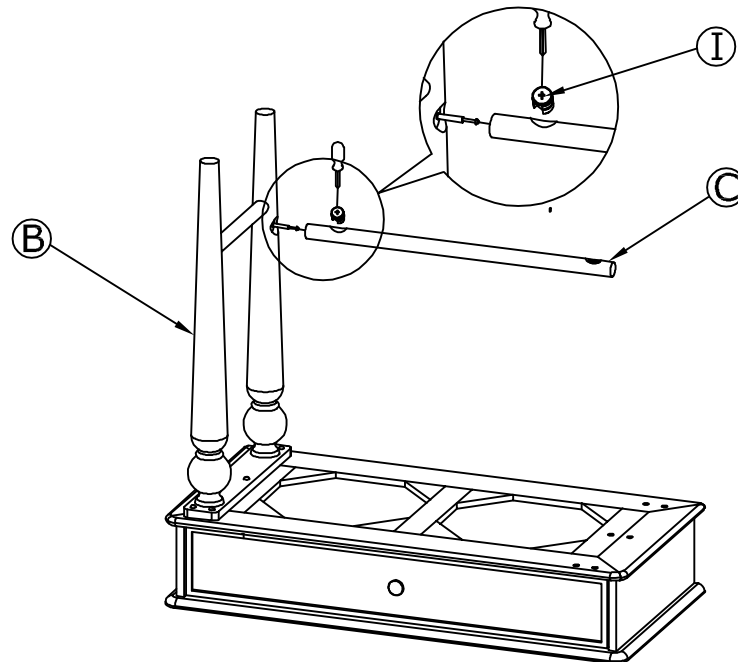

STEP 4 : Insert Part (C) into Part (B). Then insert Part (I) into Part (C). Using a screwdriver, rotate Part (I) clockwise until it is securely tightened. Do not over-tighten.

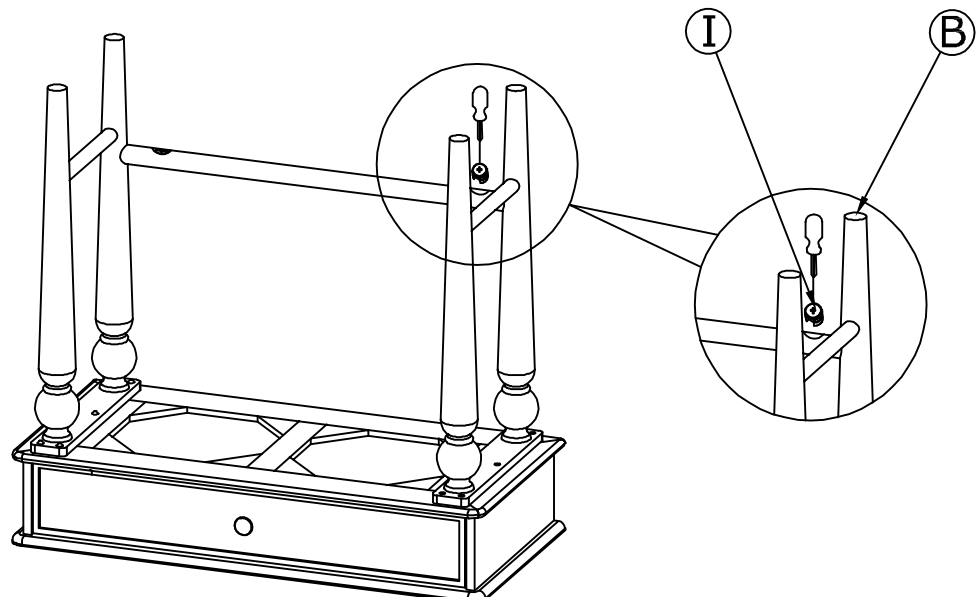


FREYA VANITY


Assembly Instructions

URBAN OUTFITTERS

STEP 5 : Place Part (B) onto Part (A) and align the pre-drilled holes of Part (B) with Part (A). Insert Part (E) along with the flat washer and lock washer. Using Part (G), rotate Part (E) clockwise until it is securely tightened. Do not over-tighten.

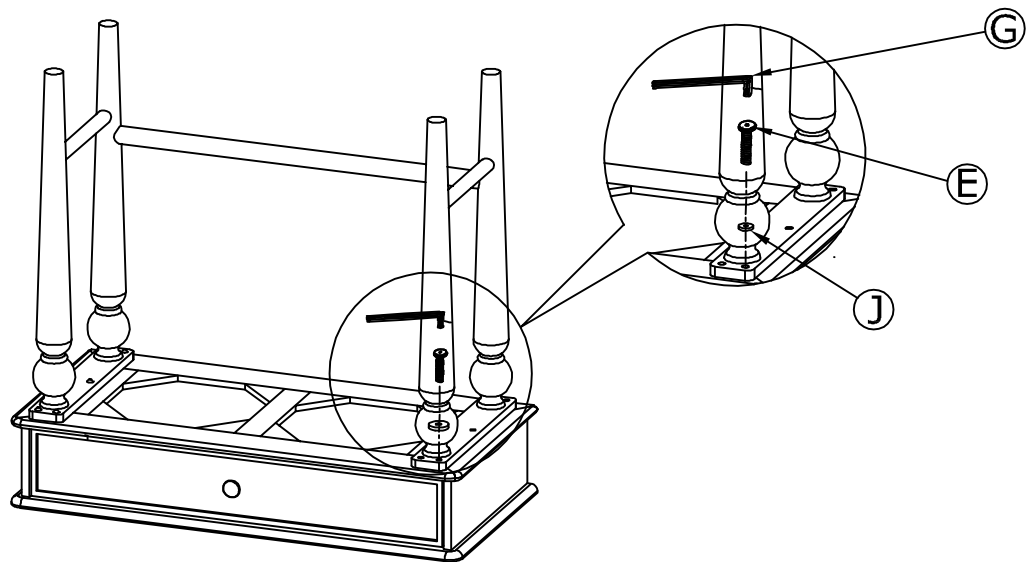

STEP 6 : Place Part (D) into Part (A). Then align the pre-drilled holes of Part (D) with those on Part (A). Insert Part (F). Using Part (G), rotate Part (F) clockwise until it is securely tightened. Do not over-tighten

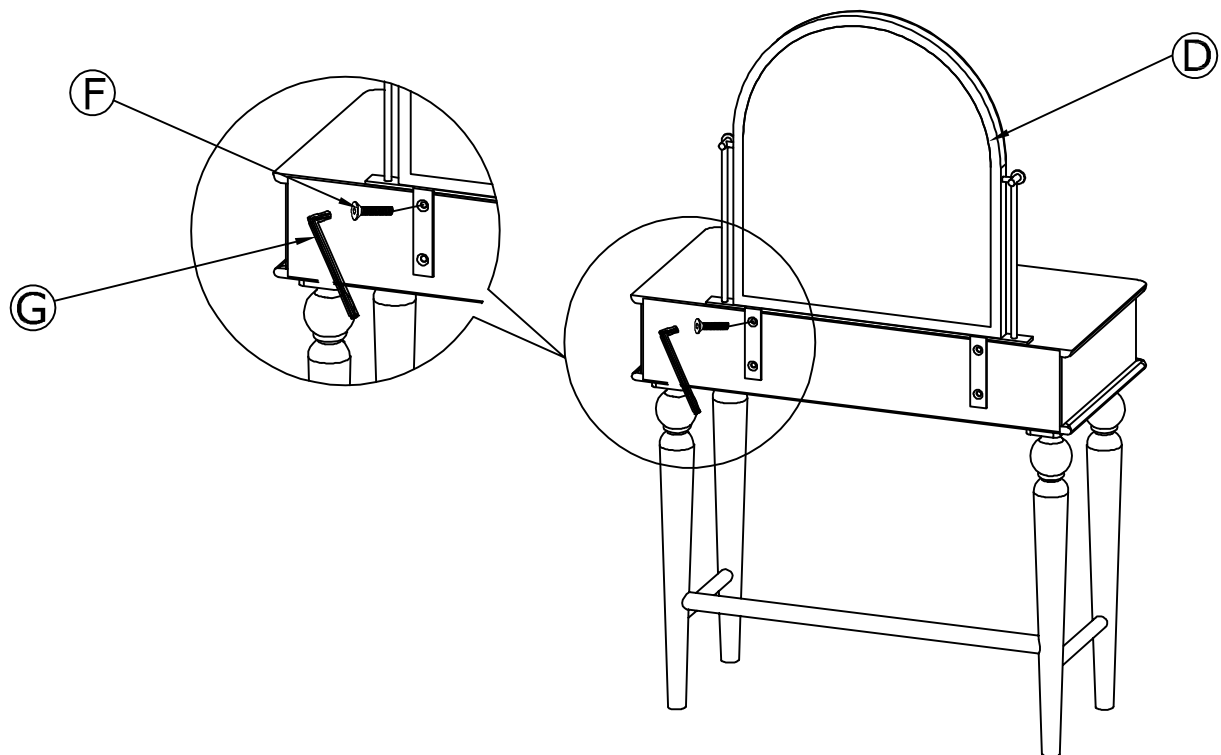

FREYA VANITY

Assembly Instructions

URBAN OUTFITTERS

Final : The product is now ready for use.

