

Ebba Small Media Storage

Assembly Instructions

URBAN OUTFITTERS

TOOLS REQUIRED BUT NOT INCLUDED:

Phillips head screwdriver, hammer

WARNINGS:

Do not throw away packing materials and carton until after assembly.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.

Do not place over heat or air conditioning vents.


Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills with a clean white cloth, do not rub.


Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.

You may need to re-tighten all bolts after initial use.

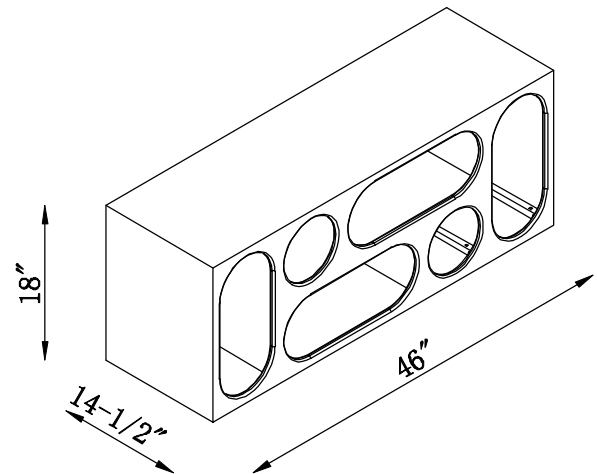


PARTS INCLUDED:




(A) Nylon glide
x1




(B) Nylon strip
x1

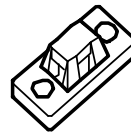

(C) Bracket
x2



(D) Screw
[M3 x 32mm] x2



(E) Screw
[M3 x 19mm] x2


Ebba Small Media Storage

Assembly Instructions

URBAN OUTFITTERS

STEP 1

Lay the Media out onto a clean smooth surface such as carpet or cardboard. Use a hammer to tap the nylon glides (A) into the base of the Media as shown. Determine the desired orientation of the console prior to attaching the nylon glides (A).

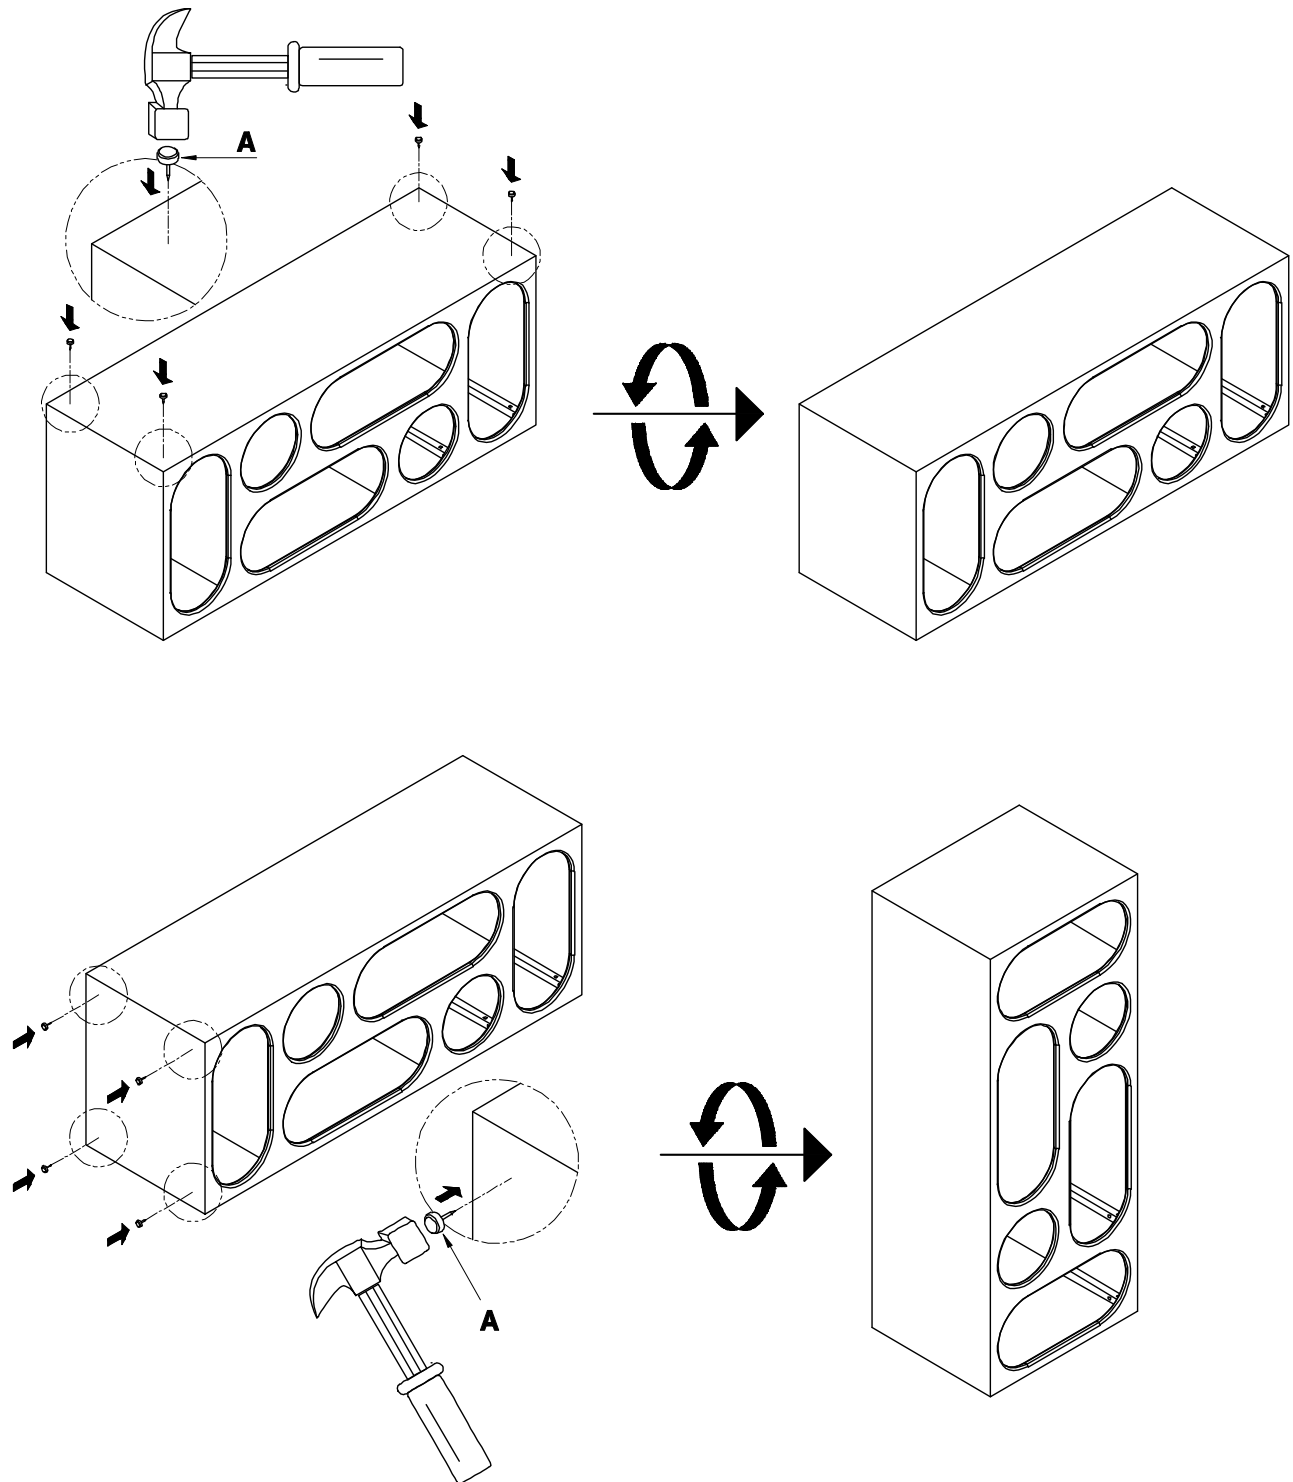

STEP 2

- Align the Anti Tip Brackets (C) to the Top back of the Case. Insert Screws (D) and tighten completely. Do not over-tighten.
- Contact your local hardware store to purchase the correct anchors for your wall-type.
- Align the second Anti Tip Bracket (C) to the wall and make sure it lines up with the brackets on the back of the case from step (a).
- Screw the bracket to the wall using the correct anchors.
- Slide the case to the wall leaving a little bit of room between the case and the wall.
- Feed the Nylon Strap through both brackets and pull tight.

