

# KANE BOOKSHELF

URBAN OUTFITTERS

## Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED:  
Phillips head screw driver, Pencil



### WARNINGS:

Two people recommended for assembly  
Do not throw away packing materials and carton until after assembly.  
Assemble all parts on a clean smooth surface  
Do not drag the shelf while moving

### CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.  
Do not place overheat or air conditioning vents.  
Adjust levelers so that the furniture sits flat on uneven floors.  
Blot spills do not rub, with a clean white cloth.  
Do not use harsh chemicals.  
Before cleaning any part test a small spot in a hidden area.  
You may need to re-tighten all bolts after initial use.


### PARTS INCLUDED

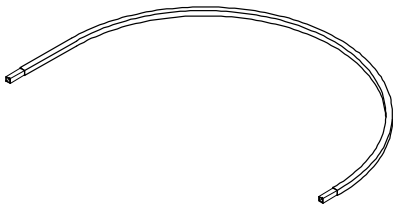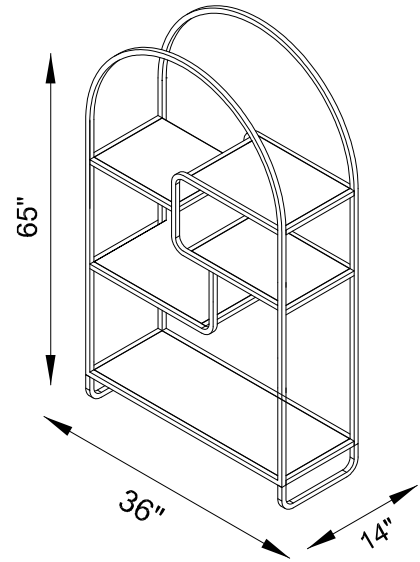


A) Metal Arch frame x2




B) Cross Rail x10




C) Metal Leg x2

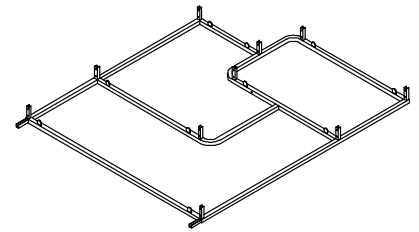


D-R) Metal Back Frame x1

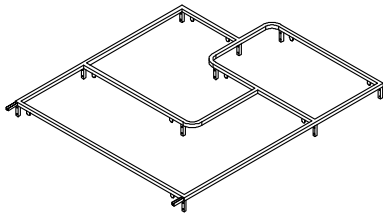


D-L) Metal Front Frame x1




E) Sheet Metal x1

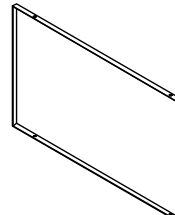


F) Sheet Metal x3

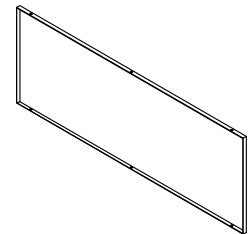

G) Sheet Metal x1



H) Screw  
[M5xL10mm] x50



I) Bolt  
[M6xL10mm] x1




J) Anti-tip kit x1



K) Allen Key [4mm] x1



L) Allen Key  
[3mm] x1





M) Drywall Anchor  
[13x40] x1



N) Wall Screw  
[4x32] x1

### STEP 1


Lay down all the parts on the clean carpet or cardboard for assembly. Align Metal Back Frame (D-R) and Metal Front frame (D-L), with Metal Arch frame (A) and insert as shown. Insert Bolts (H) and partially tighten with Allen key (L). Once all screws are inserted and partially tightened, tighten all screws completely.

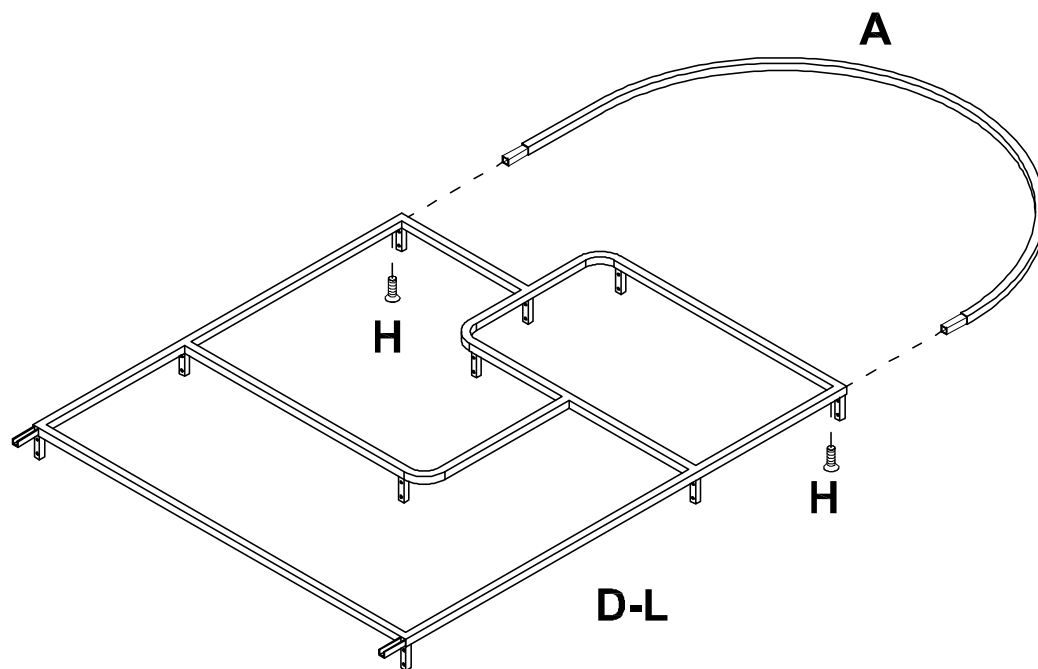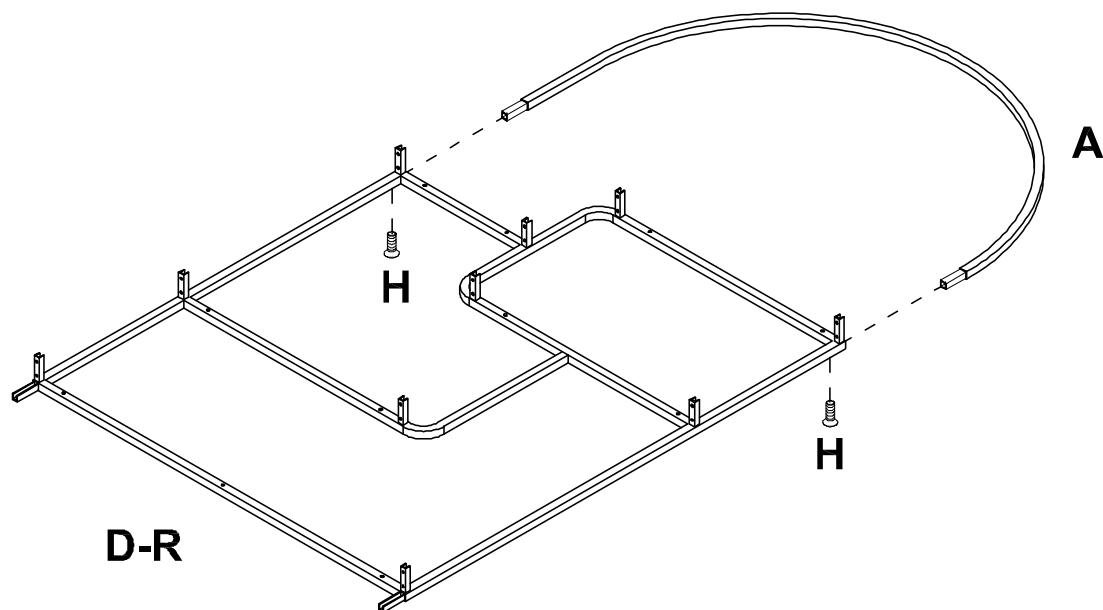

### STEP 2


Align Metal Back frame (D-R), with Cross Rails (B). Insert Bolts (H) and partially tighten with Allen Key (L).

Once all screws are inserted and partially tightened, tighten all screws completely.

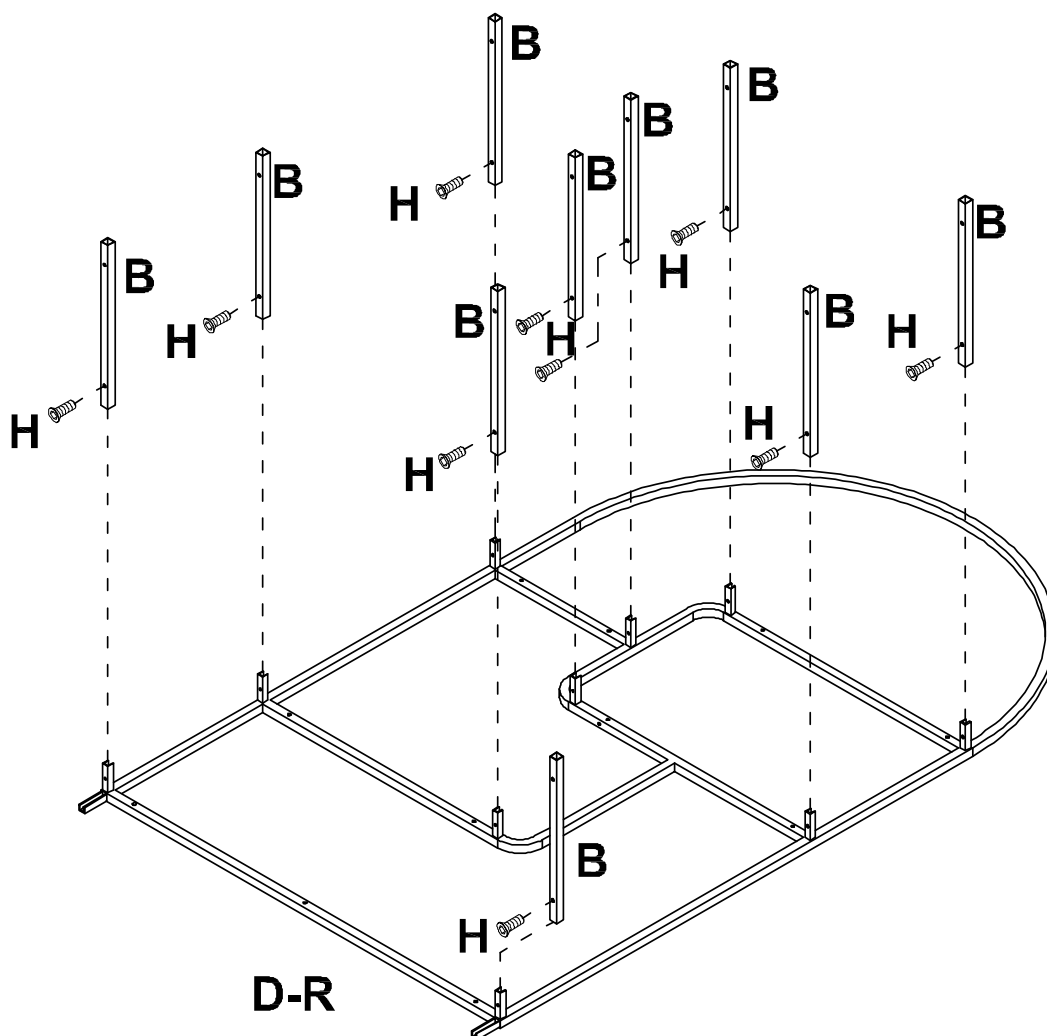


### STEP 3

Align Sheet Metal (E),(F),(G) with partially assembled frame as shown. Insert bolts (H), and partially tighten with Allen key (L). Once all screws are inserted and partially tightened, tighten all screws completely.

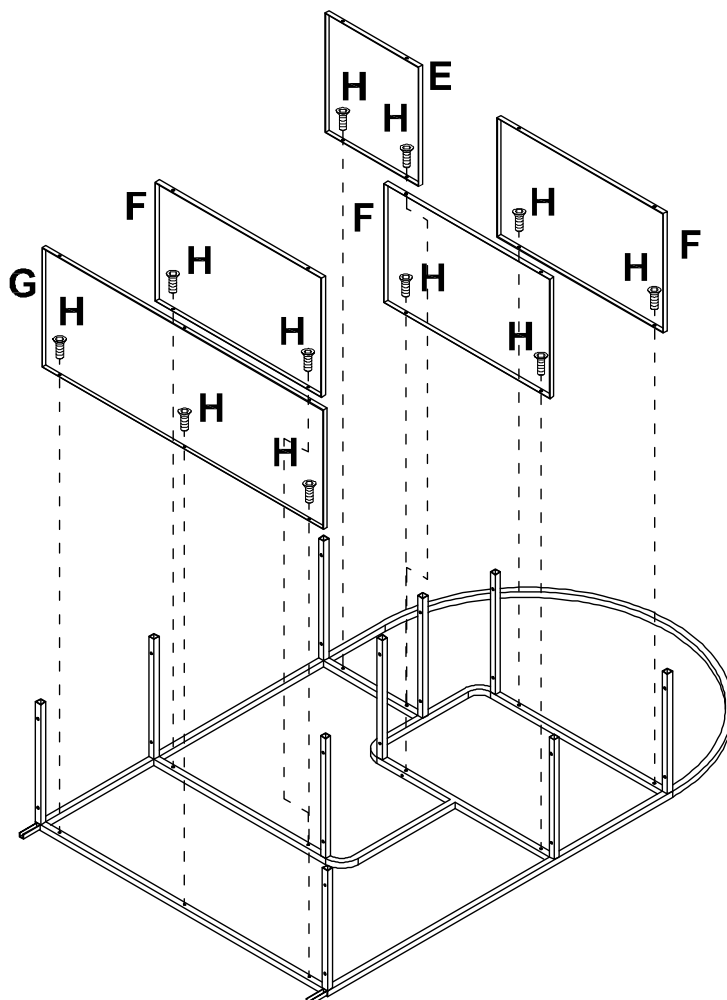


### STEP 4

Align the Front frame (D-L) with the partially assembled shelf and insert as shown. Insert the Screws (H) as shown and partially tighten with Allen key (L). Once all screws are partially tightened, tighten all screws completely.

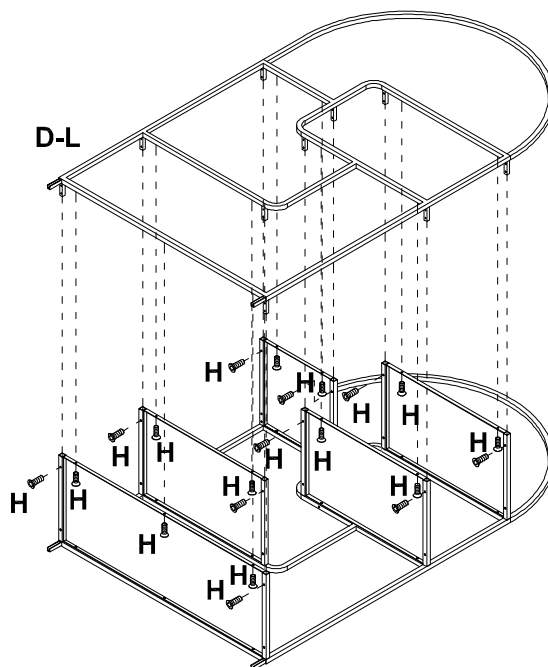

### STEP 5

Align metal legs (C) with the partially assembled shelf and insert as shown. Insert bolts (H) and partially tighten with Allen key (L). Once all screws are inserted and partially tightened, tighten all screws completely. Align the anti-tip bracket (J) as shown and attach with bolt (I) using Allen Key (K).

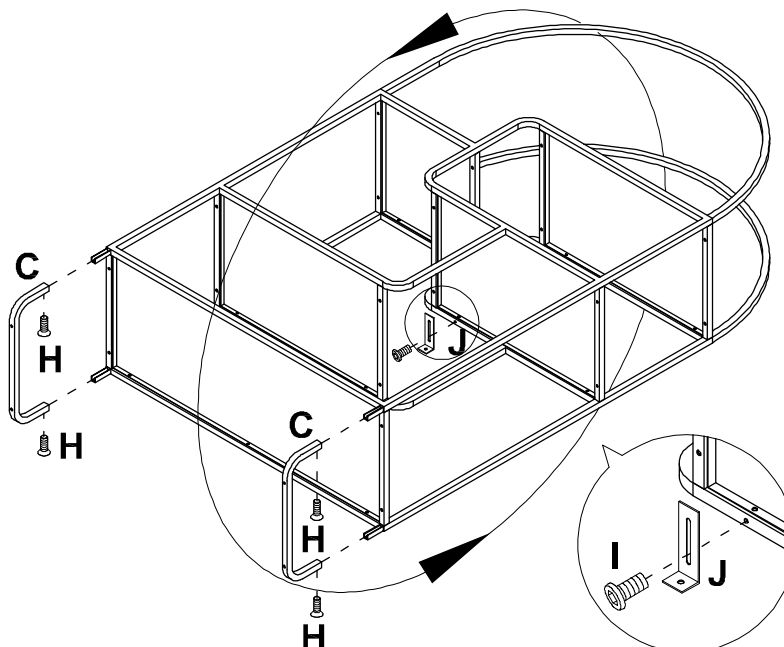

### STEP 6

Place the shelf against the wall in its desired location and mark the location of the hole in the anti tip bracket (J) on the wall. Screw the drywall anchor (M) into the wall at the marked location. Insert screws (N) through the anti-tip bracket (J) into the drywall anchors (M) and tighten with a Phillips head screwdriver (not provided). If attaching directly to a stud, you do not need to use the drywall anchor, screw the bracket directly into the wall.

