

ALONZO BOOKSHELF

URBAN OUTFITTERS

Assembly Instructions


TOOLS REQUIRED BUT NOT INCLUDED:

(Not Applicable)

Do not throw away packing materials and carton until after assembly. Assemble all parts on a clean smooth surface.

CARE INSTRUCTION:

Avoid direct exposure to sunlight. Do not place overheat or air conditioning vents. Adjust levelers so that the furniture sits flat on uneven floors. Blot spills do not rub, with a clean white cloth. Do not use harsh chemicals. Before cleaning any part test a small spot in a hidden area. You may need to re-tighten all bolts after initial use.

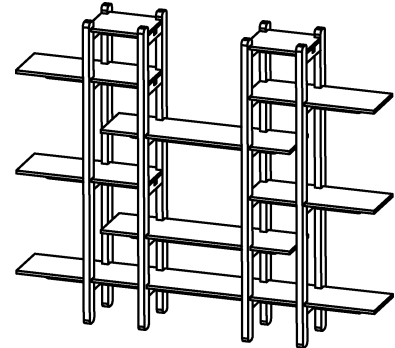

PARTS INCLUDED




A) OUTSIDE LEG
x2




B) INSIDE LEG
x2




C) TOP SHELVES
x2



D) LEFT / RIGHT SHELVES
x4



E) MIDDLE SHELVES
x2

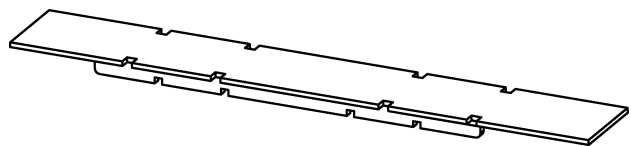

F) BOTTOM SHELF
x1



G) ALLEN BOLT ROUND HEAD
[M8 x 40mm] x20



H) WASHER
[20mm] x20



I) ALLEN KEY
[5mm] x1


ALONZO BOOKSHELF

Assembly Instructions


URBAN OUTFITTERS

STEP 1

PLACE THE BOTTOM SHELF (F) INTO THE LEGS (A&B) AS SHOWN. INSERT SCREWS (G) INTO WASHERS (H) AND INTO LEGS. TIGHTEN WITH ALLEN KEY (I). REPEAT FOR ADDITIONAL SHELVES MOVING UP FROM BOTTOM.

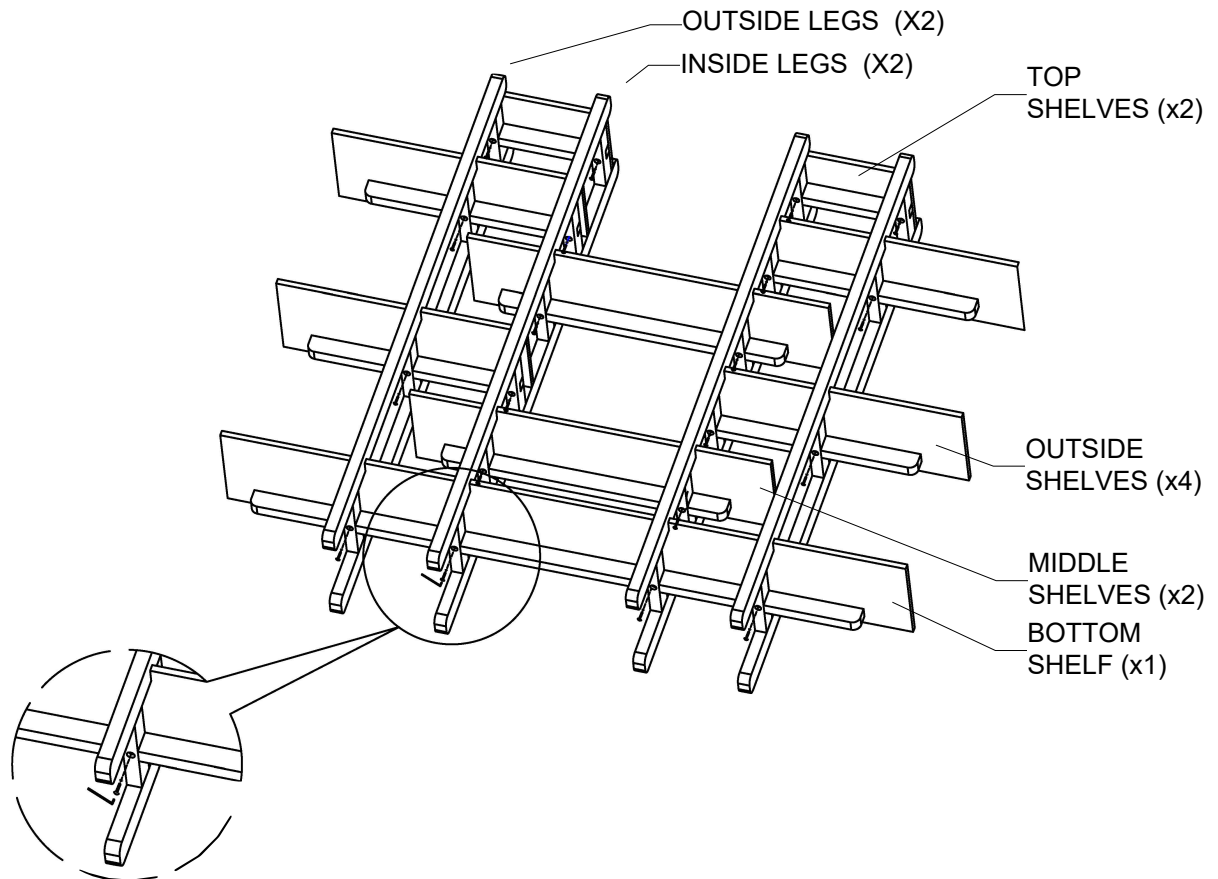

FINAL

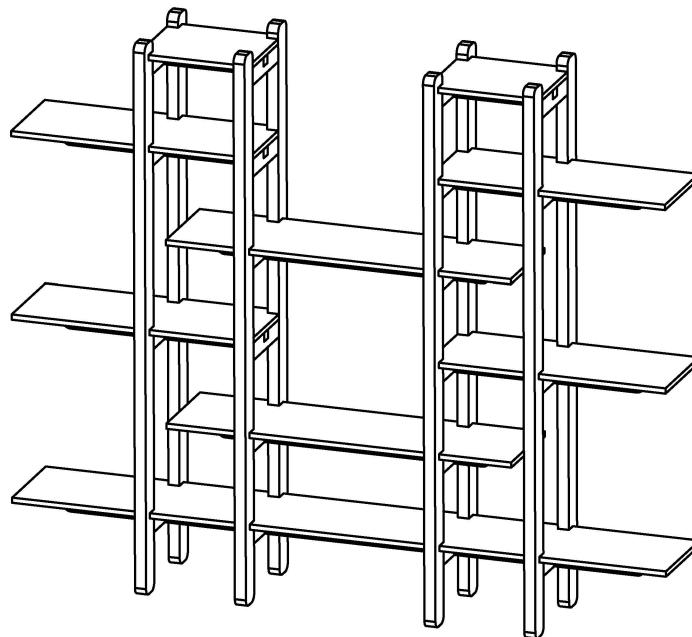

ANTI-TIP HARDWARE

URBAN OUTFITTERS

Assembly Instructions






Warning - Children may be injured by tipping of furniture and the use of the Anti-Tip Kit is highly recommended . This Anti-Tip kit is only a deterrent. It is not a substitute for proper adult supervision. Manufacture and retailer assume no liability for improper installation or excess loads placed on screws, brackets, or straps. When properly installed, this restraint provides protection against unexpected tipping of furniture. This Anti-Tip kit **MUST** be installed into the wall using proper mounting hardware OR into a wall stud using appropriate screws. Position of the Anti -Tip Kit depends on the products and the location of the wall studs. The hardware provided is not a comprehensive solution for wall types. Be sure to consult a professional or your local hardware store to determine the hardware needed for your specific wall type (plaster, drywall, concrete) etc.

Using a second person to assist you, place the unit in the desired final location against a wall .it is suggested to use a stud finder to find wall stud along the width of the unit and roughly 1 inch below the top of the unit. Where possible, mark a drill Hole position on the wall where there is a stud and use a drill or screwdriver (NOT INCLUDED) to attach wall brackets (A) to the wall using long screws (B) in the location of the wall studs.

In a case where there is no wall stud, hold brackets (A) on wall and mark the drill hole positions so that they are roughly 1 inch below the top of the piece. using a drill with a drill bit roughly the diameter of the plastic wall plugs (D), Drill pilot holes in marked positions. Insert the plastic wall plugs (D) into the holes until the tops are roughly flush with the wall. Align the holes and insert the long screws (B) through brackets (A) and into the corresponding holes in the wall using a Phillips head screw driver (NOT INCLUDED).

IMPORTANT: Check that the wall bracket is firmly screwed into the wall and the cable Tie is snug. If there is any hesitation, please consult a professional or your local hardware store.

PARTS INCLUDED:

A	4x Bracket
	
B	4x Long Screw
	
C	4x Small Screw
	
D	2x Strap
	
E	4x Wall Plug
	

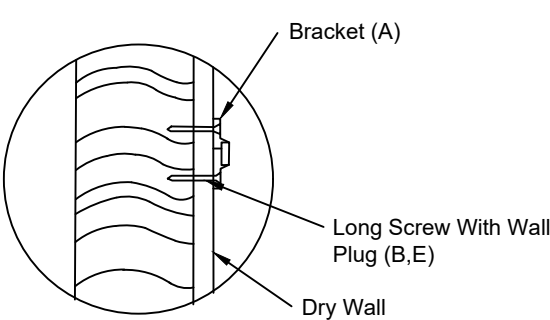


Figure A

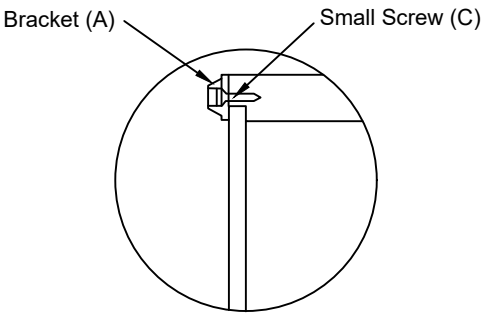


Figure B

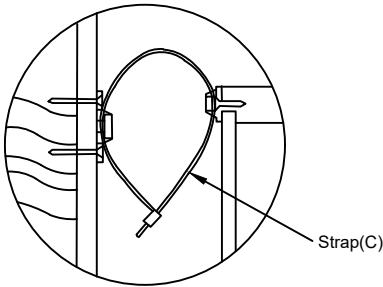


Figure C