

JOAN WOVEN CABINET

URBAN OUTFITTERS


Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED:


Do not throw away packing materials and carton until after assembly.
Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight. Do not place over heat or Air conditioning vents.
Adjust levelers so that the furniture sits flat on uneven floors.
Blot spills do not rub, with a clean white cloth.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.

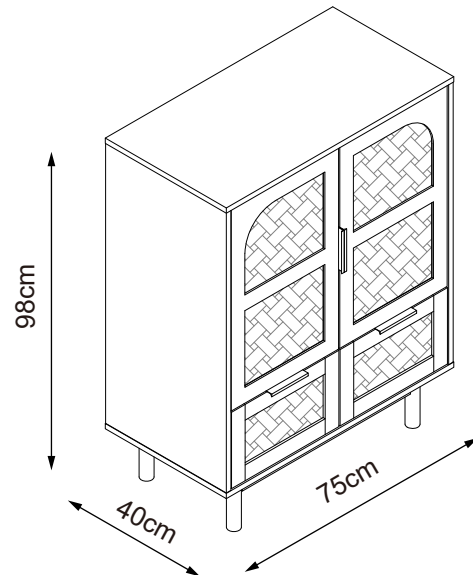


PARTS INCLUDED

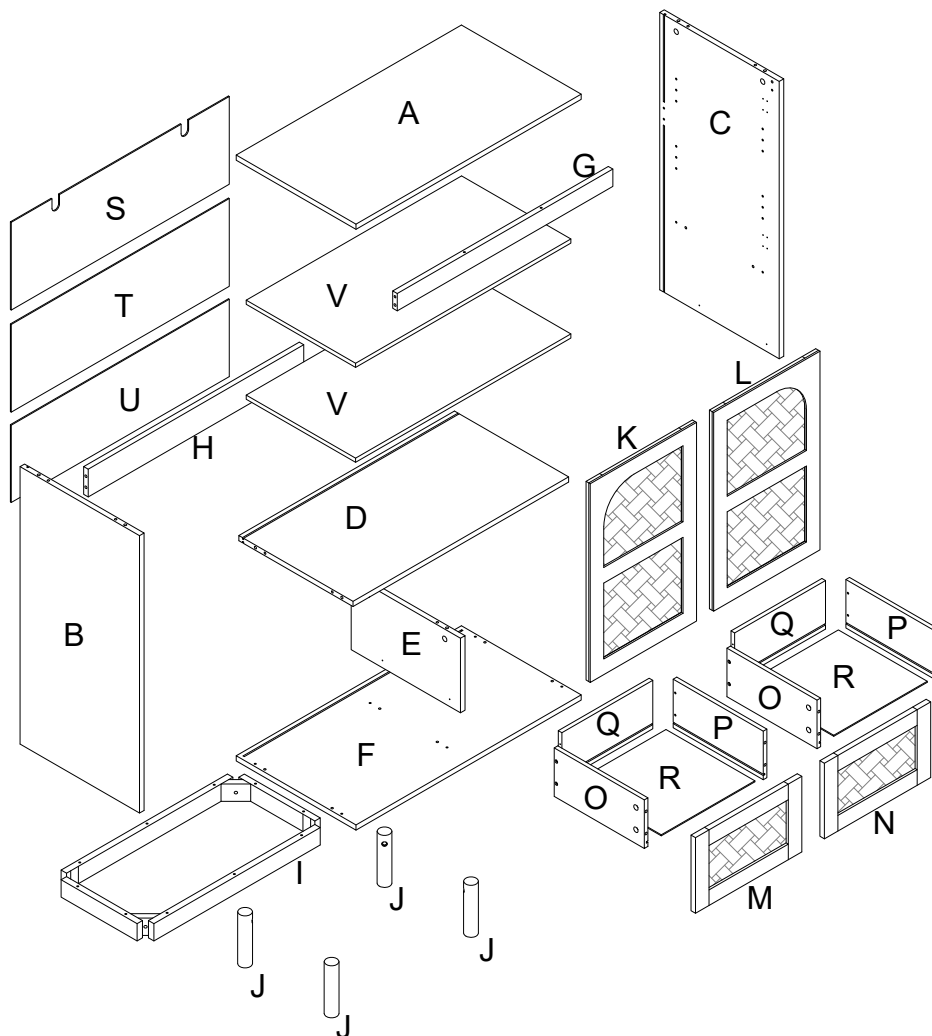


JOAN WOVEN CABINET

URBAN OUTFITTERS


Assembly Instructions

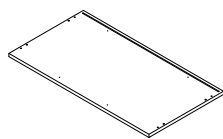


AX1

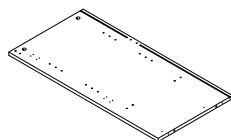


BX1

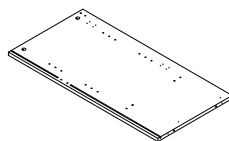


CX1

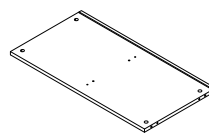


DX1




EX1

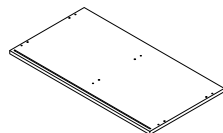


FX1



GX1




HX1




IX1




JX4




KX1



LX1



MX1



NX1




OX2




PX2




QX2




RX2




SX1



TX1



UX1

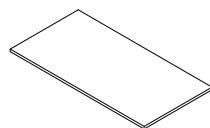


VX2

JOAN WOVEN CABINET

URBAN OUTFITTERS

Assembly Instructions



(a) Cam bolt
[M6x35mm] x24pcs



(b) Cam lock
[M15x9mm] x24pcs



(c) Wooden Dowel
[Ø6x30mm] x18pcs




(d) Screw
[M4x35mm] x14pcs



(e) Screw
[M3x12mm] x22pcs




(f) Screw
[M3.5x12mm] x2pcs



(g) Hinge
x4pcs




(h) Screw
[M4x14mm] x24pcs



(i) Handle
x4pcs



(j) Screw
[M4x55mm] x12pcs




(k) Bolt
[M6x50mm] x4pcs



(l) Spring Washer
x4pcs



(m) Washer
x4pcs




(n) Hex Key
x1pc



(o) Wedge
x12pcs




(p) Screw
[M3x14mm] x12pcs



(q) Shelf Holder
[Ø5x25mm] x8pcs




(r) Protection Pad
x2pcs



(s) Wall Fixing
x2pcs



(t) Screw
[M4x12mm] x2pcs




(u) Screw
[M4x35mm] x2pcs




(v) Wall Anchor
[M6x30mm] x2pcs




(CL) Outer Drawer Runner
x2pcs



(CR) Outer Drawer Runner
x2pcs



(DL) Outer Drawer Runner
x2pcs




(DR) Outer Drawer Runner
x2pcs

JOAN WOVEN CABINET


URBAN OUTFITTERS

Assembly Instructions

STEP 1

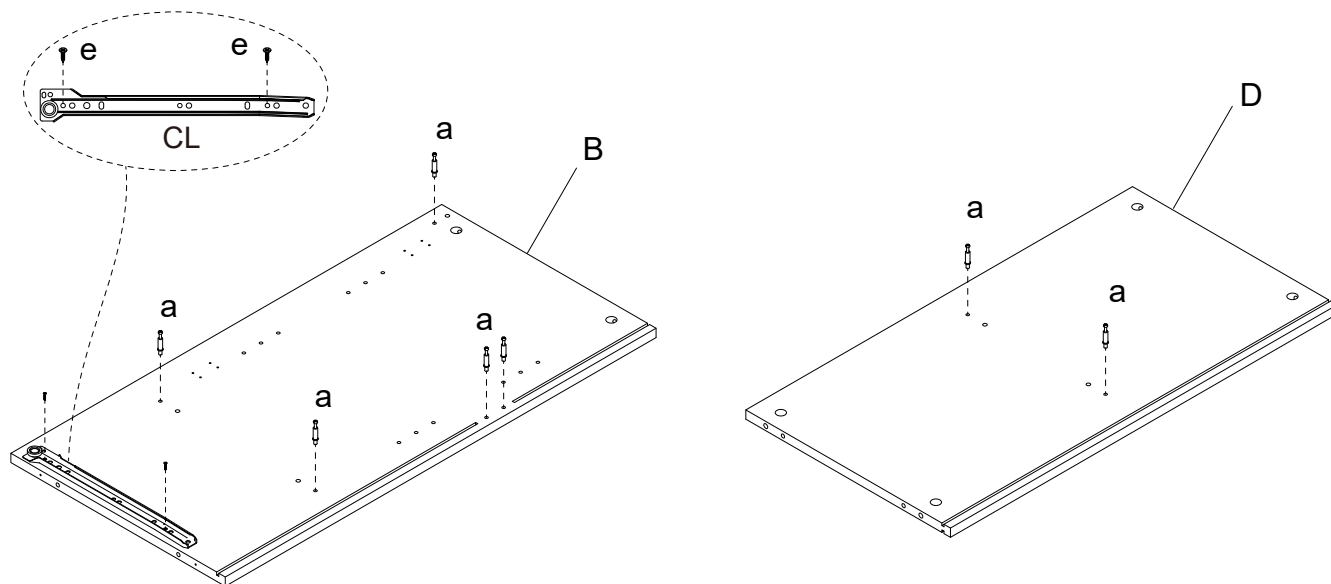

STEP 2

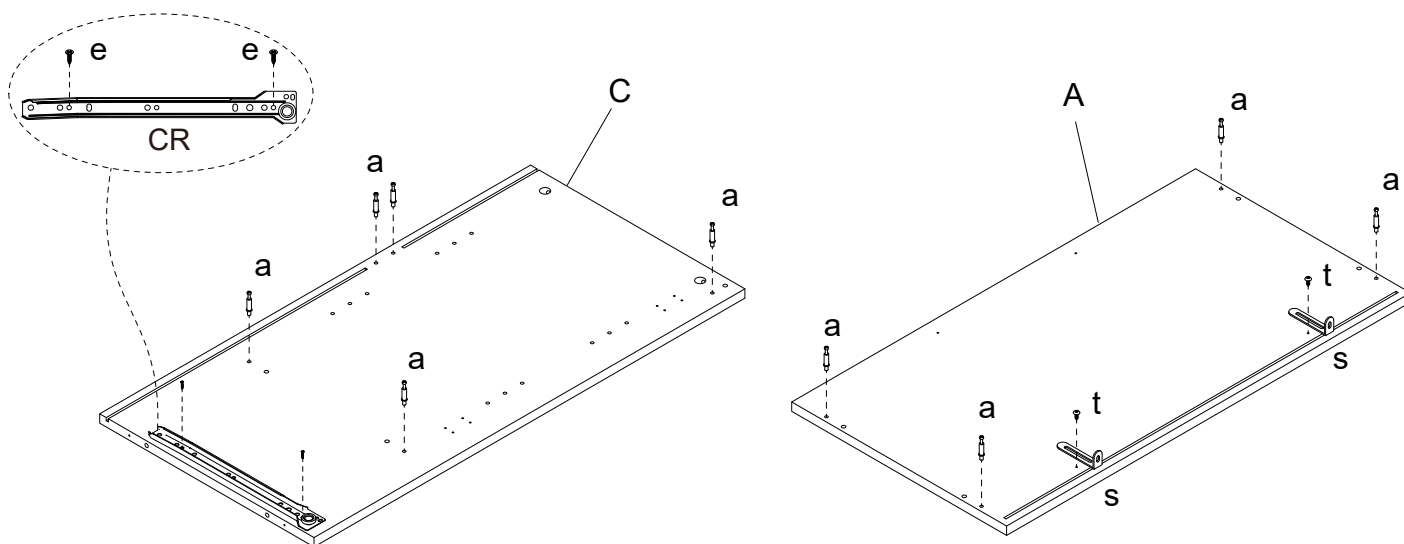


JOAN WOVEN CABINET


Assembly Instructions

URBAN OUTFITTERS

STEP 3

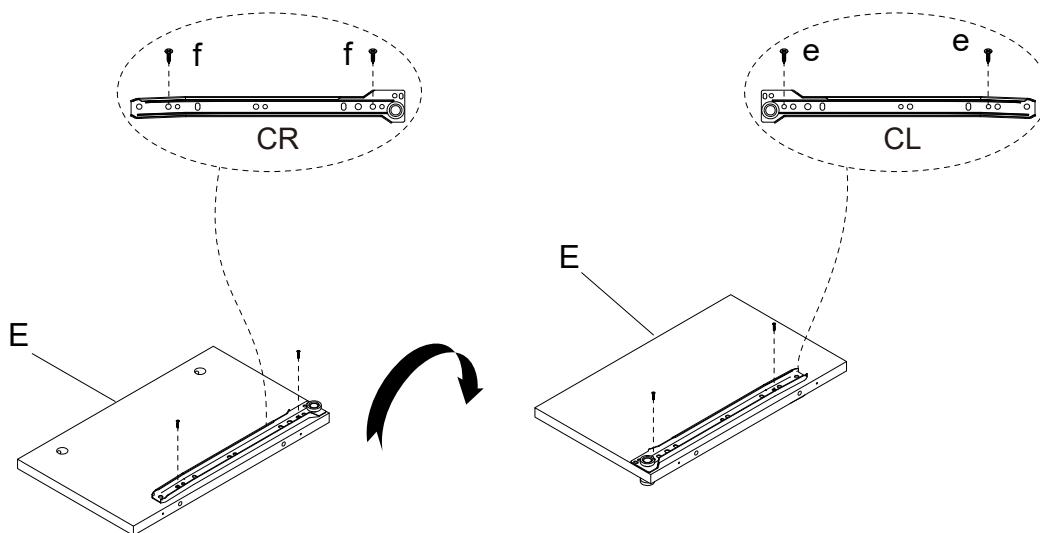

STEP 4

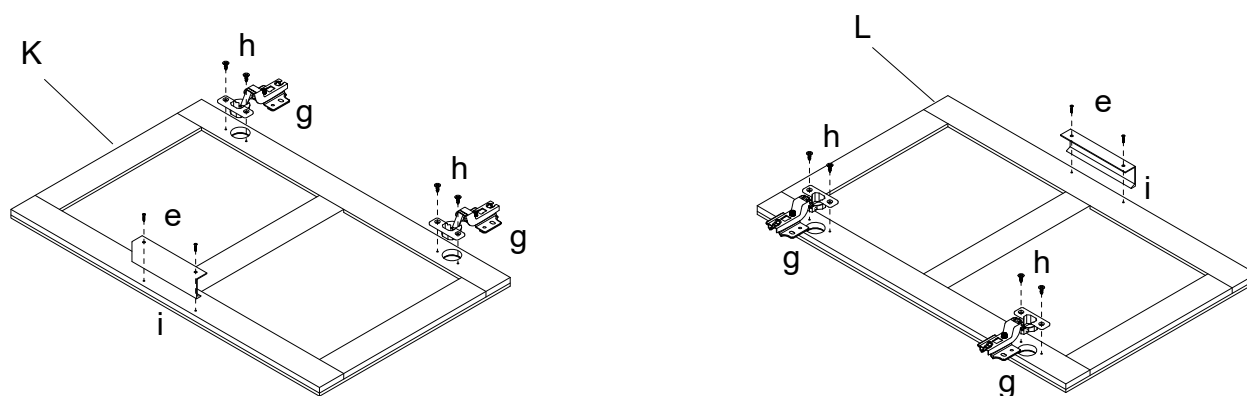


JOAN WOVEN CABINET


URBAN OUTFITTERS

Assembly Instructions

STEP 5

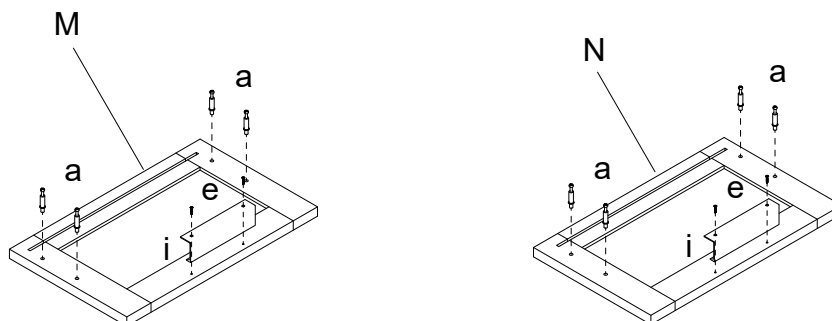

STEP 6

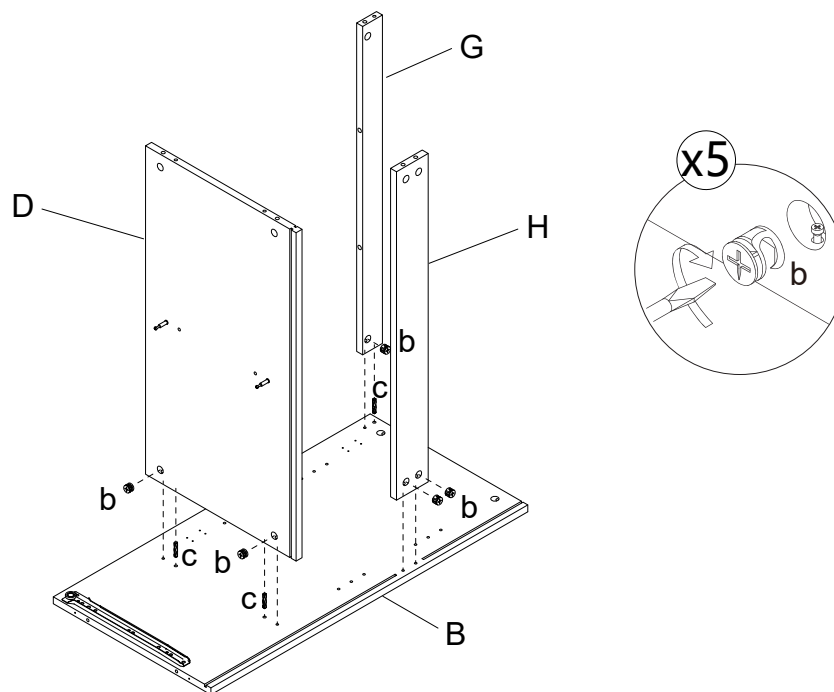


JOAN WOVEN CABINET



URBAN OUTFITTERS

Assembly Instructions

STEP 7

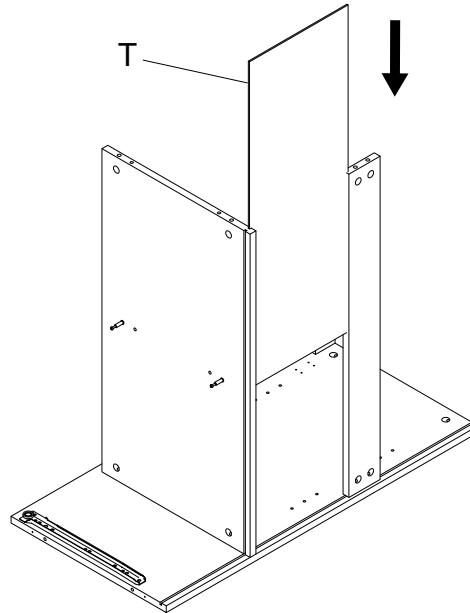

STEP 8

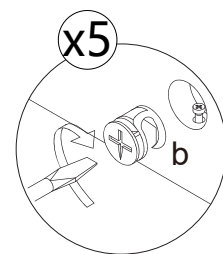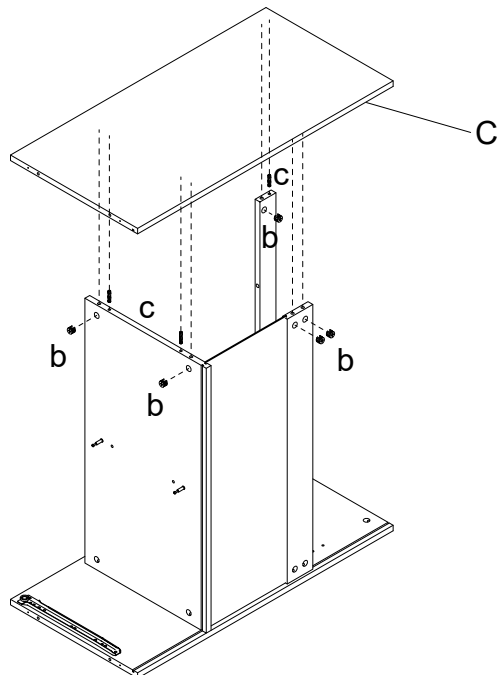


JOAN WOVEN CABINET


URBAN OUTFITTERS

Assembly Instructions

STEP 9

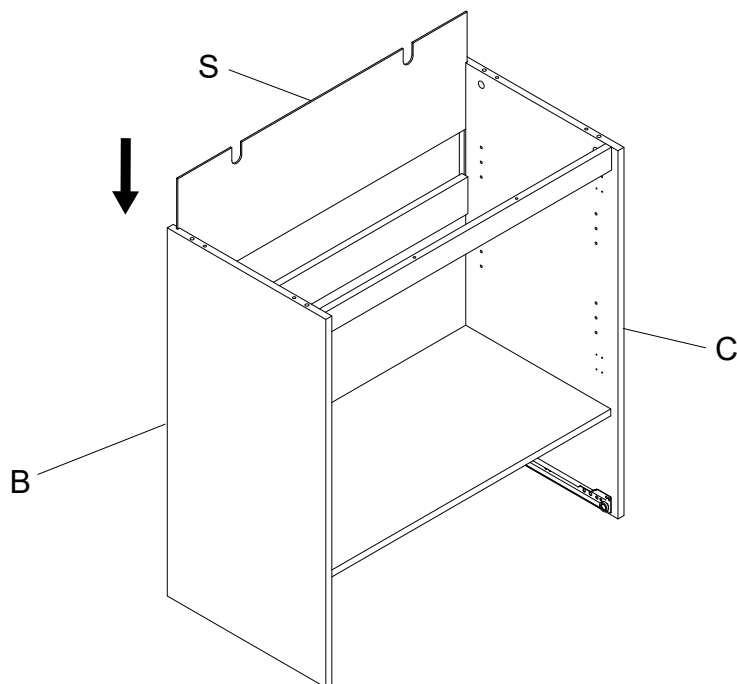

STEP 10

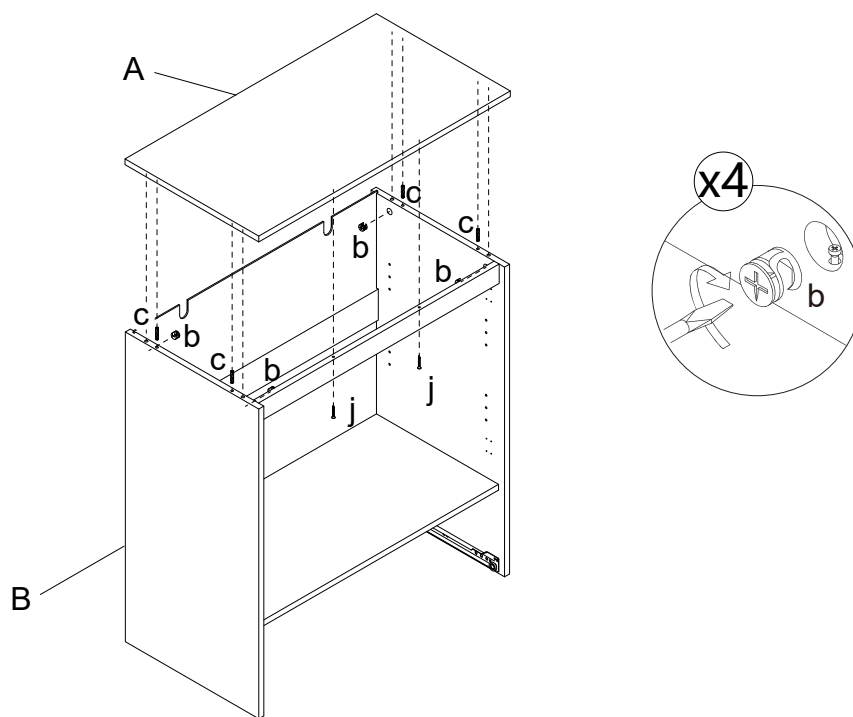


JOAN WOVEN CABINET


URBAN OUTFITTERS

Assembly Instructions

STEP 11

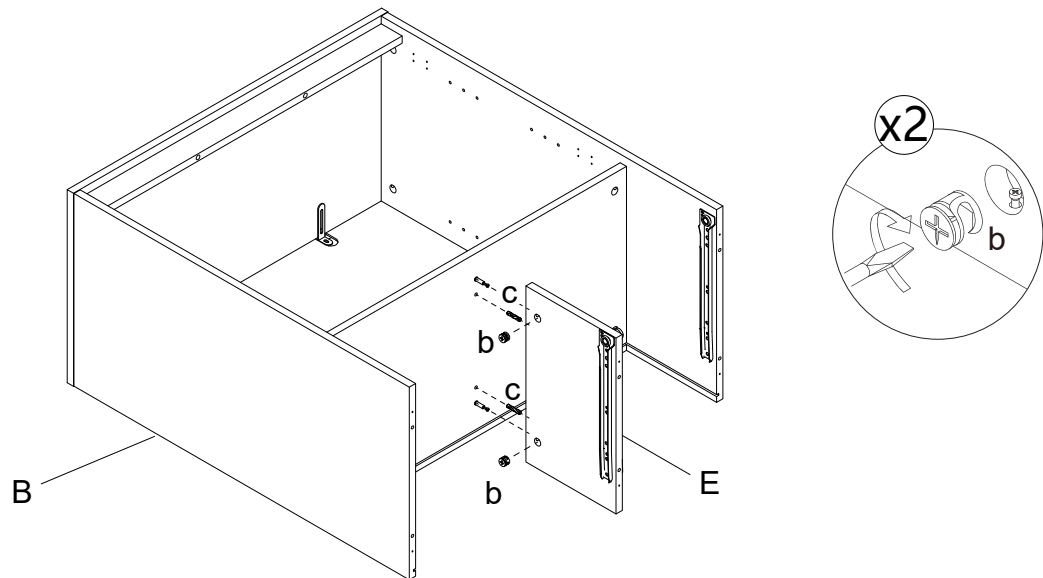

STEP 12

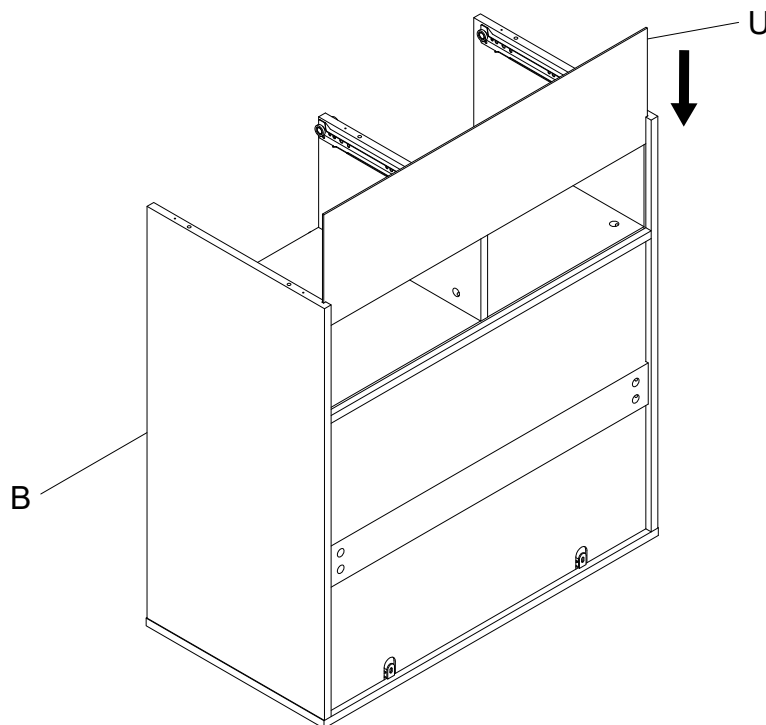


JOAN WOVEN CABINET


URBAN OUTFITTERS

Assembly Instructions

STEP 13

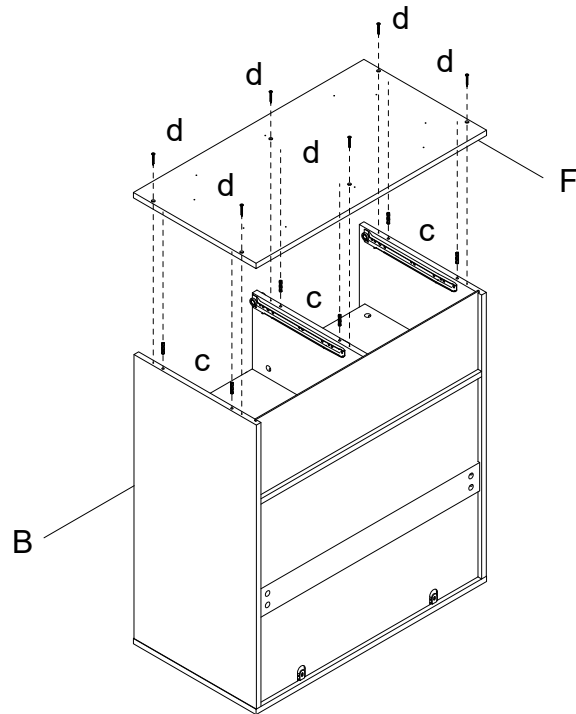

STEP 14

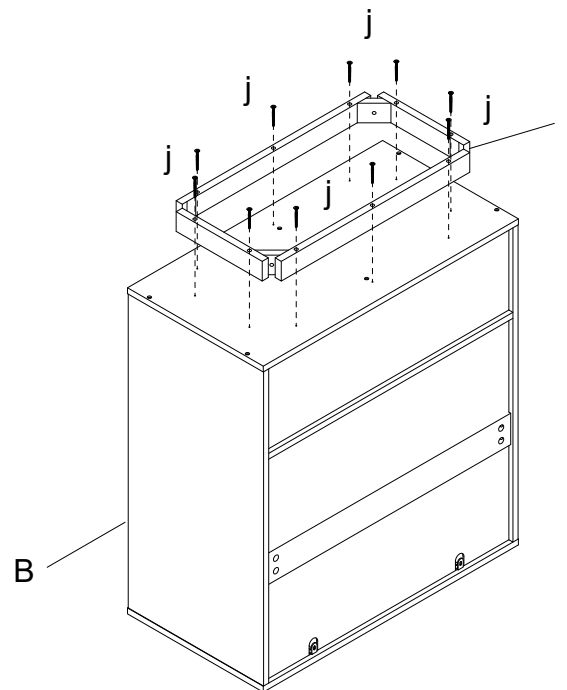


JOAN WOVEN CABINET


URBAN OUTFITTERS

Assembly Instructions

STEP 15

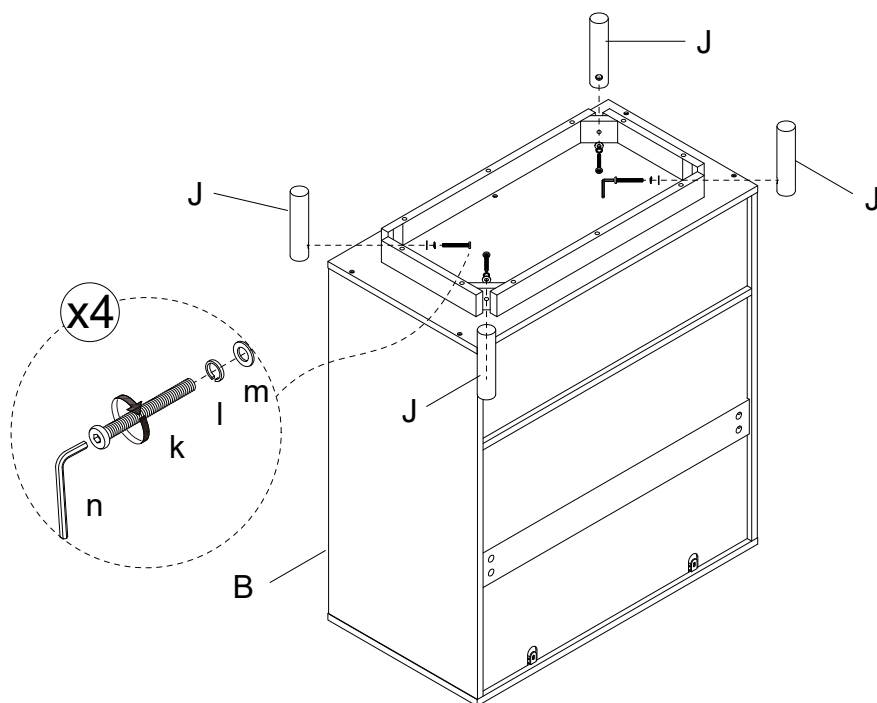

STEP 16

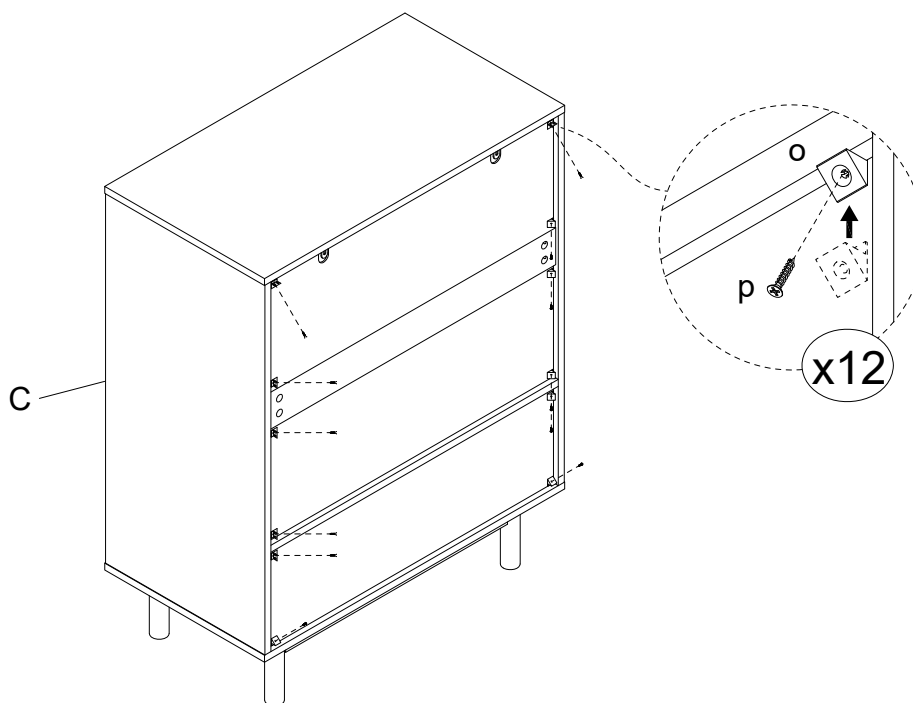


JOAN WOVEN CABINET


URBAN OUTFITTERS

Assembly Instructions

STEP 17

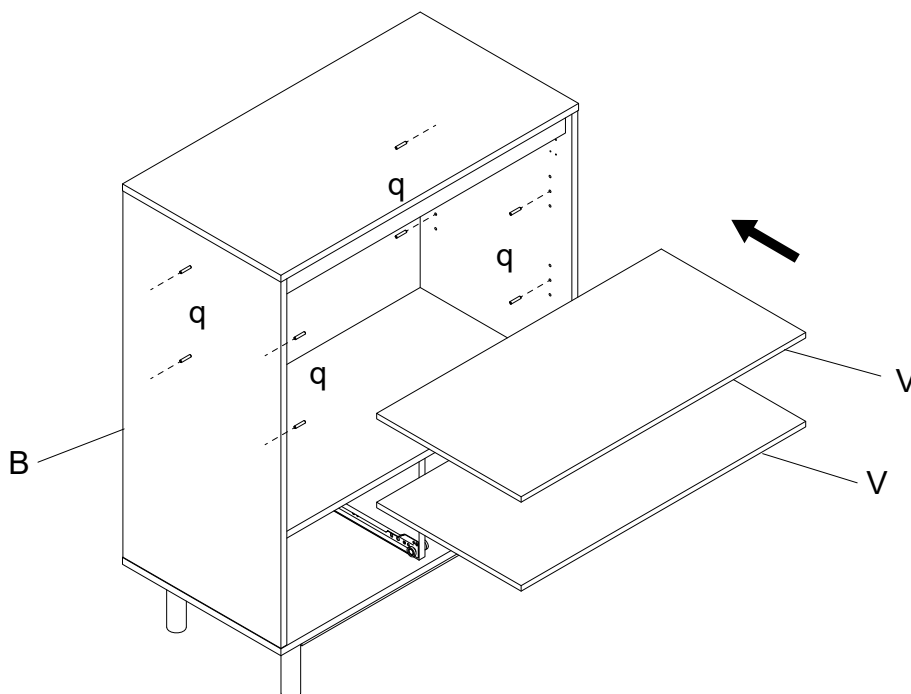

STEP 18

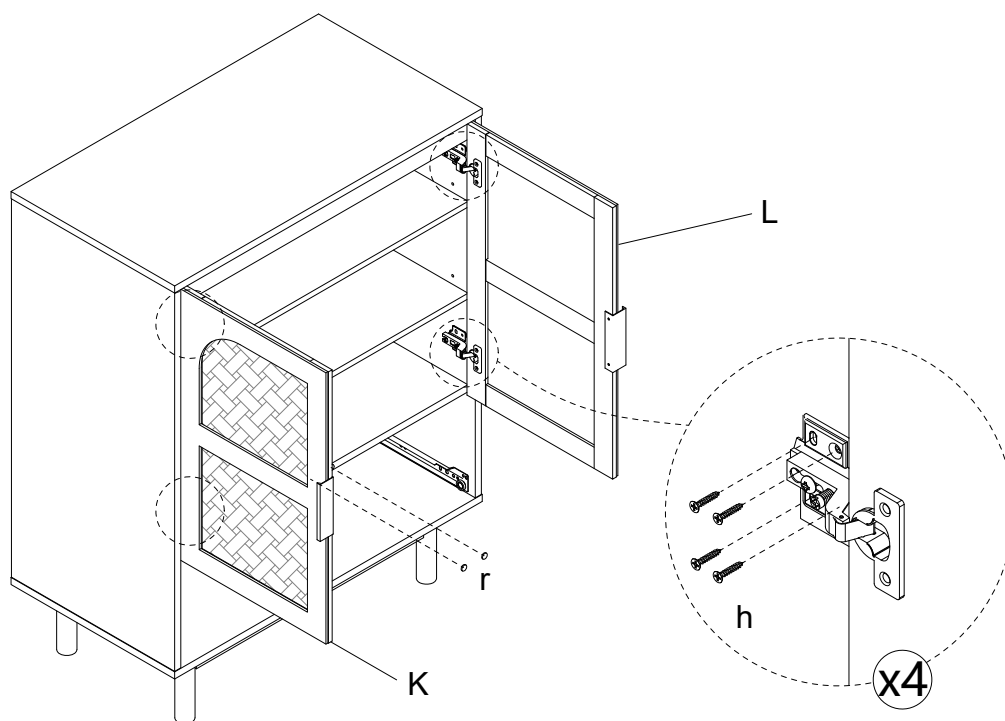


JOAN WOVEN CABINET


URBAN OUTFITTERS

Assembly Instructions

STEP 19

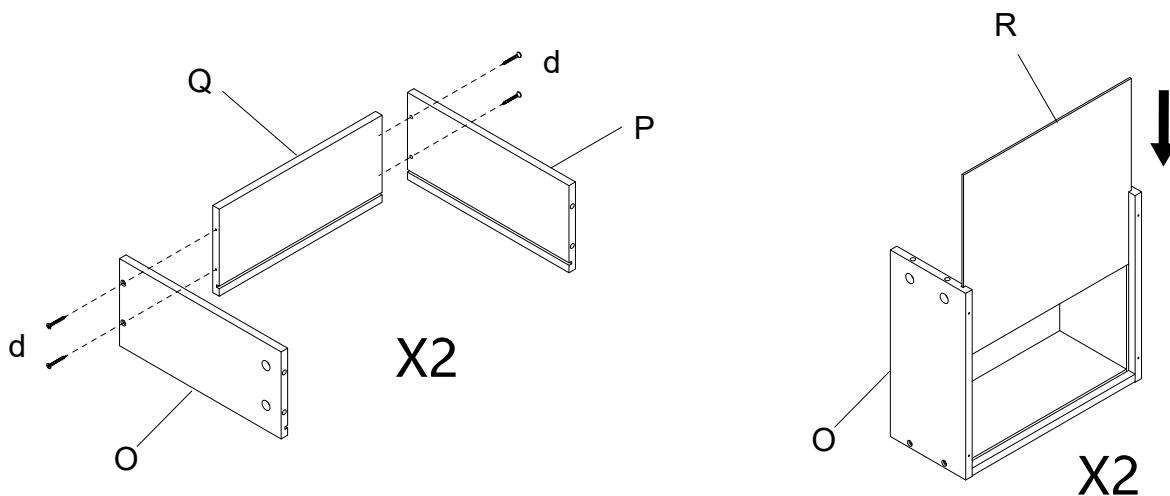

STEP 20

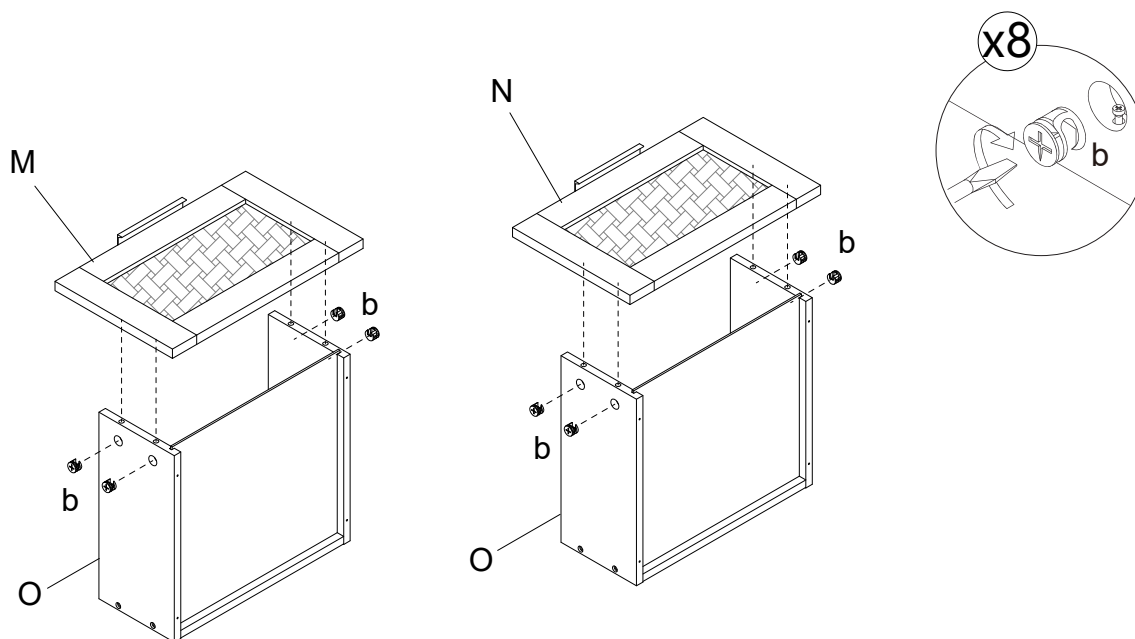


JOAN WOVEN CABINET

URBAN OUTFITTERS

Assembly Instructions

STEP 21

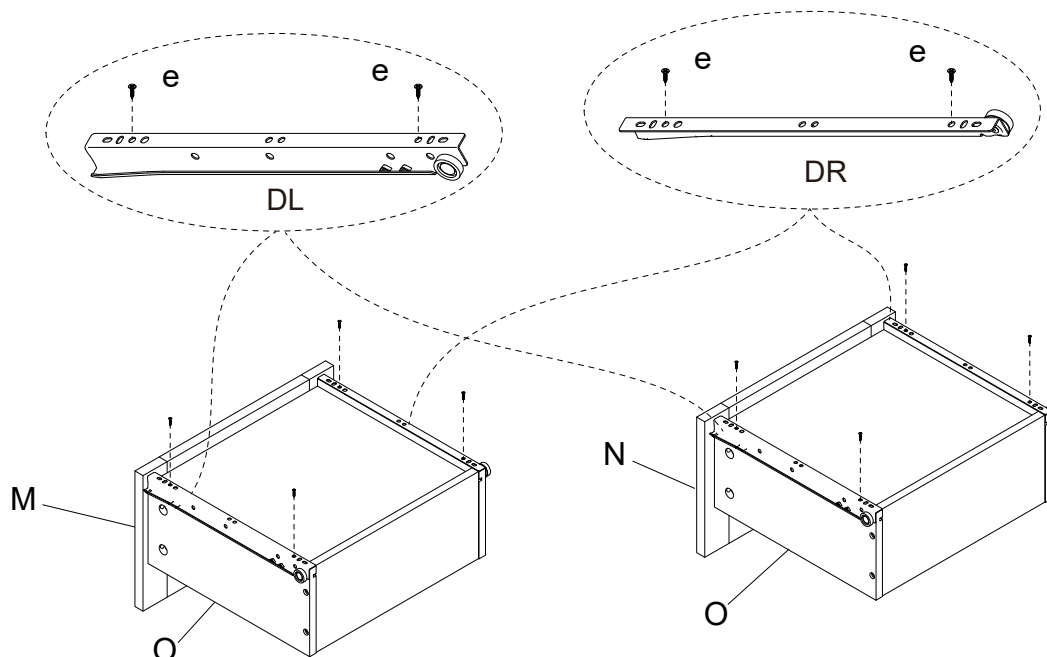

STEP 22

