

BODEN CHROME CHAIR

URBAN OUTFITTERS

Assembly Instructions


NO ADDITIONAL TOOLS REQUIRED

WARNINGS:


Do not discard packing materials and the carton until assembly is complete.
Ensure all parts are present prior to assembly.
Contact customer service immediately if any parts are missing.
Assemble all parts on a clean, smooth surface.

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight.
Blot spills with a clean, white cloth; do not rub.
Do not use harsh chemicals.
Before cleaning any part, test a small spot in a hidden area.
Do not place over heat or air conditioning vents.
Do not over-tighten the parts.
The parts may loosen after initial use; re-tighten as necessary.

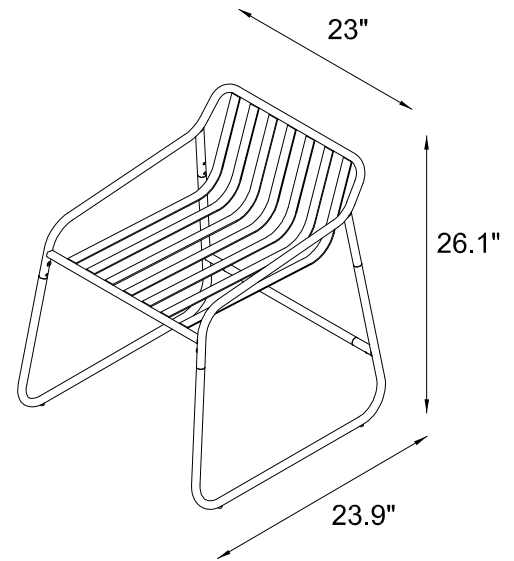


PARTS INCLUDED

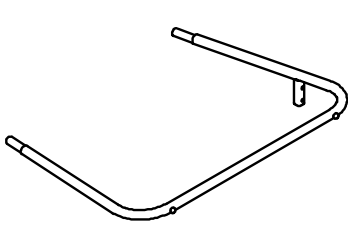


A-R) Right Frame

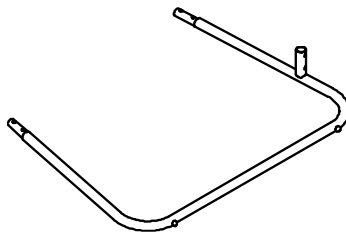

A-L) Left Frame



B) Cross Rail

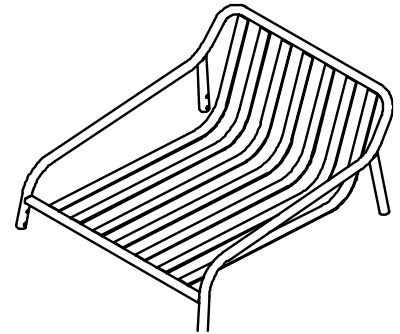

C) Metal Seat



D) Bolt
[M6x10mm] x12




E) Allen Key

Assembly Instructions

STEP 1

Insert cross rail (B) into left frame (A-L) and right frame (A-R) aligning the holes in each. Insert bolts (D) and partially tighten with Allen key (E). Flip the partially assembled frame upright.

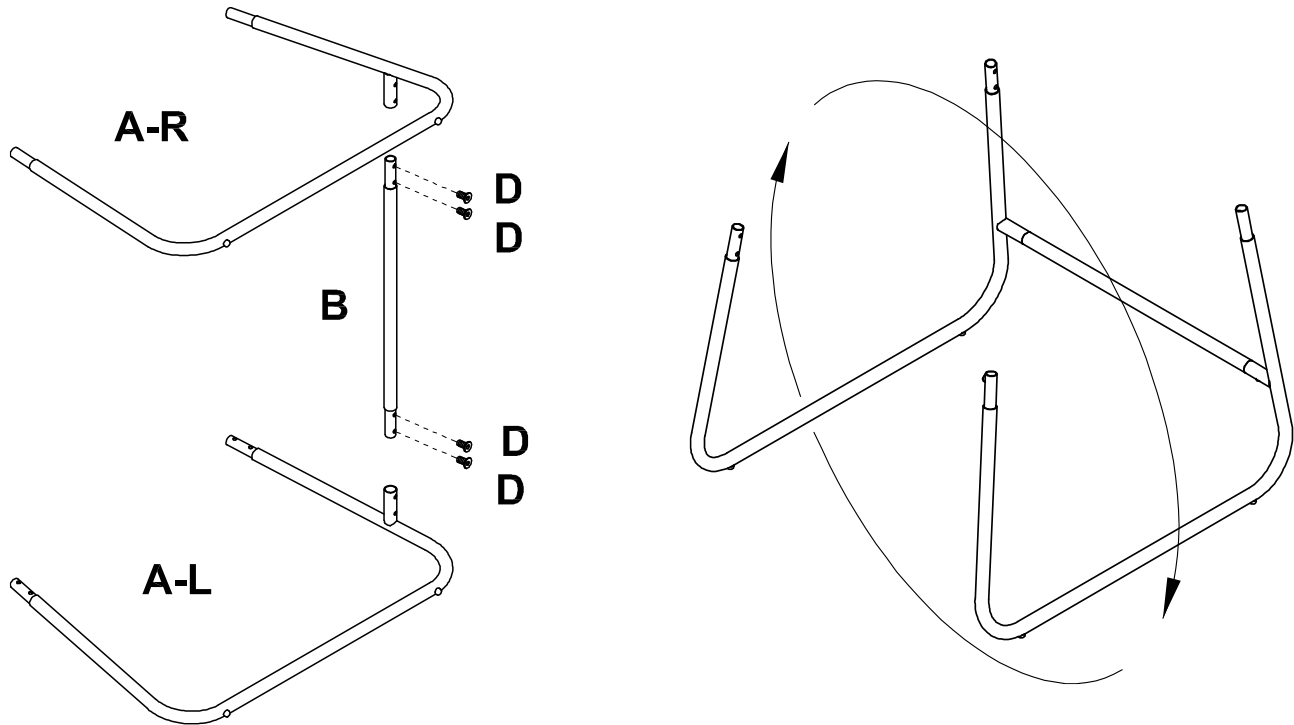

STEP 2

Insert the assembled frame into the metal seat (C). Insert bolts (D) and partially tighten with Allen key (E). Once all bolts are inserted and partially tightened, fully tighten the bolts.

