

BODEN CHROME PLATFORM - QUEEN

Assembly Instructions

URBAN OUTFITTERS


NO ADDITIONAL TOOLS REQUIRED

WARNINGS:


At least two people recommended for assembly.
Do not throw away packing materials and carton until after assembly.
Ensure all parts are present prior to assembly.
Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.
Do not place overheat or air conditioning vents.
Adjust levelers so that the furniture sits flat on uneven floors.
Blot spills with a clean white cloth, do not rub.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.

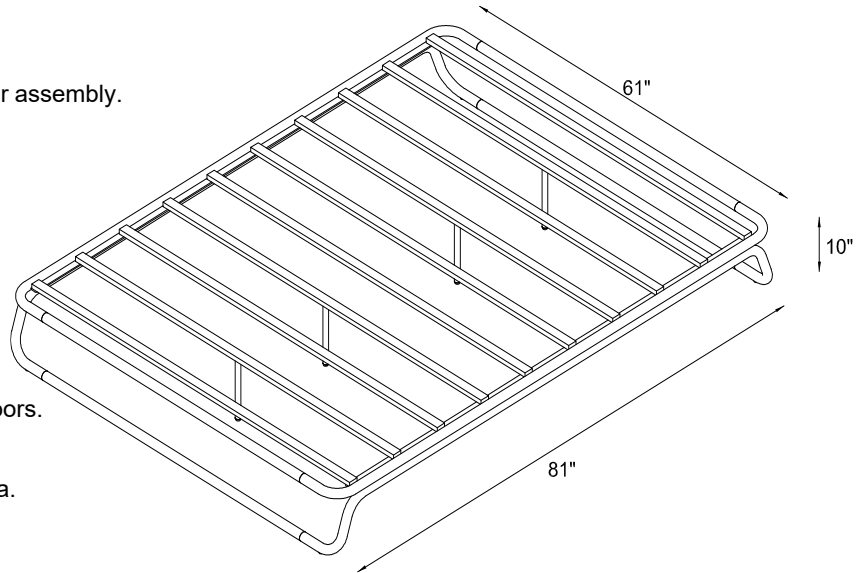


PARTS INCLUDED

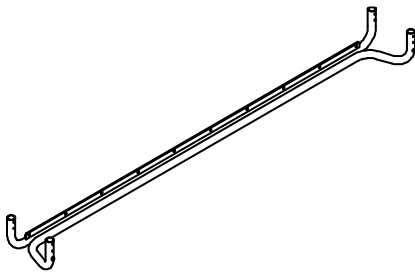

A) Side Rails x2



B) End Rails x4




C) Post Slats x 4



D) Slats x 6



E) Bolt
[M6x10mm] x16



F) Bolt
[M6x15mm] x20



G) Adjustable levelers x 4



H) Allen Key


BODEN CHROME PLATFORM - QUEEN

Assembly Instructions

URBAN OUTFITTERS

STEP 1

Lay down all the parts onto clean carpet or cardboard for assembly. With help, align Side Rails (A) with End Rails (B). Insert Bolts (E) and partially tighten with Allen Key (H). Once all bolts are inserted and partially tightened, fully tighten the bolts.

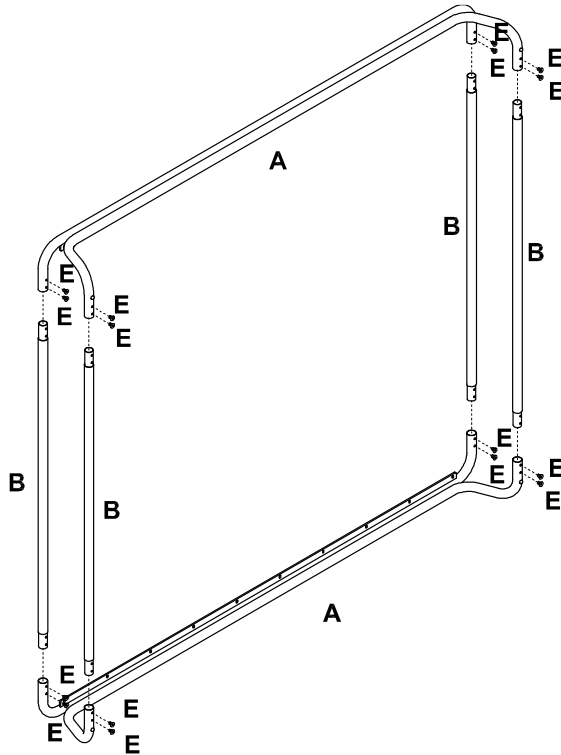

STEP 2

Locate Post Slats (C) and screw Levelers (G) into the bottom of the Post. One at a time, align Post Slats (C) to the ends and center of End Rails (B) and insert Bolts (F). Partially tighten Bolts (F) with Allen Key (H). Align Slats (D) with the rest of the holes in End Rails (B), as shown. Insert Bolts (F) and partially tighten with Allen Key (H). Once all bolts are inserted and partially tightened, fully tighten the bolts. With help, flip the bed upright

