

Amelia Bed

URBAN OUTFITTERS

Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED: N/A

WARNINGS:

Do not throw away packing materials and carton until after assembly.

Assemble all parts on a clean smooth surface.

Do not drag the bed while moving, lift with help.

Do not over tighten bolts.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.

Do not place over heat or air conditioning vents.


Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills do not rub, with a clean white cloth.


Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.


You may need to re-tighten all bolts after initial use.

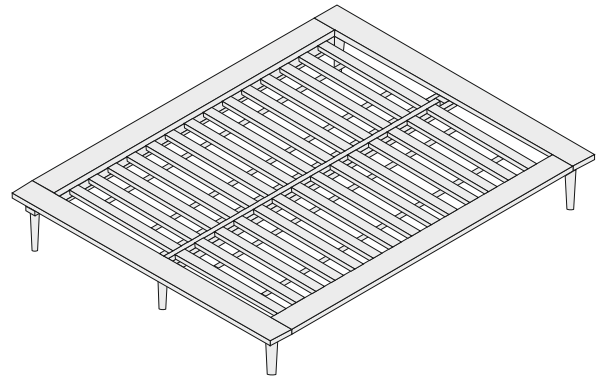


PARTS INCLUDED:

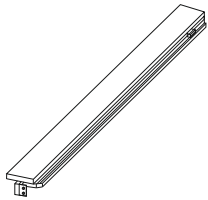

(1) Side Rails x2

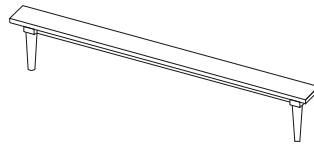


(2) Head/Foot Boards x2

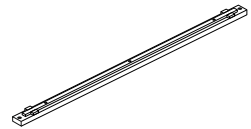


(3) Mid Rail x1




(4) Center Legs x3

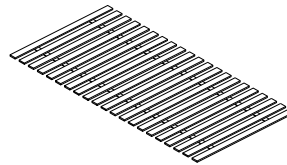


(5) Slats x2




(A) Allen Bolt
[8x50mm] x4



(B) Allen Bolt
[8x60mm] x3



(C) Allen Bolt
[8x25mm] x8




(D) Washer
[8.5 mm] x15



(E) Allen Key
x1




(F) Spring Washer
[8.5 mm] x7

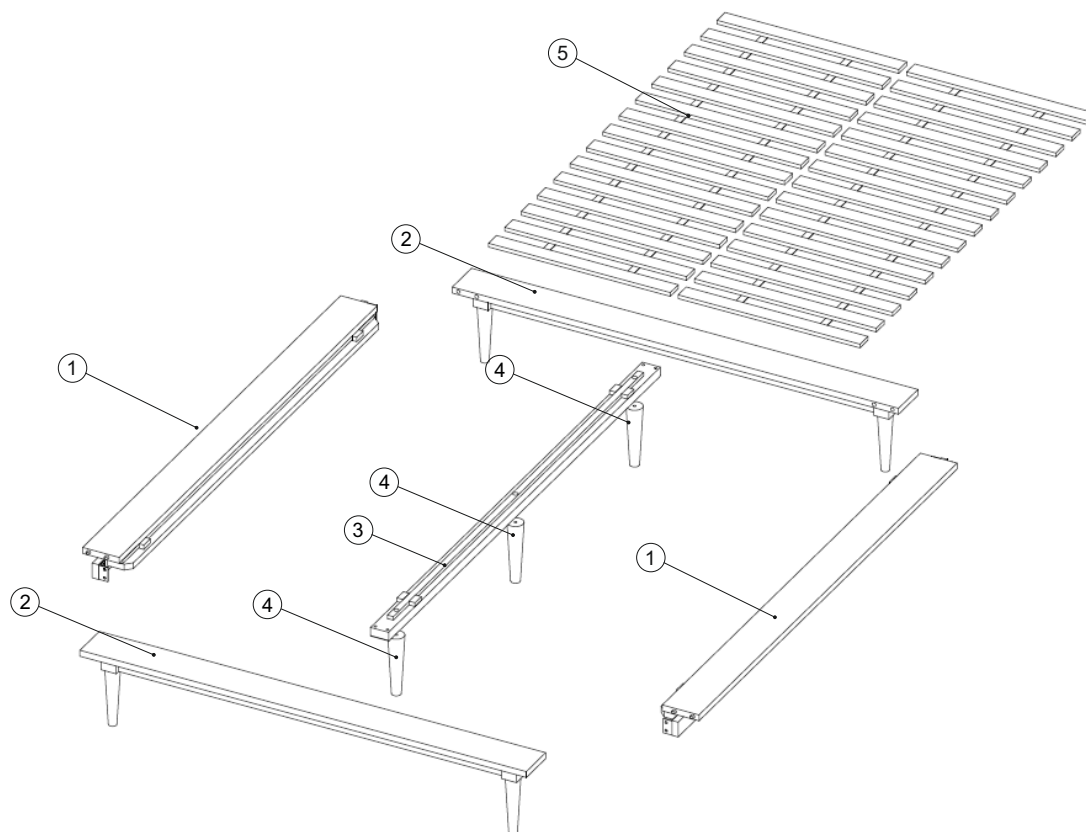

STEP 1


Place the head-board (2) and side rail (1) upside down and align the matching holes for wooden dowel pins. Insert the bolts (C) and washers (D) as shown and partially tighten the bolts with the help of Allen key (E). Do not over tighten.

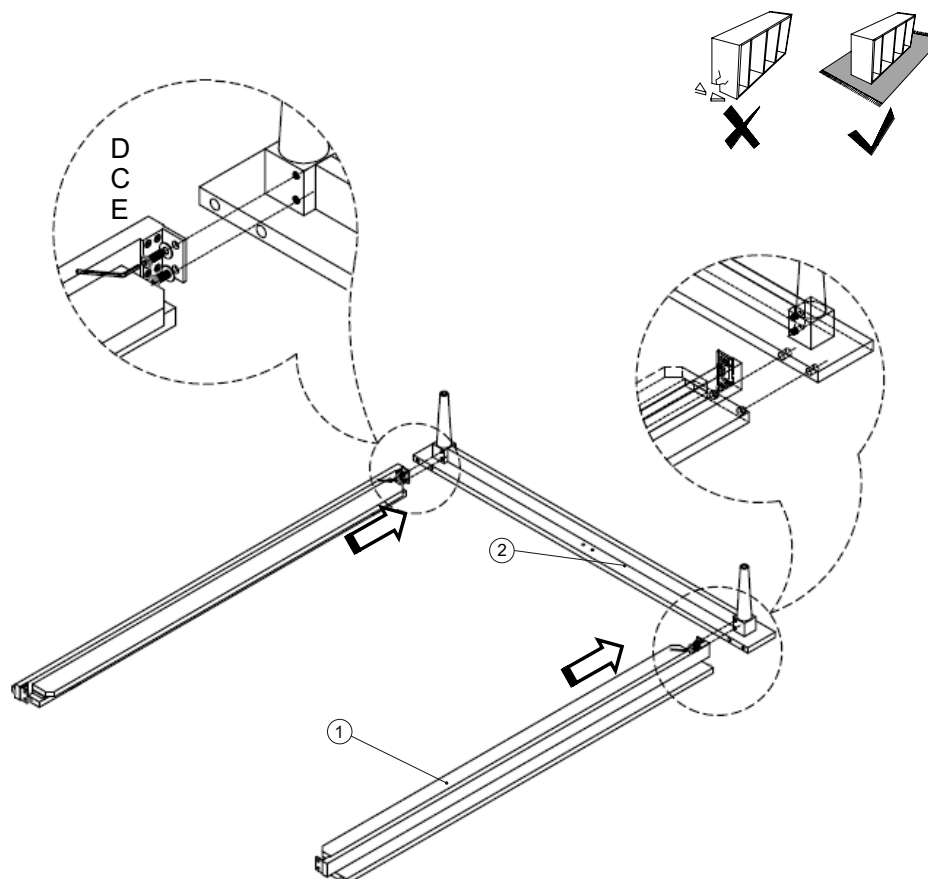

Assembly Instructions


STEP 2

Place the Mid Rail (3) upside down aligning the matching holes as shown and insert the bolts A) and washers (D). Partially tighten with Allen key (E). Next, align the foot board (2) as shown and repeat step 1 and the first half of this step to attach. Once all bolts are inserted and partially tightened, tighten all bolts fully. Do not over tighten.

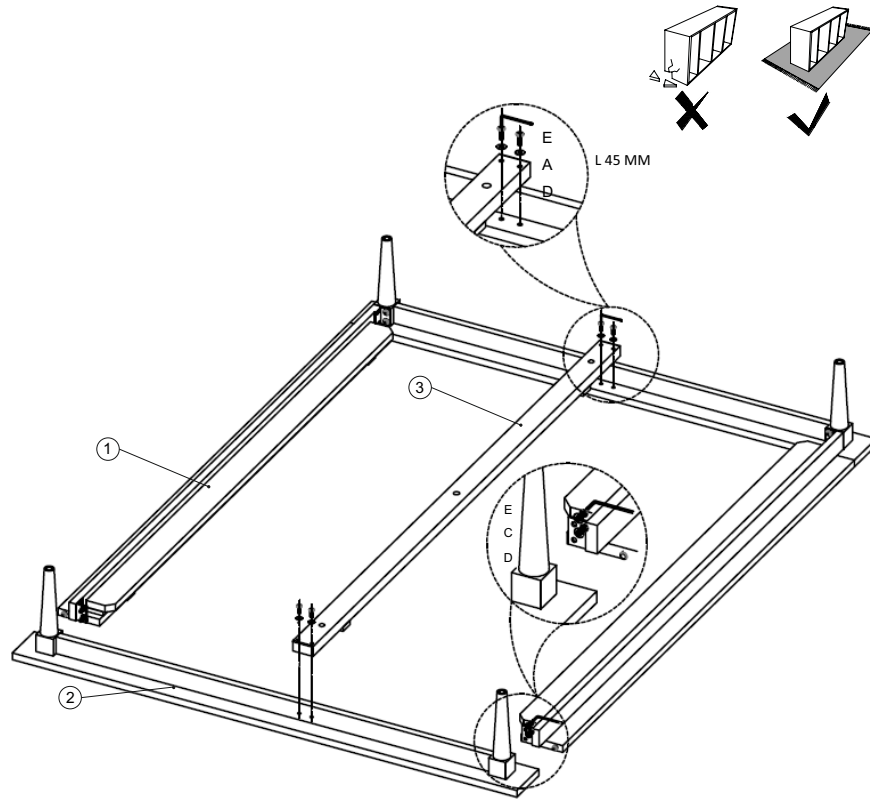


STEP 3

With help, flip the partially assembled bed and align the legs (4) with the holes in mid rail (3). Insert the bolts (B) washers (D) and split washers (K) and fully tighten with the help of Allen Key (E). Do not over tighten.

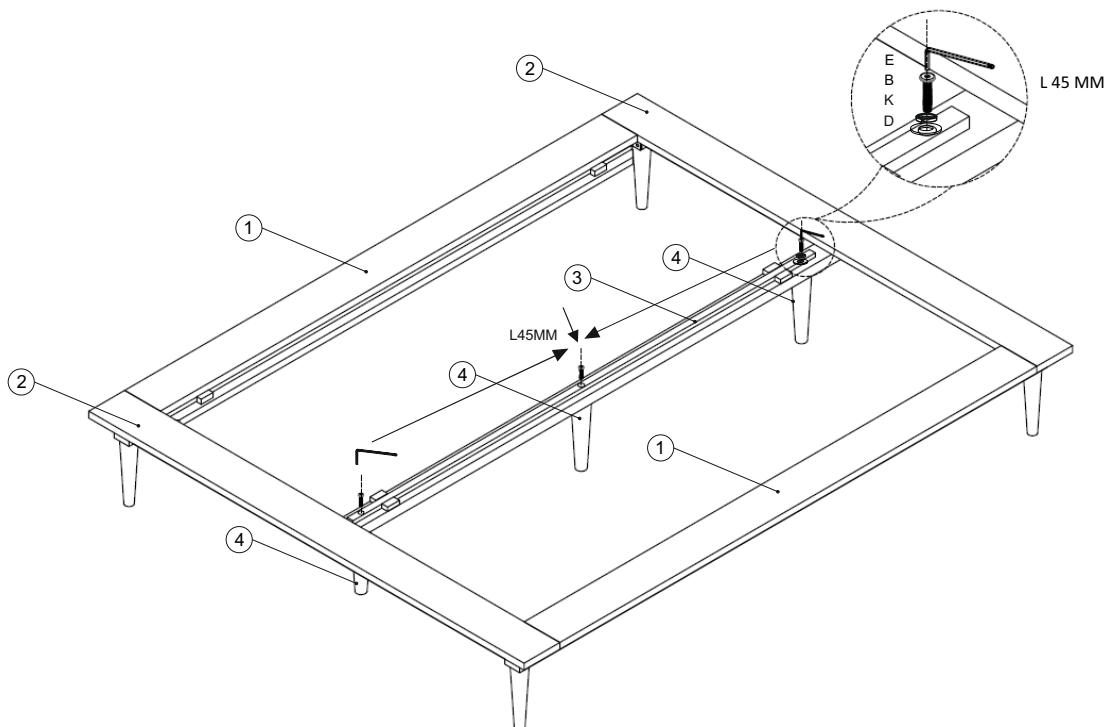

STEP 4

Make sure your bed is fully assembled and all bolts are tight. With help unroll the slats onto a clean smooth surface. Make sure that fabric strips are facing upward. With help carefully lay the roll slats into the bed frame. Center the slats into the bed frame. Locate the “Slat Blocks” mounted on the side rails and center rail. The last slat on the slat roll will lock over the slat blocks as shown below.

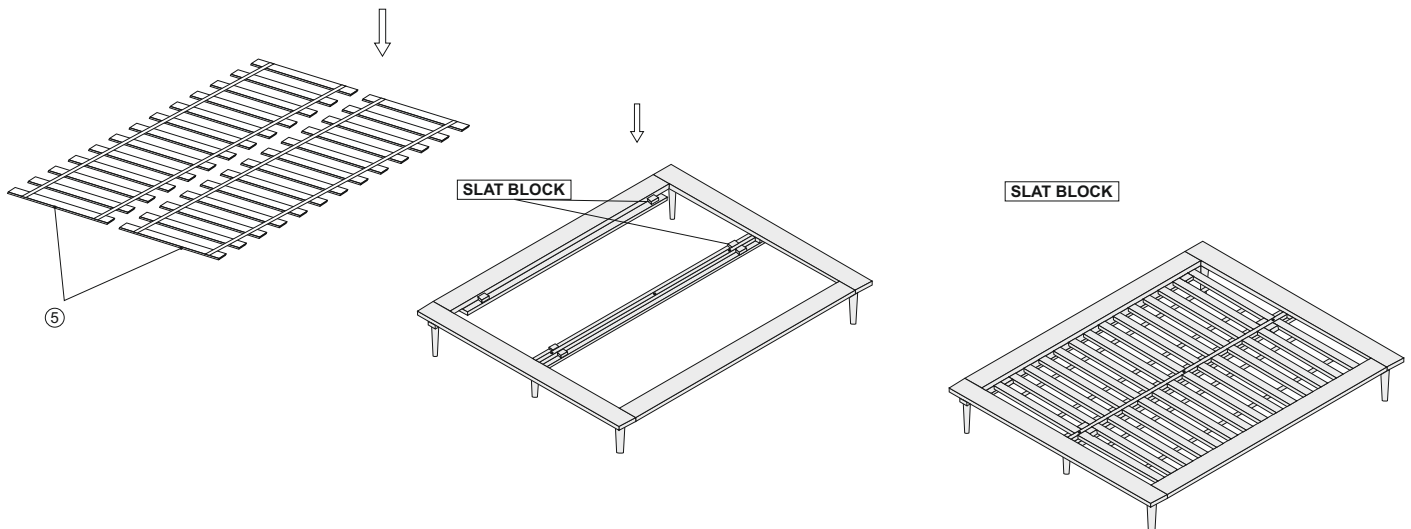

STEP 5

With the slats in place on top of the bed. Adjust the levelers to ensure that all feet make contact with the ground.

