URBAN OUTFITTERS

Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED:


(Not Applicable)

Do not throw away packing materials and carton until after assembly. Assemble all parts on a clean smooth surface.

CARE INSTRUCTION:

Avoid direct exposure to sunlight. Do not place overheat or air conditioning vents. Adjust levelers so that the furniture sits flat on uneven floors. Blot spills do not rub, with a clean white cloth. Do not use harsh chemicals. Before cleaning any part test a small spot in a hidden area.


You may need to re-tighten all bolts after initial use.

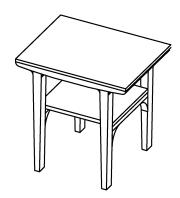

PARTS INCLUDED



(A)TOP x1



(B)SHELF x1



(C)LEGS x2



(D)ALLEN BOLT [M6 x 30mm] x12





(E)ALLEN KEY [4mm] x1

Assembly Instructions

STEP 1


Lay the table top (A) on its back. Align the holes on legs (C) to the holes in the side of the table top (A). Insert bolts (D) into into the table base. Tighten the bolts (D) with allen key (E).

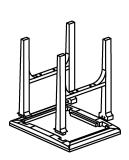


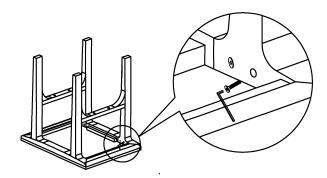

STEP 2

Align the holes in shelf (B) with the holes in legs (C). Insert bolts the bolts (D) through the table base into the shelves. Tighten the bolts (D) with allen key (E).

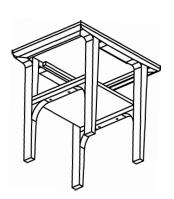

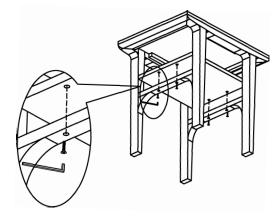

FINAL

