

MINIMALIST PLINTHE BED

Assembly Instructions

URBAN OUTFITTERS


TOOLS REQUIRED BUT NOT INCLUDED:

Phillips head screwdriver


Do not throw away packing materials and carton until after assembly.
Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight. Do not place over heat or air conditioning vents.
Adjust levelers so that the furniture sits flat on uneven floors.
Blot spills do not rub, with a clean white cloth.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.

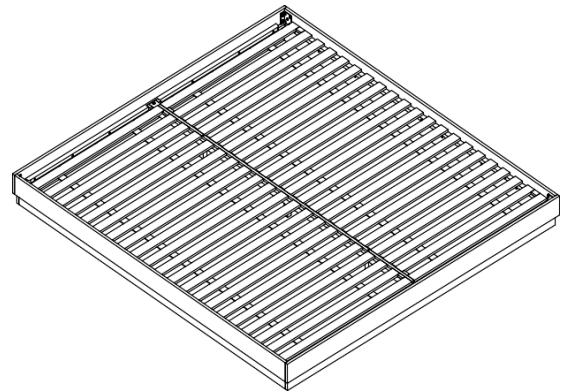

PARTS INCLUDED:

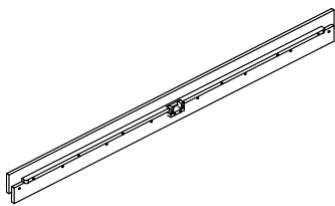

1) Head and Foot Rail x2
(Wrapped in green tape)

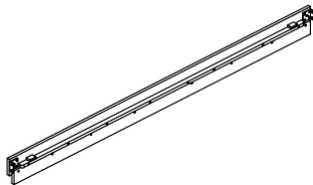


2) Side Rail x2
(Wrapped in green tape)




(3) Center Support x1 (Wrapped
in green tape)




(4) Center Leg 3x (Wrapped
in green tape)

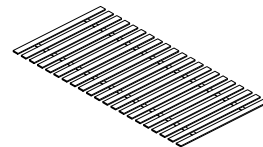


(5) Slats 2x
(Wrapped in green tape)




A) Allen Bolt
[8mm x 20mm] x8



B) Washer
[8mm x 17mm] x8

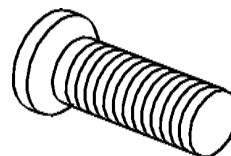

C) Allen Bolt
[8mm x 65mm] x5

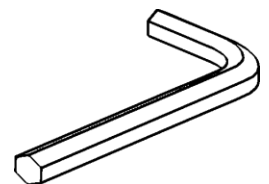


(D) Allen Key
[5mm] x1

MINIMALIST PLINTHE BED

Assembly Instructions

URBAN OUTFITTERS

EXPLODED & LABELED

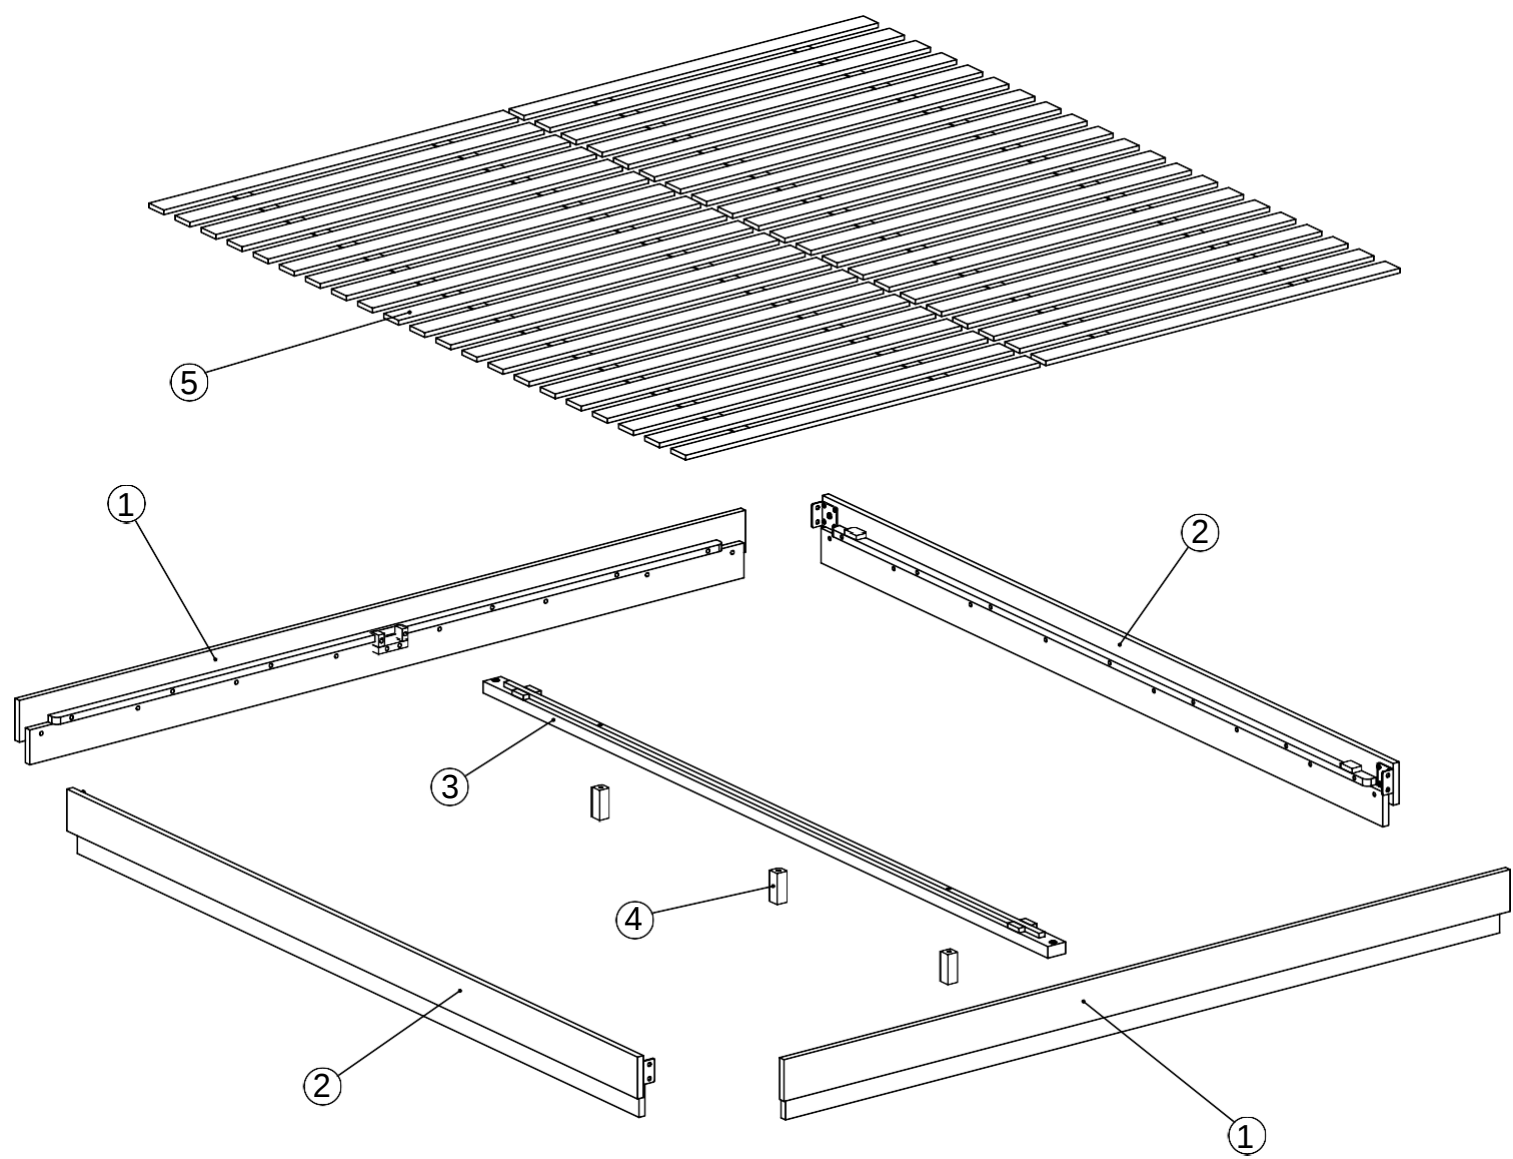

MINIMALIST PLINTHE BED


Assembly Instructions

URBAN OUTFITTERS

STEP 1

Place the head and foot rails (1) upright on a clean smooth surface such as carpet or cardboard. Place top front frame (1) into side framing (2) as shown in the sketch below. Insert Allen Bolts (A) with Washer (B) through frame then tighten with Allen key (E).

Note: Match the labels on components before assembly, e.g. Label A on Head and Foot Rail to Label A on Side Rail.

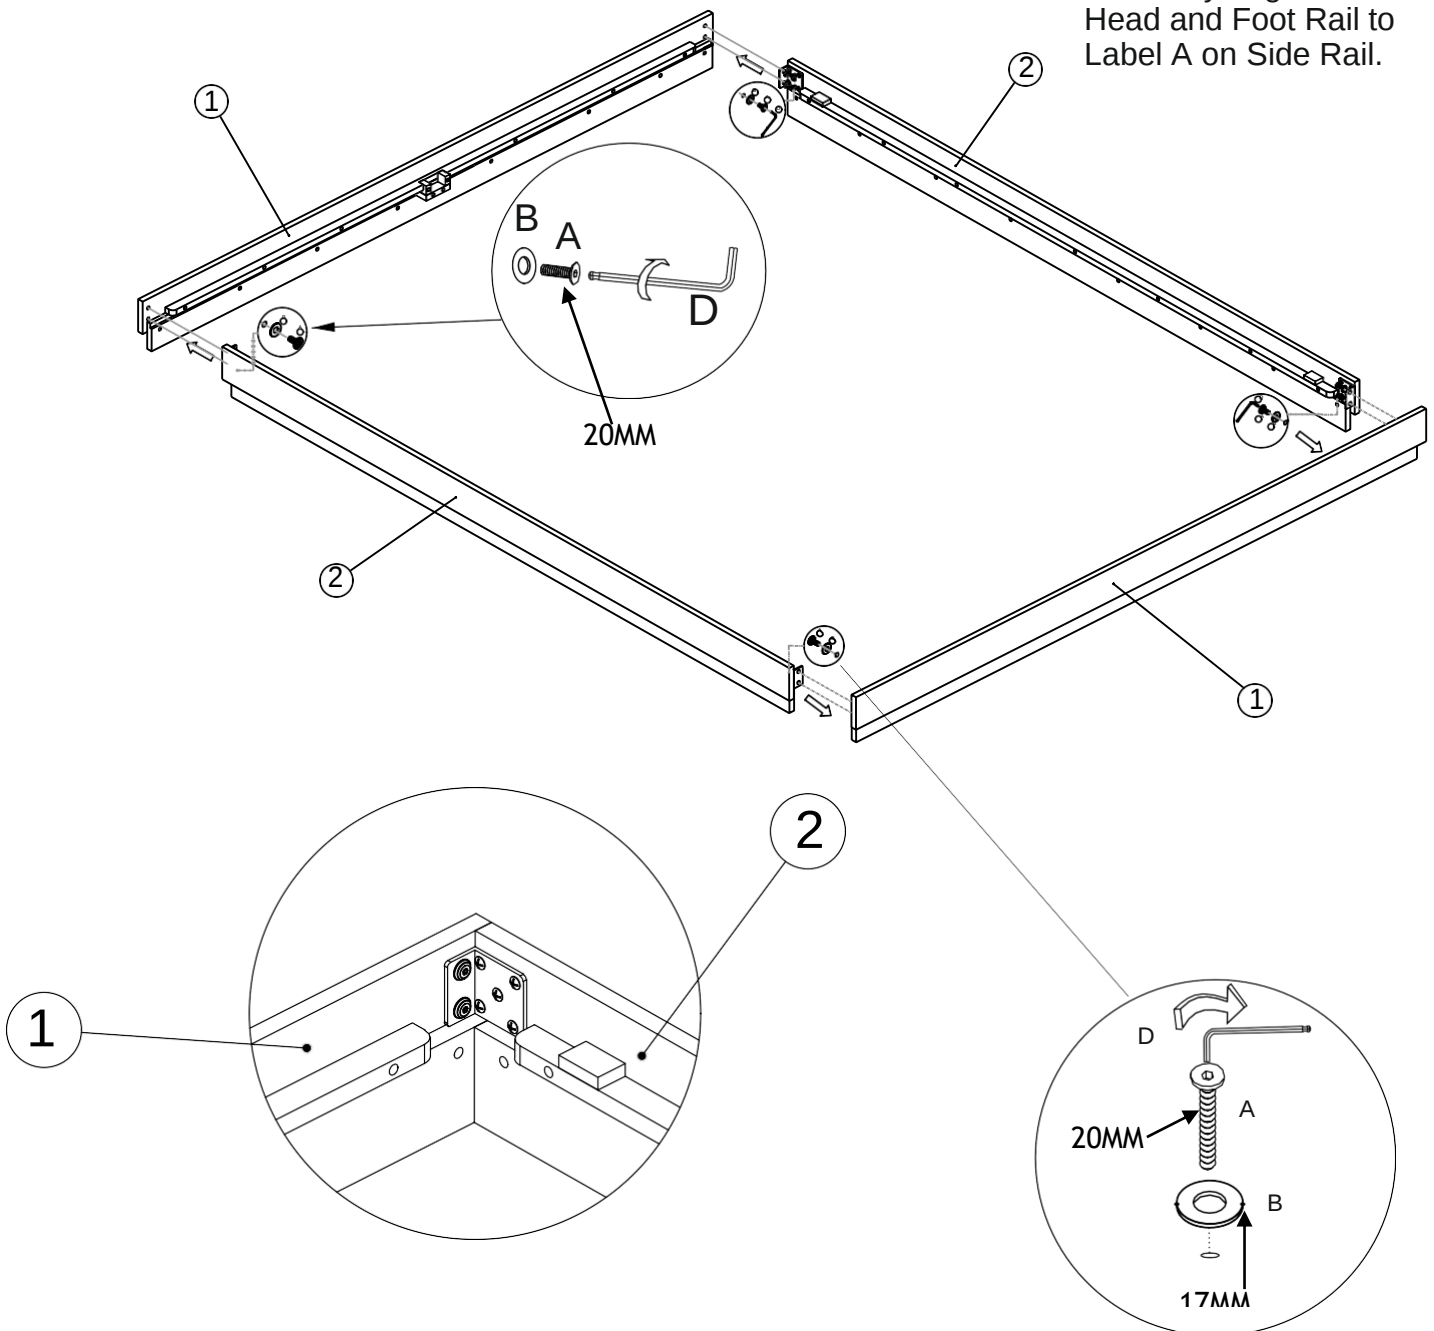


MINIMALIST PLINTHE BED

Assembly Instructions

URBAN OUTFITTERS

STEP 2

Align the Center Rail (3) as shown. Insert Bolt (D). Tighten with supplied Allen Key (D). Align Center Legs (4) and insert Bolt (D). Tighten with supplied Allen Key (D).

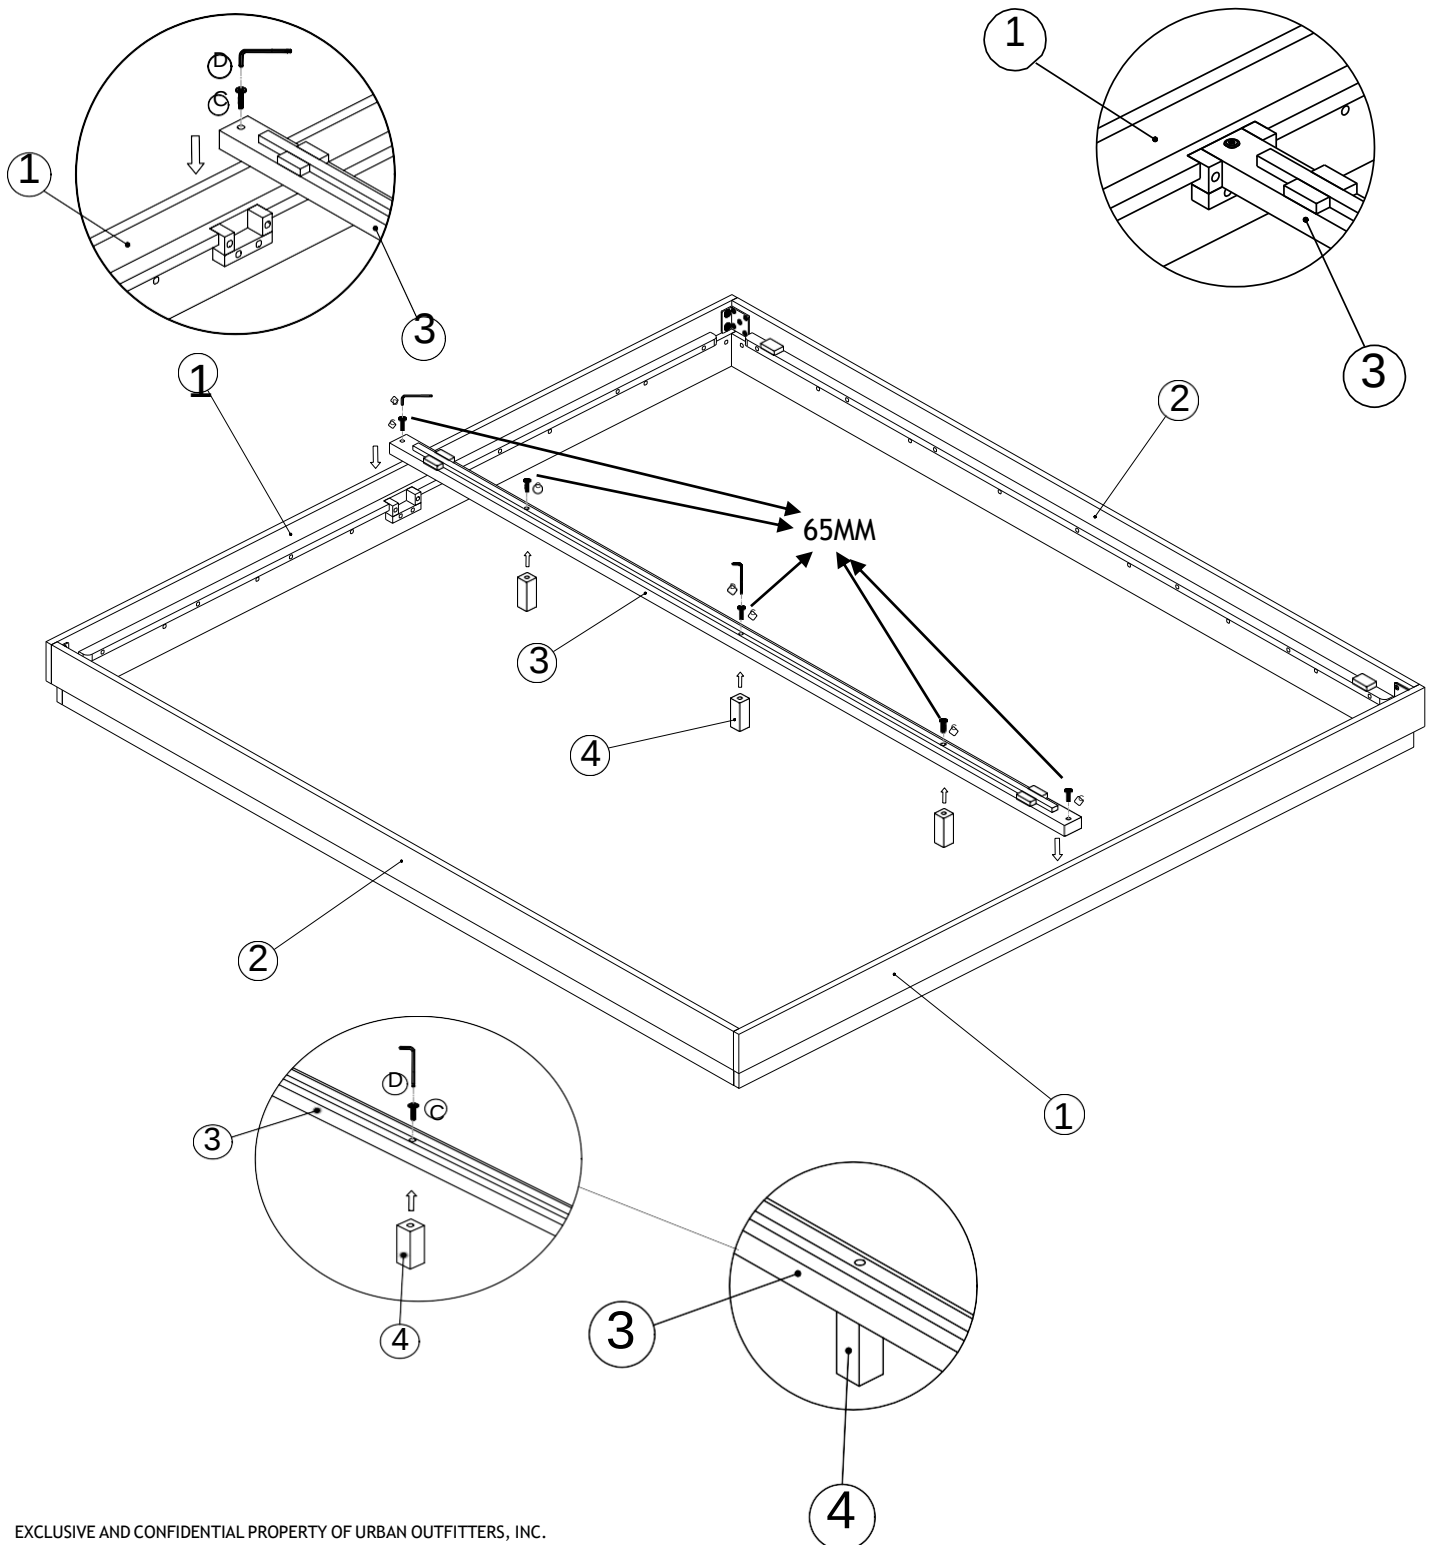

EXCLUSIVE AND CONFIDENTIAL PROPERTY OF URBAN OUTFITTERS, INC.

© 2017 UO, Inc. All rights reserved, including all applicable copyright, design and patent rights.
Any unauthorized reproduction, adaptation, distribution or other infringement will be prosecuted.


MINIMALIST PLINTHE BED

Assembly Instructions

URBAN OUTFITTERS

STEP 3

Place the slat sets (5) on the assembled frame. The front and back slat should be positioned so that the wood blocks on either end of the side frame (2) and center frame (3) fit inside the slat set - this will keep the slat sets in position.

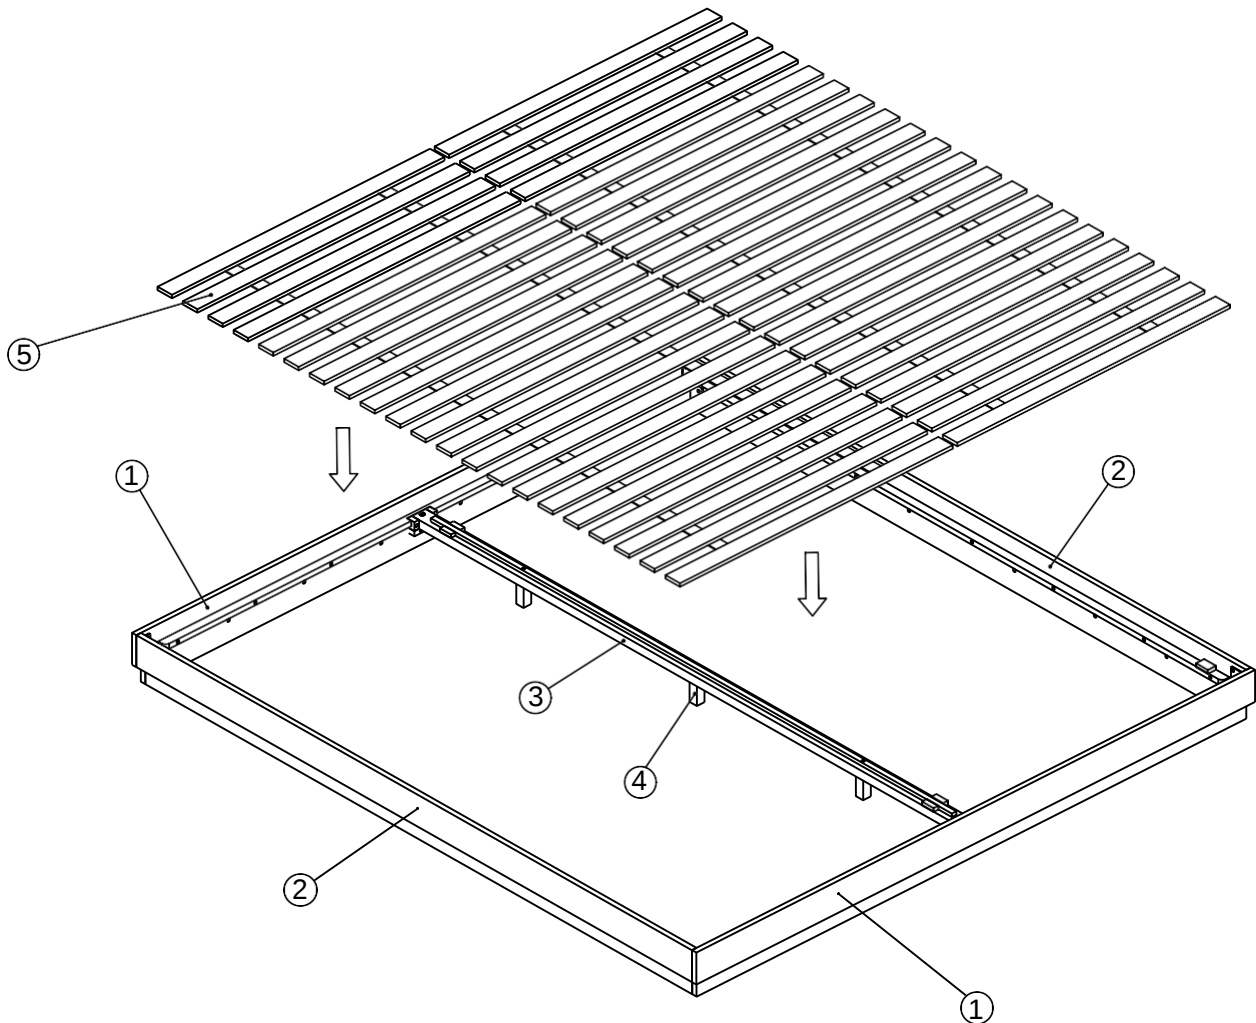

MINIMALIST PLINTHE BED

Assembly Instructions

URBAN OUTFITTERS

ASSEMBLED

